

SRB – ENG



**Kotao na
BIOMASU
Heating boiler
BIOMASS
operated**

**SERIJE COMPACT
SERIES COMPACT**



INSTRUKCIJE / INSTRUCTION MANUAL

Montaža, korišćenje i održavanje kotla/ Assembly, use and maintenance of heating boiler

SADRŽAJ:

1. Važna upozorenja;
 - 1.1 Minimalna udaljenost od zapaljivih materijala;
2. Opis kotla COMPACT 25;
3. Montaža;
 - 3.1 Opšta upozorenja;
 - 3.2 Mere i uređaji bezbednosti kod kotla COMPACT 25;
 - 3.3 Kotlarnica;
 - 3.4 Priključak na dimnjak;
4. Presek kotla COMPACT 25 sa opisom elemenata;
5. Šema vezivanja automatike;
6. Tabela sa tehničkim podacima;
7. Hidraulična šema;
8. Start rada kotla COMPACT 25 i održavanje;
 - 8.1 Displej automatike;
 - 8.2 Kratko uputstvo za upotrebu automatike;
 - 8.3 Start rada kotla COMPACT 25;
 - 8.4 Greške prilikom startovanja i u toku rada kotla COMPACT 25;
 - 8.5 Održavanje i ispravljanje kotla COMPACT 25;
 - 8.6 Natpisna ploča;
 - 8.7 Izjave;
 - 8.8 Nalepnice;
 - 8.9 Proizvođač;
9. Garancija.

1. Važna upozorenja

OPŠTA UPOZORENJA

- Nakon uklonjenog pakovanja uveriti se u kompletnost isporuke, i u slu aju nedostataka, obratiti se prodavcu koji je prodao kotao.
- Kotao mora biti upotrebljen isklju ivo za namenu koju je predvideo proizvo a . Isklju uje se bilo kakva odgovornost od strane proizvo a a za štetu uzrokovanu osobama, životinjama ili stvarima, u slu aju grešaka pri montaži, regulaciji, održavanju ili nepravilnom koriš enju.
- U slu aju curenje vode isklju iti ure aj sa elektri nog napajanja, zatvoriti napajanje vodom i obavestiti ovlaš eni servis ili ovlaš enog montera.
- Ovo uputstvo je sastavni deo ure aja i mora se uvati sa pažnjom i mora **UVEK** pratiti ure aj i u slu aju promene vlasnika ili korisnika ili u slu aju priklju enja na drugu instalaciju. U slu aju ošte enja ili nestanka tražiti novi primerak od ovlaš enog prodavca.

VAŽNA UPOZORENJA

Podse amo da koriš enje ure aja na biomasu koji imaju kontakt sa elektri nom energijom i vodom zahtevaju poštovanje sigurnosnih mera i to:

- Zabranjeno je koriš enje kotla od strane dece i osoba sa ograni enim mogu nostima bez pratnje.
- Zabranjeno je koriš enje kotla na instalacijama sa radnim pritiskom ve im od **3 bara** i radnom temperaturom ve om od **110°C**.
- Zabranjeno je koriš enje lako zapaljivh goriva (alkohol, nafta).
- Zabranjeno je odlaganje lako zapaljivih materijala u blizini kotla i u blizini vrata za loženje. Pepeo se mora odlagati u zatvorene i nezapaljive spremnike.
- Zabranjeno je spaljivanje otpada i materijala ije sagorevanje prouzrokuje plamen ili opasnost od eksplozije (npr. plasti ne kese, piljevinu, ugljenu prašinu, blato itd.)
- Zabranjena je bilo kakva intervencija tehni kog lica (naro ito se to odnosi na zamenu greja a ili proveru ispravnosti nekog drugog el. ure aja...) ili iš enja, pre nego se kotao isklju i sa elektri nog napajanja i to izvla enjem uti nice iz glavnog mrežnog napajanja.
- Zabranjena je izmena sigurnosnih elemenata.
- Zabranjeno je zatvaranje ventilacionih otvora na prostoriji u kojoj se nalazi kotao. Ventilacioni otvori su neophodni za pravilno sagorevanje.
- Zabranjeno je izlaganje kotla atmosferskim neprilikama. Ovaj ure aj nije predvi en za spoljnu montažu.
- Zabranjeno je isklju ivanje ure aja ukoliko spoljna temperatura može da padne ispod nule po Celzijusu (opasnost od smrzavanja).

- Zabranjeno je stavljanje prstiju i drugih predmeta kroz otvore na spoljnim delovima oplata ure aji. Unutar oplata su elektro komponente i provodnici pod naponom kao i ure aji koji se mehani ki pokre u (motor reduktor i ventilator). Kontakt sa njima može da dovede do strujnog udara i mehani kih povreda.
- U slu aju intervencije na bilo kom elektro ure aju kotla, ceo ure aj isklju iti sa elektro instalacije i to tako što se izvadi uti nica iz mrežnog napajanja.
- Rad sa ure ajem kotla zabranjen je ljudima sa posebnim potrebama (uklju uju i i decu) kako fizi kim tako i mentalnim, osim uz nadzor staratelja i ljudi koji su odgovorni za njihova ponašanja.
- Deca moraju biti pod nadzorom staratelja kako se ne bi igrala sa ure ajem kotla.
- Ako je ošte ena strujna zaštita, mora biti zamenjena u samoj fabrici i servisirana od strane ovlaš enog servisera ili kvalifikovanih ljudi da bi se izbegao rizik od strujnog udara.

1.1 Minimalna udaljenost od zapaljivih materijala

- Obezbedite odgovaraju u udaljenost od zapaljivih materijala, ako je potrebno obezbediti zaštitu istih.
- Minimalna udaljenost od zapaljivih materijala je propisana zakonom- molimo da se o tome raspitate kod stru nih lica, koja se bave grejanjem, i dimni ara.
- Minimalna udaljenost kotla i cevi za odvod dimnih gasova od slabo i prose no gorivih materijala treba da bude najmanje 100mm.
- Minimalno rastojanje od lako zapaljivih materijala je 200mm, a isto važi i za materijale ija zapaljivost nije poznata.



Opasnost od požara!

- Skladištenje zapaljivih materijala i te nosti u blizini kotla je zabranjeno.
- Obavezno upozorite korisnike o potrebnoj minimalnoj udaljenosti zapaljivih materijala od kotla.

Zapaljivost građevinskih materijala	
A ... nezapaljivi	azbest, kamen, građevinski kamen, keramičke zidne pločice, terakota, malter, cementna glazura (bez organskih dodataka)
B ... koji nisu lako zapaljivi	gipsane kartonske ploče, staklena vlakna, ploče od AKUMINA, IZOMINA, RAJOLITA, LIGNOSA, VELOKSA i HERAKLITA
C1 ... slabo gorivi	bukovo i hrastovo drvo, kompozitno drvo, filc, ploče od HOBREKSA, VERZALITA, UMAKARTA
C2 ... prosečno gorivi	drvo bora, tise i jele, kompozitni materijali
C3 ... lako zapaljivi	Asfalt, karton, celulozni materijali, iverica, pluta, poliuretani, polistiren, polipropilen, polietilen, podna vlakna

2.Opis kotla COMPACT 25

COMPACT 25 namenjen je sagorevanju drvenog peleta. Drveni peleti su dobijeni od 100% celuloze. Ostaci drveta pod visokim pritiskom su sabijeni u pelet pre nika 6mm i dužine 2-3cm. Pelet treba pravilno skladištiti i to na suvom mestu da bi se obezbedilo efikasno sagorevanje. Kotao **COMPACT 25** koristi pelet pre nika 6mm, dužine 5-30mm i vlažnosti do 10% izra en po standardu **EN 14962-2**. Ukoliko pelet nije po navedenom standardu ili je tokom skladištenja ili transporta došlo do pogoršanja njegovog kvaliteta, Radijator inženjering kao proizvo a ne može da preuzme odgovornost za loš rad. U takvim situacijama dolazi do grešaka u paljenju, nagomilavanja peleta i ispadanja iz prostora za sagorevanje, nedovoljne snage itd.

COMPACT 25 se instalira u kotlarnici, s tim što ima prednost u situacijama gde su potrebne što kompaktnije dimenzije. Ukupna širina je 870mm, a lakom demontažom može da se pretvori u dva dela, kotlovski širine 580 mm i silos 290mm.


Montira se na klasi ni dimnjak minimalnog pre nika 140mm. Dimnjak mora da zadovoljava i sve ostale standarde kao kod klasi nih kotlova o emu je više re eno u poglavlju montaža.

Nominalna snaga **COMPACT 25** prema standardu EN303-5 je 22,51 kW.

U okviru kotla instalirani su i odgovaraju a cirkulaciona pumpa i ekspanziona posuda od 10 litara. Kotao se isporu uje i sa mehani kim sigurnosnim i odzra nim ventilom.

Kotao poseduje i izmenjiva za ugradnju ventila za termi ko osiguranje oticanjem.

Sagorevanje peleta se vrši po principu nasipnog ložišta. Ceo proces je vo en automatikom koja dozvoljava odabir jedne od 5 nivoa snaga. Mogu e je priklju iti sobni termostat i isprogramirati periode starta rada i cikluse mirovanja za 7 dana.

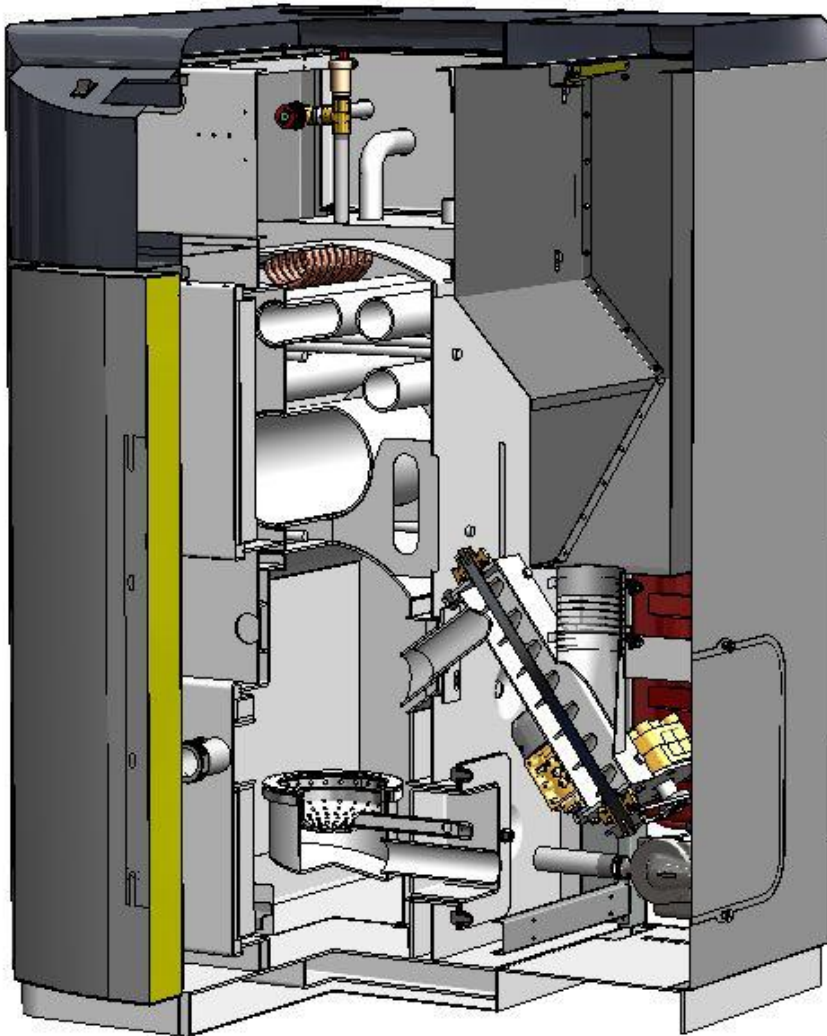

Slika1. Presek tela kotla

KONSTRUKCIJA

Kotlovski izmenjiva je cevni tropromajni i izgrađen je od materijala koji po debljinama i kvalitetu materijala odgovaraju standardu EN 303-5. Već fabrički dimenzijama COMPACT 25 je prilagođen manipulaciji u malim prostorima. Veoma je važno da ako je potrebno, moguće je na samom terenu ceo uređaj rastaviti na odvojene sklopove kotlovskog izmenjivača, silosa i pelet transportera. Tom prilikom mora se odvojiti i cirkulaciona pumpa, kao i ekspanzionna posuda.

Pelet transporter se sastoji od pužne osovine napravljene od INOX-a i pogona motor reduktora velikog obrtnog momenta od 50Nm, a veoma male instalisane snage 40W.

Silos je zapremine 50 kg peleta. Komora za sagorevanje je napravljena od vatrootpornih materijala. Presek kotla i pomenute delove videti na **slici 1**.

3. Montaža

3.1 Opšta upozorenja

Kotao mora biti pravilno postavljen zbog pravilnog rada!

Kotao se isporučuje sa spoljnom oblogom koja sadrži izolaciju debljine 30mm. Položaj silosa i mehanizma za transport peleta je standardno uvek na desnoj strani u odnosu na kotao, i nemoguće je isti promeniti na levu stranu. Elektro priključci su konektorskog tipa tako da za njihovo rastavljanje i ponovno sastavljanje nije potrebno osoblje specijalizovane elektro struke.



Maksimalni radni pritisak kotla je 3 bar-a, minimalni 1 bar, a maksimalna radna temperatura kotla je 110°C.



Kotao je sa ventilatorom, automatikom, elektro grejačem i pumpom i svi ovi uređaji koriste napajanje 230V, tako da nepravilno instaliranje i neoprezno rukovanje mogu da ugroze ljudski život strujnim udarom.



Kotao na vrstu gorivo i prinudnom promajom treba instalirati prema važećim normama i zakonskim propisima. Svaka izmena ili na mehaničkoj konstrukciji ili na električnoj instalaciji smatra se narušavanjem garancijskih uslova i dovodi do njenog narušavanja.



Prilikom montaže na hidrauličnu instalaciju kotao mora biti obezbeđen na propisan način od prekoračenja maksimalne radne temperature i pritiska.



Za propisnu montažu odgovoran je instalater centralnog grejanja koji priključuje kotao na hidraulički sistem.



Radijator inženjering, kao proizvođač kotla, ne preuzima nikakvu odgovornost za štete prouzrokovane lošim instaliranjem kotla.



Prilikom bilo kakve intervencije na elektro uređajima kotla COMPACT 25, ceo sistem isključiti sa glavnog mrežnog napajanja.

Osnovni zahtevi koje treba ispoštovati prilikom montiranja su:

- Kotao može da bude priključen na otvoreni sistem centralnog grejanja, ali i na zatvoreni sistem centralnog grejanja. U slučaju priključenja na zatvoreni sistem, preporučuje se

ugradnja ventila za termi ko osiguranje oticanjem, što je određeno i odgovarajućim zakonima svake države u kojoj se kotao priključuje.

- Kotao mora da se nalazi na sigurnoj udaljenosti od lako zapaljivih materijala. Kotao mora biti dovoljno udaljen od mogućih prepreka u kotlarnici radi laganog održavanja. Pogledaj **sliku 8**.
- Električno napajanje kotla je 230V i 50Hz i priključenje svih uređaja koje kotao sadrži treba uraditi prema važećim propisima i priključenje radi lica sa odgovarajućim ovlašćenjem.
- Priključenje na dimnjak takođe se radi prema obavezujućim propisima, kao i preporukama proizvođača što se može videti u narednom tekstu.

3.2 Mere i uređaji bezbednosti kod kotla COMPACT 25

Za bezbedan rad kotla COMPACT 25 ugrađeni su sledeći elementi i potrebno ih je održavati ispravno:

- **Ventil sigurnosti na pritisak, odzračni ventili i manometar;**
- **Termostati u automatici koja regulišu rad kotla COMPACT 25**

Ventil sigurnosti na pritisak (slika 2), odzračni ventili (slika 3) i manometar (slika 4):



Slika 2. Sigurnosni ventil



Slika 3. Odzračni ventil



Slika 4. Manometar

- Ventil sigurnosti (**slika 2**) na pritisak je već fabrički namontiran na kotao COMPACT 25 i nazivnog je pritiska 1/2 bara, baždaren na maksimalno 3 bara. Ovaj sigurnosni element koji spada u grupu limitatora pritiska mora da bude takve konstrukcije da izdrži i kratkotrajna prekoračenja i temperature i pritiska, kao i određeni sadržaj glikola u tečnosti za grejanje. Ovaj sigurnosni element mora da podleže i periodičnim ponovnim baždarenjima o čemu investitor tj. korisnik kotla mora da poseduje validnu dokumentaciju.
- Preporučuje se i ugradnja manometra (**slika 4**) na hidrauličkoj instalaciji.
- Ventil sigurnosti mora biti montiran na najvišoj tački kotla i direktno na kotlu bez bilo kakvog cevovoda ili bilo kojih drugih elemenata između. Za ovu svrhu postoji i posebno predviđeno priključno mesto. Strogo je zabranjeno bilo kakvo reduciranje pritiska ovog priključka prilikom servisiranja i postavljanje novog ventila sigurnosti.

- Ispusni tj. izduvni deo ventila sigurnosti (ukoliko korisnik želi da je namontira) mora da bude od cevi čiji je prečnik najmanje jednak nazivnom prečniku ispusnog dela ventila. Tako je dozvoljeno je za njegovu izradu koristiti najviše jedan luk radijusa $r > 3d$.
- Sigurnosni ventil mora posedovati nazivnu pločicu i na njoj sledeće podatke:
 - naziv proizvođača;
 - oznaka tipa sigurnosnog ventila/godina ispitivanja;
 - nazivni protok;
 - podatak za koji toplotni učinak je sigurnosni ventil podešen;
 - najviši pritisak otvaranja tj. 3 bara.
- Obavezna je provera ispravnosti rada u određenim vremenskim periodima kao i ponovna baždarenja od strane sertifikovanih firmi. Ove obaveze se sprovode u skladu sa zakonom svake zemlje u kojoj je kotao namontiran. Obavezno čuvati pisani dokument o podacima zadnjeg baždarenja sigurnosnog ventila.
- Na povratnom vodu montirati barem još jedan ventil sigurnosti na pritisak.
- Zajedno sa ventilom sigurnosti na pritisak u istu sigurnosnu grupu spada i odzračni ventil (**slika 3**). Na uređaju postoje dva takva ventila. Jedan je na najvišoj tački kotla, a drugi na najvišoj tački sabirnika gde se radi o vodu toplu i ekspanzionu posuda.

Ventil termičkog osiguranja (slika 5)




Slika 5. Ventil termičkog osiguranja

- Ovaj sigurnosni element ima takođe ulogu ograničavanja temperature. U daljem tekstu biće označen sa skraćenicom VTO.
- U nekim ekstremno opasnim situacijama prelaz vode u vodenu paru je takav da ventili sigurnosti za pritisak nisu dovoljni da obezbede sigurnost hidrauličkog sistema. Iz ovog razloga je obavezna ugradnja VTO. U zavisnosti od zakonskih regulativa zemalja u kojima se kotao montira, VTO je potrebno ugraditi samo za snage veće od određenih ili za svaku snagu kotla obavezno ugraditi VTO.
 - Mesto ugradnje prikazano je na šemi montaže kotla na instalaciju i na **slici 6**. U kotlu se isporučuje bakarna spirala tako da je potrebno koristiti VTO sa izmenjivim emulsijskim kao na **slici 6**. Do VTO-a se dovodi hladna sanitarna voda. Kada sonda VTO-a ima informaciju da je temp. preko 95°C VTO se otvara i voda prolazi kroz bakarnu spiralu. Posle izvesnog vremena temp. vode u kotlu se vraća na normalnu.
 - Jedan priključak spirale koristimo za VTO, a drugi za ispušni vodu koja je prošla kroz spiralu. Koji je priključak spirale za VTO, a koji je ispušni je nebitno. Obavezno je pridržavati se uputstava ugradnje koje je dao proizvođač VTO.
 - Obavezno u određenim vremenskim periodima proveravati funkciju VTO.


- Kao što je već rečeno jedan kraj VTO je za montažu na izmenjiva kotla, a do drugog se dovodi hladna voda pod pritiskom. Naročito je bitno da protok te vode bude neometan i pri nestanku el. energije.



Ukoliko je nemoguće obezbediti dotok hladne sanitarne vode i pri nestanku el.energije, obavezno kotao priključiti na otvoren sistem.

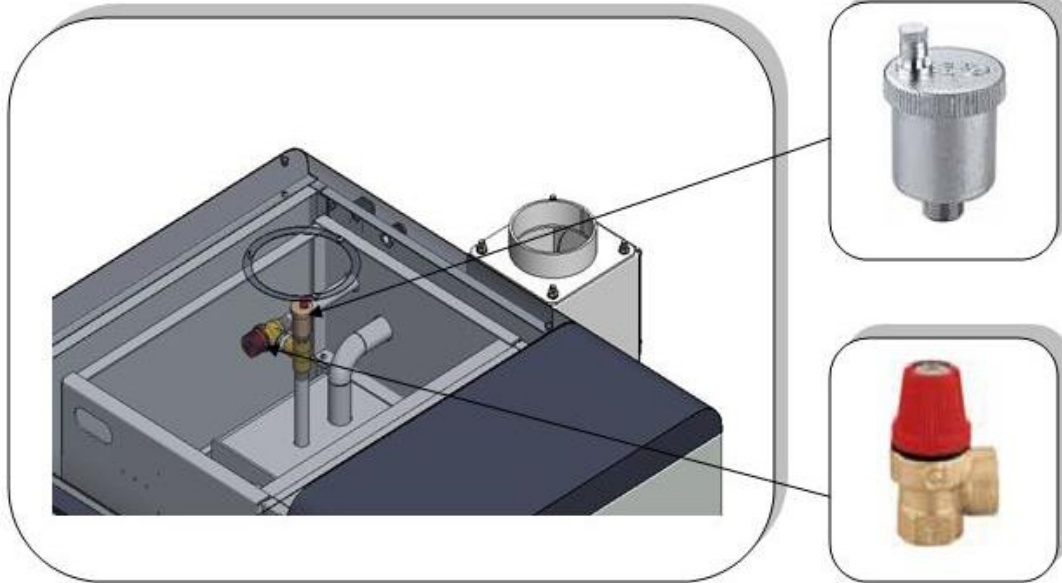


Fabrički postavljeni sigurnosni elementi

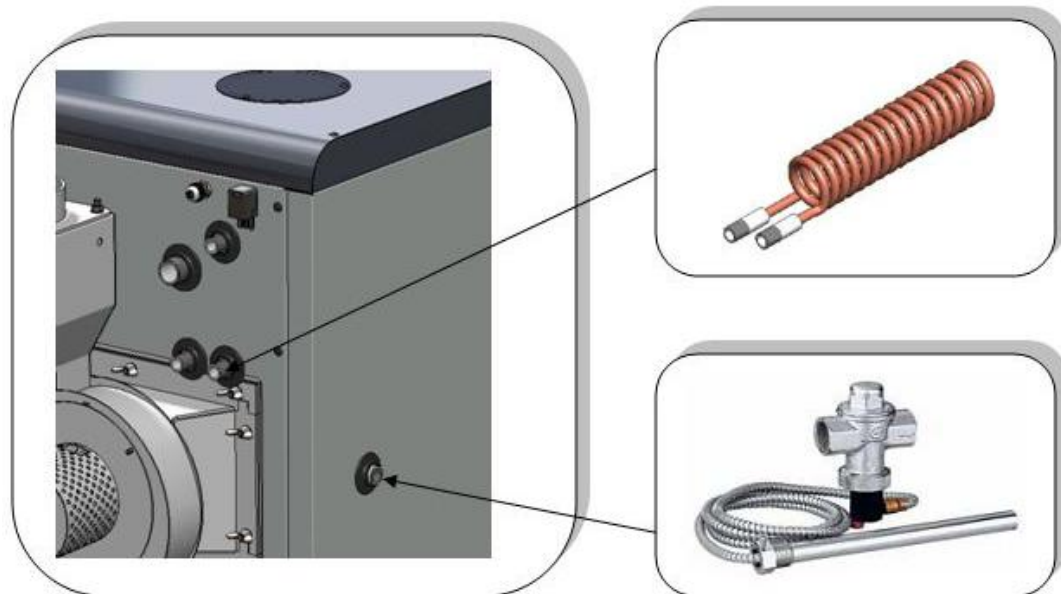

Prikaz postavljanja termičkog osiguranja (obavezan ako se radi o zatvorenom krugu grejanja)

Slika 6. Prikaz postavljanja sigurnosnih elemenata

Termostati u automatici kotla

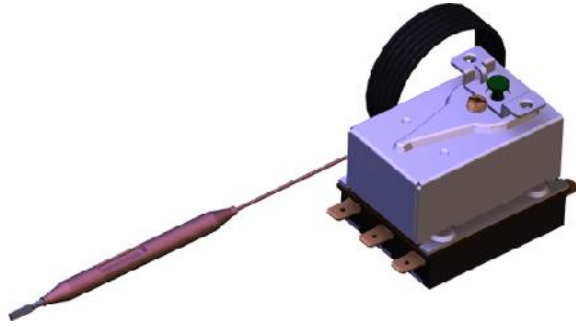

Slika 7.

U samoj automatici koja vodi proces sagorevanja i utiče na rad dva kruga grejanja postoje dva termostata. Oba su slične konstrukcije kao termostat prikazan na **slici 7.** i imaju i sigurnosne funkcije kao limitatori temp. vode u kotlu. Zbog sigurnosne uloge u funkcionisanju kotla oba termostata imaju nezavisne sonde za merenje temperature vode.

Prvi termostat je tzv. radni i on služi da ograniči temperaturu do nivoa koji želi korisnik.

Drugi termostat je sigurnosni jer prekida rad ventilatora koji pospešuje plamen, odnosno dodaje novu energiju. Sigurnosna temperatura je ograničena na 95 stepeni Celzijusa.




Pumpa za grejanje ima veoma važnu bezbednosnu funkciju i fabrički je povezana sa elektro napajanjem preko automatike i iz sigurnosnih razloga. Kada temp. vode u kotlu dostigne kritičnu vrednost od 95 stepeni Celzijusa ventilator staje sa radom, ali pumpa se obavezno uključuje kako bi razmenila toplotu vode kroz radijatore.

3.3 Kotlarnica

Kotlarnica mora biti obezbeđena od smrzavanja.

Podloga za kotao u kotlarnici mora biti od nezapaljivog materijala. Preporučene vrednosti udaljenosti sve četiri strane kotla u odnosu na zidove kotlarnice ili neka druga kruta tela (akumulacioni bojler, itd.) prikazane su na **slici 8**. Ove vrednosti udaljenosti omogućavaju siguran pristup prilikom loženja, dovoljan prostor za išćenje i nesmetan pristup ventilatoru i ventilu za punjenje i pražnjenje. Kotao sa svoje leve strane treba da bude udaljen od zida 200mm tj. onoliko koliko je potrebno prostora za prikljućenje ventila za termičko osiguranje oticanjem. Ako se ventil ne ugrađuje onda prostor može da bude i manji. Prostor sa desne strane kotla, koji se preporučuje da bude barem 1000mm, bitan je iz razloga kako bi korisnik prišao zadnjem delu kotla. Takođe ovaj prostor je potreban i za eventualno važenje mehanizma za pelet radi periodičnog održavanja. Prostor iza kotla bitan je zbog montaže na hidraulički sistem ali i zbog eventualne demontaže sistema za elektro potpalu. **Kotlarnica mora da poseduje dovoljne otvore za ventilaciju kako za svež vazduh tako i za odvođenje istrošenog vazduh.**

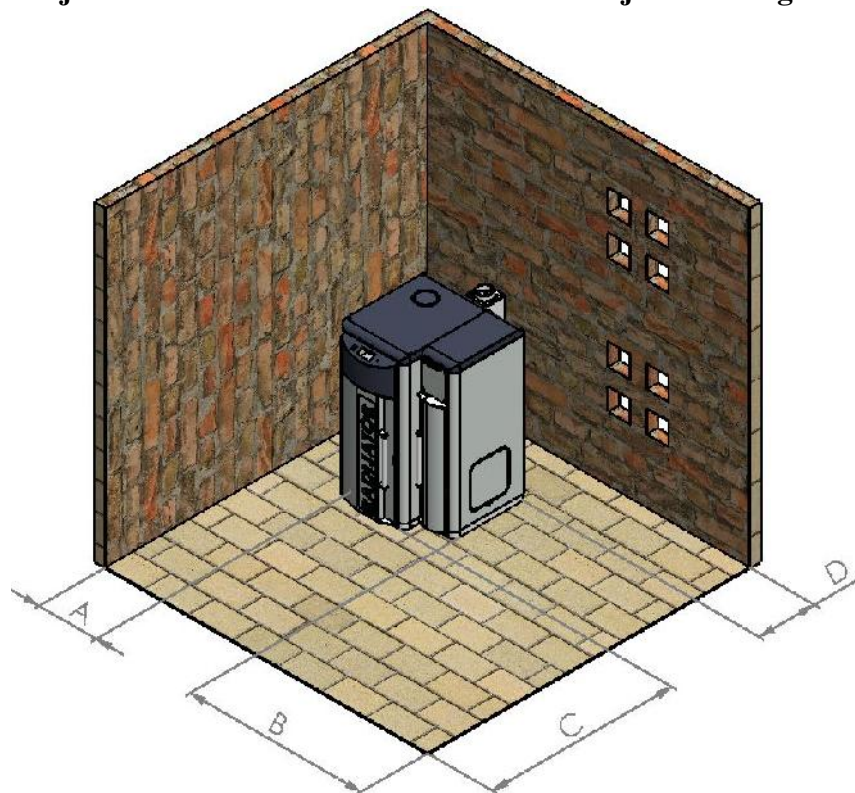

Slika 8. Pozicioniranje kotla u kotlarnici

Tip kotla	DIMENZIJE			
	A (mm)	B (mm)	C (mm)	D (mm)
COMPACT 25	200	1000	1000	800

Ukupna površina ovih otvora je minimalno 150cm² za snage do 50kW, a za snagu preko 50kW površina mora biti veća za još 2cm² po kilovatu.

$$A=150\text{cm}^2+\frac{2\text{cm}^2}{\text{kW}}\times(\sum Q_n - 50\text{kW}) \quad \sum Q_n = \text{mogu e snage preko } 50\text{kW}.$$

Nedostatak dovoljne ventilacije u kotlarnici može da uzrokuje više problema u radu kotla. Glavni problem je nemogućnost postizanja visoke temperature izlazne vode tj. ne postizanje maksimalne snage što dovodi do kondenzovanja u kotlu.

- Uzeti u obzir neophodan minimalni prostor koji je potreban za prilaz sigurnosnim elementima i za izvršenje operacija iš enja i redovnog remonta.
- Utvrditi da li je stepen elektri ne zaštite u skladu sa karakteristikama prostorije u kojoj će kotao biti smešten.
- Zabranjeno je izlaganje kotla atmosferskim neprilikama. Sam kotao nije predvi en za spoljnu montažu i ne sadrži sistem protiv smrzavanja.
- Zabranjeno je zatvaranje ventilacionih otvora na prostoriji u kojoj se nalazi kotao. Ventilacioni otvori su neophodni za pravilno sagorevanje.


3.4 Priključenje na dimnjak

Kotao COMPACT 25 radi sa prinudnom promajom i to jednog ventilatora, ali ipak treba ispoštovati pravila za odabir dimnjaka kao da se radi o kotlu sa blagim potpritiskom u ložištu na neko drugo gorivo, kao na lož ulje na primer. Poprečni presek dimnjaka treba da bude 140mm (slika 9). U suprotnom može doći do problema u radu, naročito u fazi potpale i u režimu rada na vrsto gorivo.

Preporuka je da prečnik dimnjaka bude barem jednak prečniku dimnjaka kotla, a minimalna visina 7 do 8 metara, sve u zavisnosti od pokrivenosti dimnjaka nekim drugim visokim građevinama pored njega. Najoptimalnije postavljanje kotla na dimnjak u prikazano je skicom.



Mesto gde je fabrički postavljena sonda dimnovodnih gasova

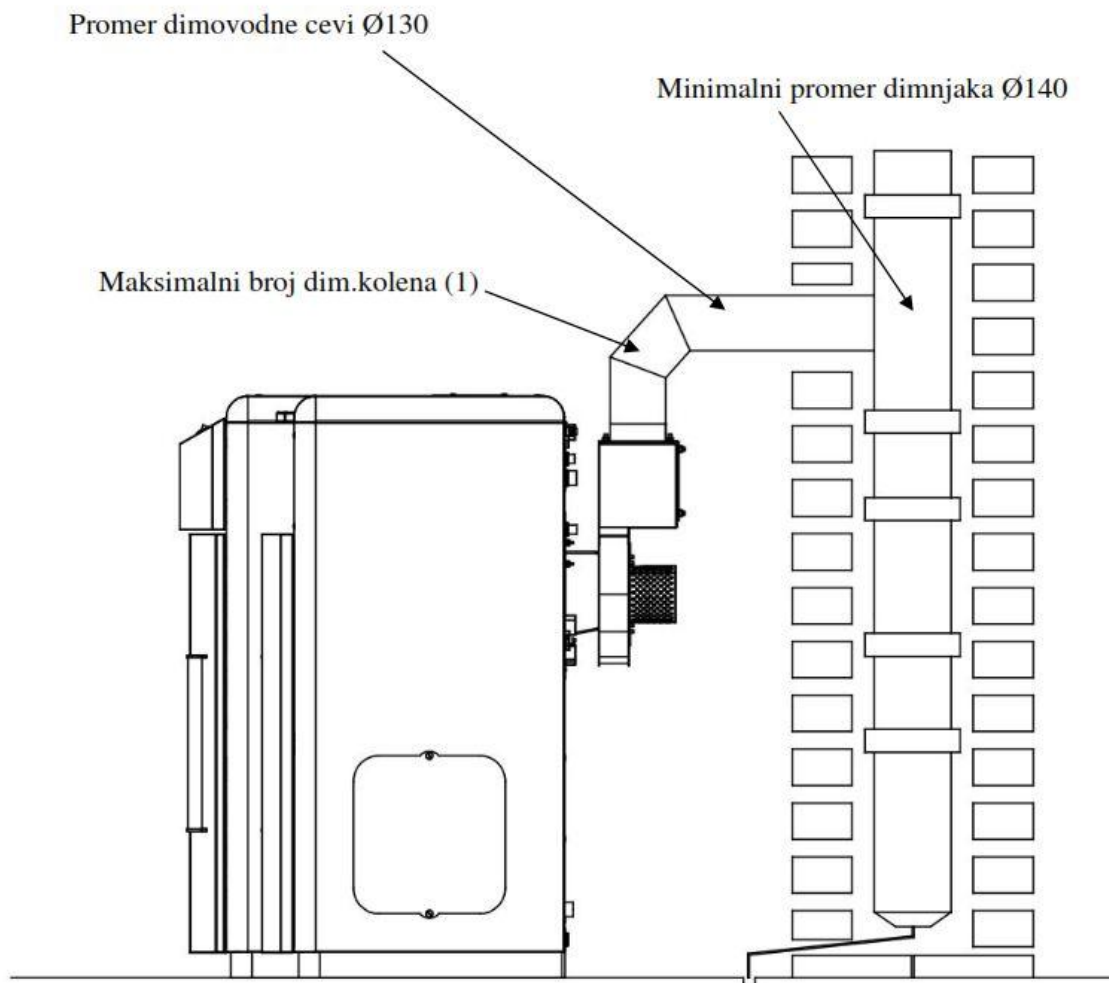



Slika 9. Prikaz priključenja na dimnjak i prikaz položaja sonde na dimnjaku


Treba izbegavati ako je moguće lukove, a ako nije onda je maksimalni broj lukova (1). Dimni kanal od kotla do dimnjaka poželjno je izolovati, posebno ako ima lukova i dužih deonica. U kućištu ventilatora izduvnih gasova fabrički je ugrađena sonda dimnih gasova. Pre puštanja u rad proveriti da li je posle transporta još uvek na svom mestu, jer bez pravilno postavljene sonde nema ni rada kotla. **Potrebna promaja dimnjaka je 20Pa.**

Sam dimnjak treba da je napravljen od keramičkih cevi, oko njih treba da je izolacija debljine 3-5cm i zadnji spoljni sloj je cigla ili specijalni dimnjački elementi. Ako dimnjak ipak nije od keramike već od cigle, površina svetlog preseka takvog dimnjaka mora da bude 30% veća nego ovakva površina keramičkog dimnjaka.


Dimnjak mora da ima i vratanca za puštanje i ona moraju dobro da dihtuju. Izlaz dimnjaka na krovu mora da bude po određenim propisima. Razlikuju se dva slučaja: ako je ugao krova manji od 12° i ako je ugao krova veći od 12°. Za ugao manji od 12° visine dimnjaka iznad krova je 1m, a za ugao veći od 12° treba pogledati skicu. Dimnjak treba redovno da se čisti ili barem jedanput godišnje.

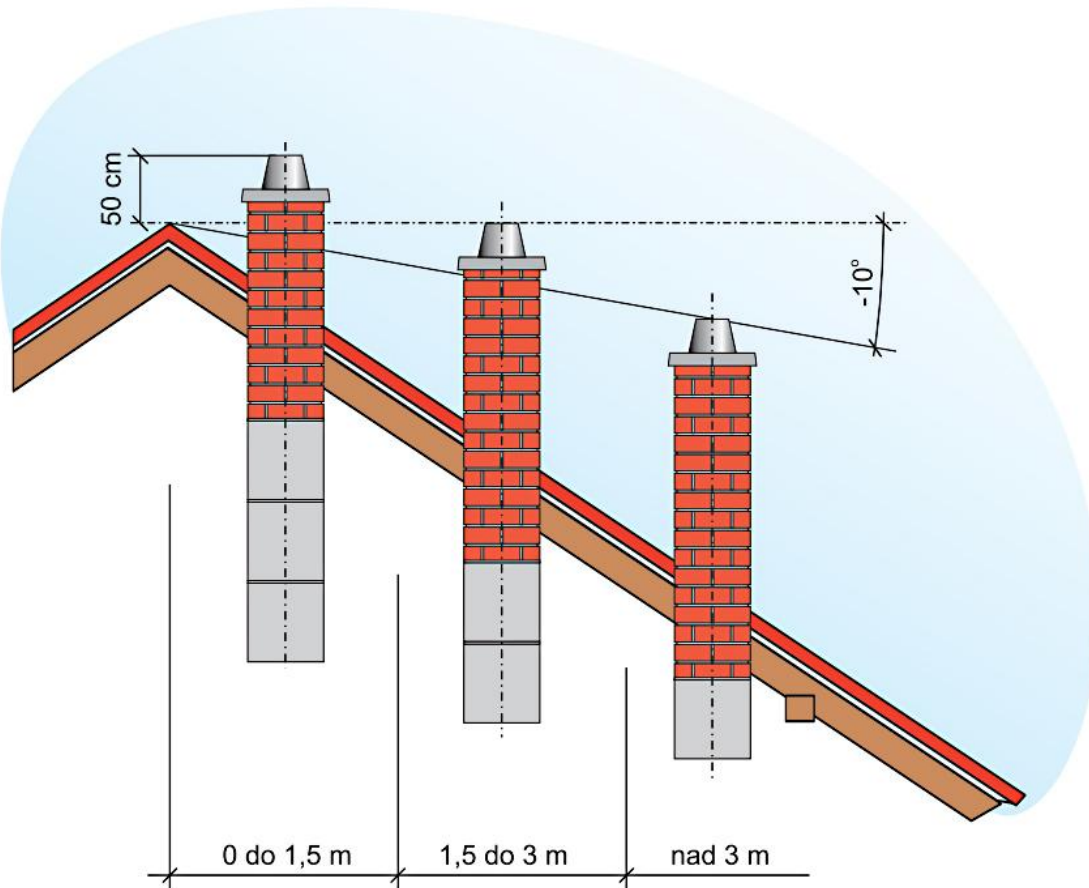

 **Ukoliko dimnjak nije propisne visine, poprečnog preseka ili ako se ne ističe, moguće su komplikacije u radu kotla. Pre svega nije moguće visokotemperaturni režim rada, tj. nema maksimalne radne snage, a posledice toga je pojava kondenzacije što utiče na radni vek kotla.**

 **Slab dimnjak je glavni razlog da u toku potpale kotla ili u toku rada imamo pojavu dima na gornjim ili donjim vratima, naročito pri većim brojevima obrtaja ventilatora.**

4. Presek kotla COMPACT 25 sa opisom elemenata

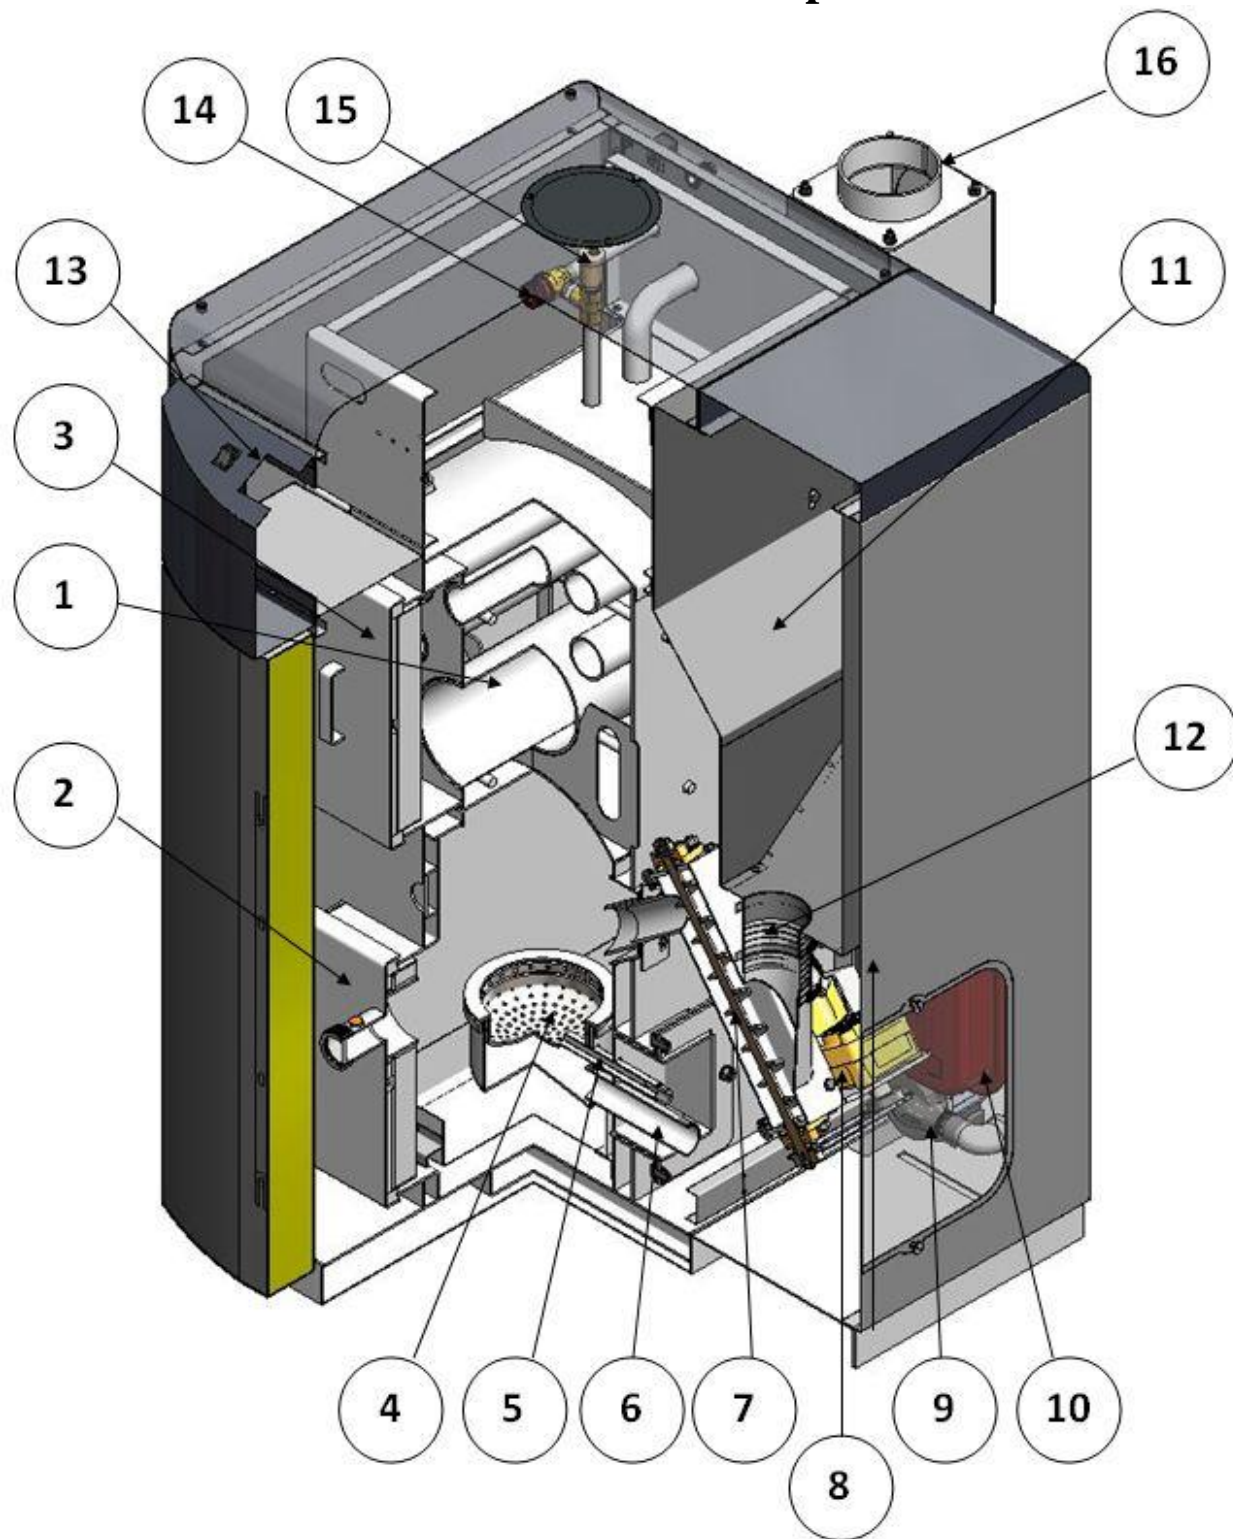


Slika 10. Presek sa opisom elemenata

Opis (slika 10):

1. Izmenjiva kotla (telo kotla);
2. Donja vrata za iš enje šolje za sagorevanje i donjeg dela izmenjiva a kotla;
3. Gornja vrata za iš enje gornjeg dela cevnog izmenjiva a kotla;
4. Šolja za sagorevanje;
5. Elektro greja ;
6. Cev za dovod svežeg vazduha za sagorevanje;
7. Dozator;
8. Motor;
9. Cirkulaciona pumpa;
10. Ekspanzina posuda 10L;
11. Silos;
12. Fleksibilna veza;
13. Automatika;
14. Sigurnosni ventil;
15. Odzra ni ventil;
16. Dimnja a.


5. Šema vezivanja automatike

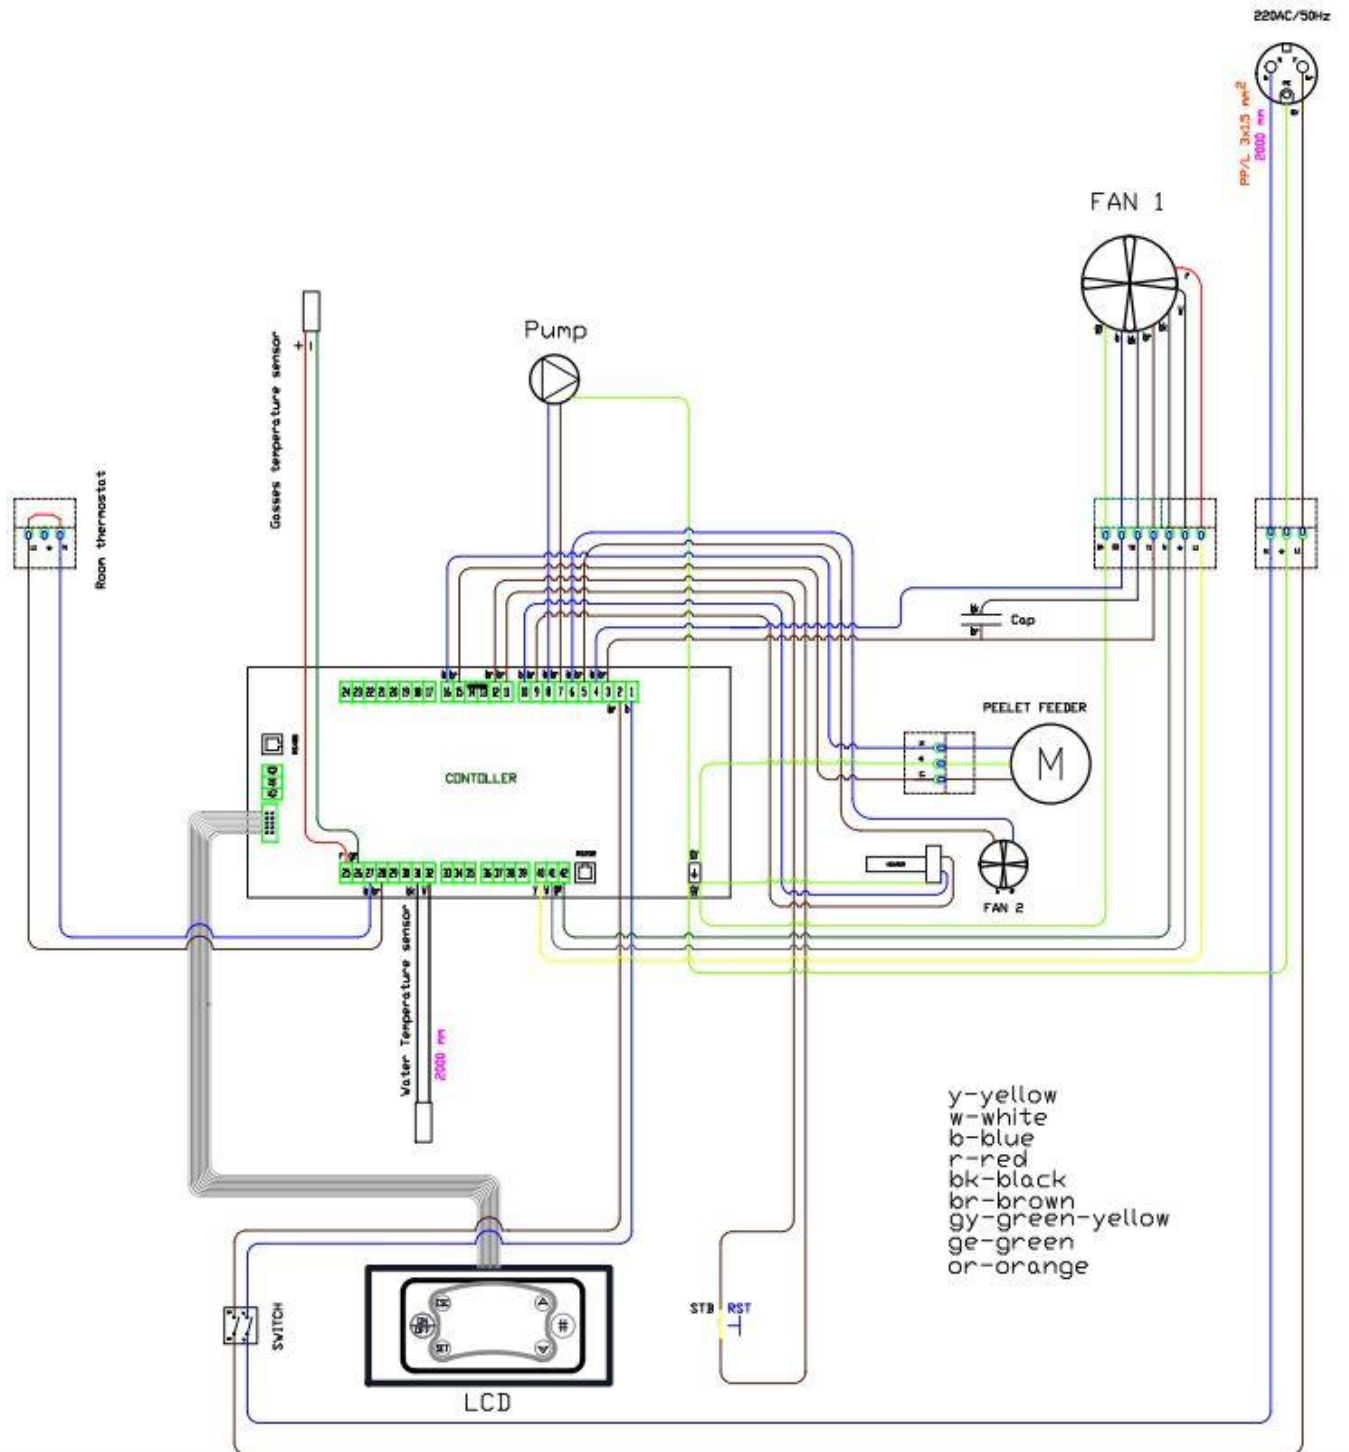


Slika 11. Šema povezivanja automatike


Sve linije koje su prikazane isprekidano na šemi spoljnih priklju enja su provodnici koje je potrebno da instalira tehni ko lice prilikom priklju enja spoljnih ure aja na automatiku kotla. Sva priklju enja dodatnih ure aja tehni ko lice obavlja preko trolnog konektora koji se nalazi na zadnjem delu kotla. Trolni konektor je za priklju enje sobnog termostata što je prikazano na nalepnici samog konektora.


Sedmopolni konektor je za priklju eni mrežni kabal, dok je preko drugog trolnog konektora (pored sedmopolnog) priklju ena cirkulaciona pumpa.

 ***Za sobne termostate bitno je da budu sa baterijskim napajanjem tj. da nemaju na sebi bilo kakav dovod napona 220 V. Na samom termostatu za povezivanje se koristi NC (normalno zatvoreni kontakt).***

 ***U slu aju ošte enja napojnog kabla, radi izbegavanja opasnosti, ošte eni napojni kabl mora zameniti proizvo a ili njegov ovlaš eni serviser ili neko kvalifikovano lice za to.***

6. Tabela sa tehni kim podacima

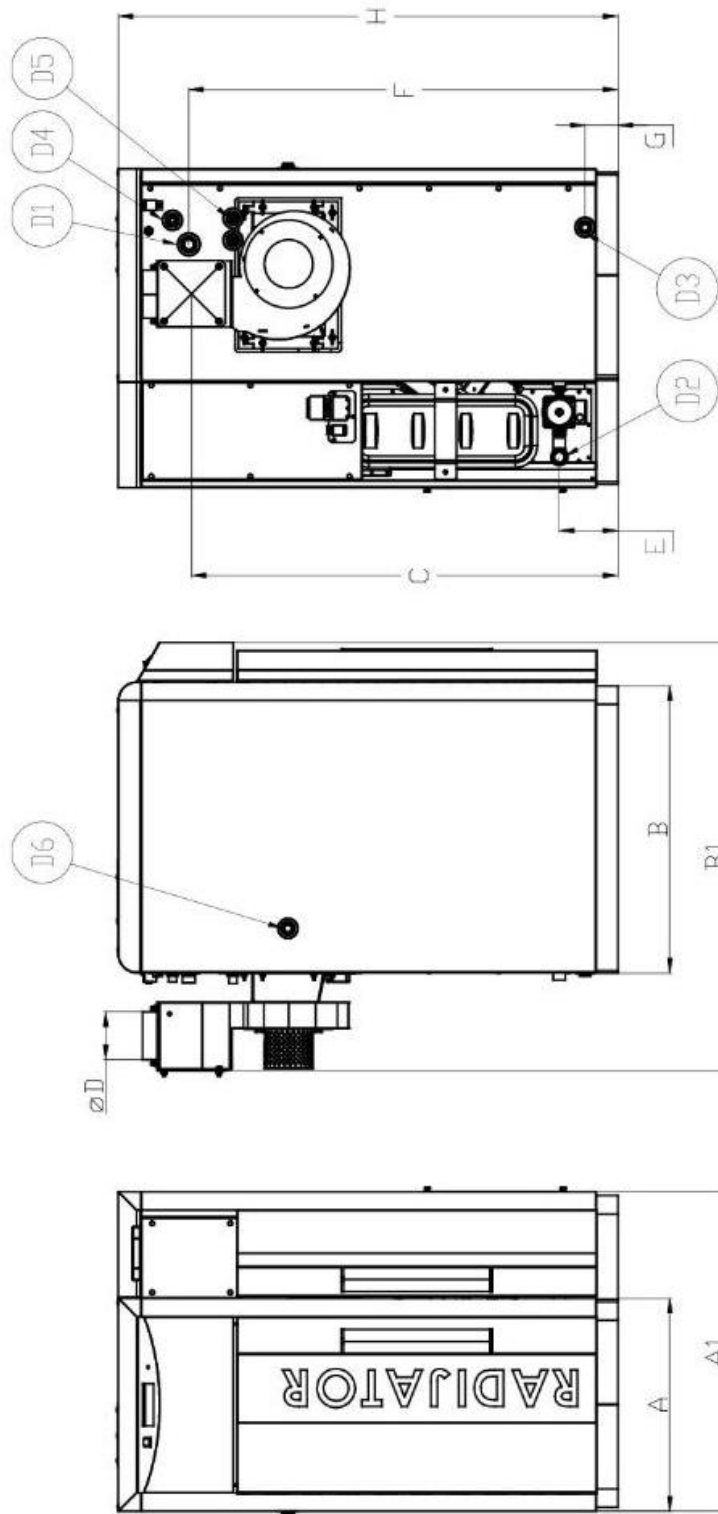

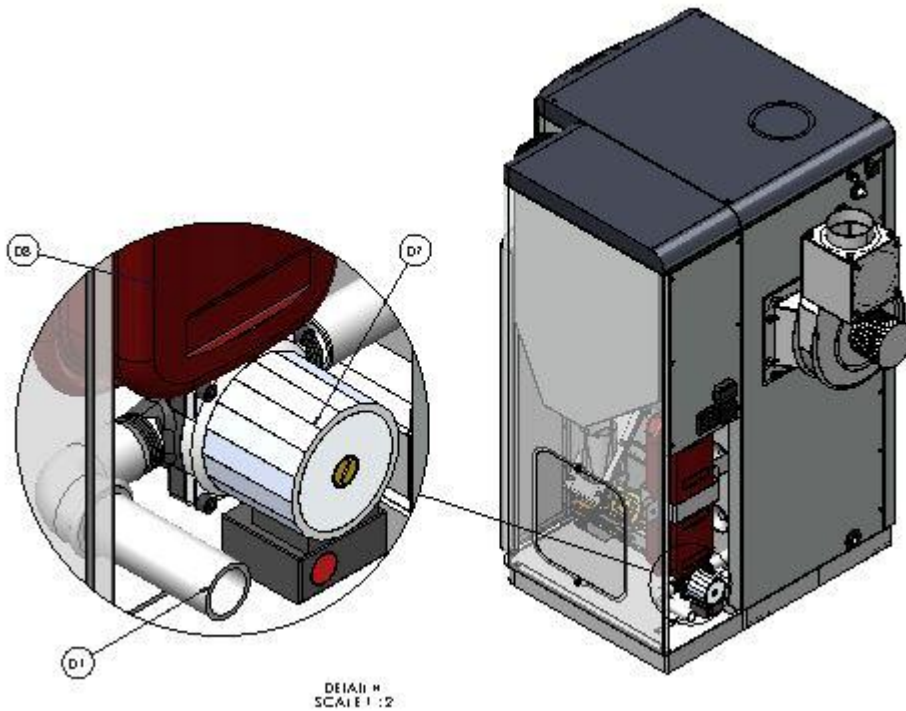


- **D1- priključak za toplu vodu iz kotla,**
- **D2- priključak za hladnu vodu iz kotla,**
- **D3- priključak za punjenje i pražnjenje,**
- **D4- priključak za sigurnosnu grupu,**
- **D5- priključak ventil termičkog osiguranja oticanjem,**
- **D6- priključak za sondu ventila termičkog osiguranja,**

Napomena: Pumpa, ekspanziona posuda i sigurnosni ventil (D4) ve su postavljeni na kotlu.

TIP KOTLA		COMPACT 25
CE oznaka		CE
Klasa kotla po EN 303-5:2012		5
Radni pritisak	bar	3
Probni pritisak	bar	4,5
Zapremina ložišta	L	43,3
Zapremina vode u kotlu	L	78
Težina	kg	382
Popre ni presek dimnjaka	mm	130
Potrebna promaja dimnjaka	mbar/Pa	0,16/16
Temperatura kotla (min / max)	°C	60-90
Minimalna temperatura povratnog voda	°C	60
Stepen iskoriš enja pri nominalnoj/minimalnoj toplotnoj snazi	%	90,25/ 92,14
Nominalna snaga	kW	22,51
Minimalna/ Maksimalna snaga kotla	kW	6,35-22,51
Emisija ugljen monoksida (Co) pri minimalnoj toplotnoj snazi (10%O2)	mg/m3	138,21
Emisija ugljen monoksida (Co) pri nominalnoj topl.snazi (10%O2)	mg/m3	103,29
Emisija prašine pri nominalnoj/minimalnoj toplotnoj snazi (10%O2)	mg/Nm3	17,04/19,39
Dimenzije		
	A	580
	A1	870
	B	785
	B1	1170
	C	1165
	ØD	130
	E	160
	F	1170
	G	90
	H	1365
Priklju ak za toplu vodu iz kotla	D1	1"
Priklju ak za hladnu vodu kotla	D2	1"
Priklju ak za punjenje i pražnjenje	D3	1/2"
Priklju ak za sigurnosnu grupu	D4	1/2"
Priklju ak za ventil termi kog osiguranja oticanjem	D5	1/2"
Priklju ak za sondu ventila termi kog osiguranja	D6	1/2"

***zadržavamo pravo izmene**

7. Hidrauli ka šema

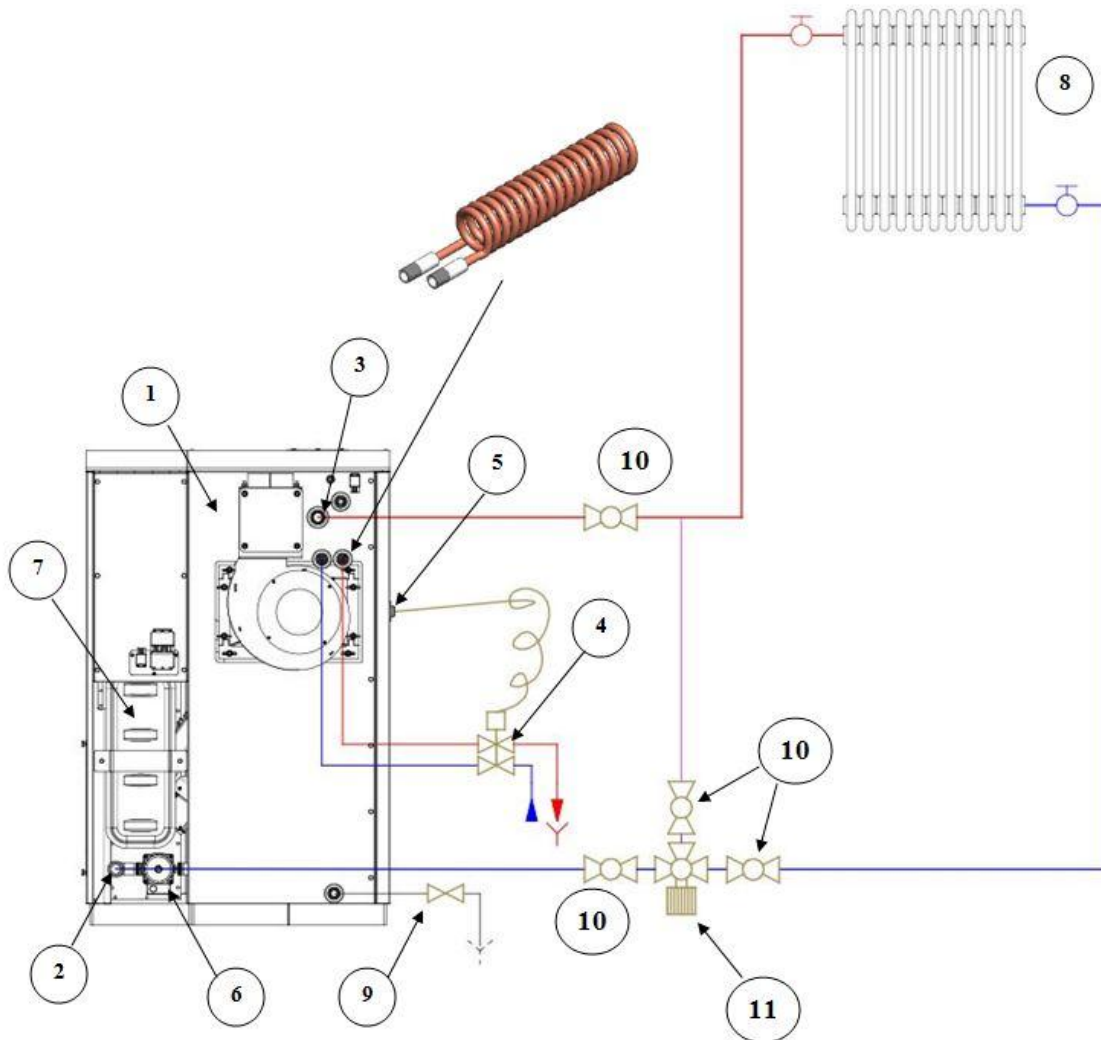

Slika 12. Hidrauli ka šema

Opis (slika 12):

1. Kotoa COMPACT 25;
2. Priklju ak za povratnu hladnu vodu;
3. Priklju ak za potisnu toplu vodu;
4. Ventil termi kog osiguranja;
5. Sonda ventila termi kog osiguranja;
6. Cirkulaciona pumpa;
7. Ekspanzina posuda 10L;
8. Izmenjiva – radijator;
9. Ventil za punjenje i pražnjenje;
10. Ventil;
11. Mešni ventil.

NAPOMENA: U sklopu kotla COMPACT 25 ulazi i pumpa i ekspanzivna posuda od 10l.



Prilikom montaže na hidrauli ku instalaciju kotao mora biti obezbe en na propisan na in od prekora enja *maksimalne radne temperature i pritiska*.




Za propisnu montažu odgovoran je instalater *centralnog grejanja koji priklju uje kotao na hidrauli ki sistem*.



Radijator inženjering ,kao proizvo a kotla, ne preuzima nikakvu odgovornost za štete prouzrokovane lošim instaliranjem kotla.

Kotao je prema fabri kim podešavanjima prilago en hidro instalaciji kao na **slici 12.1**.

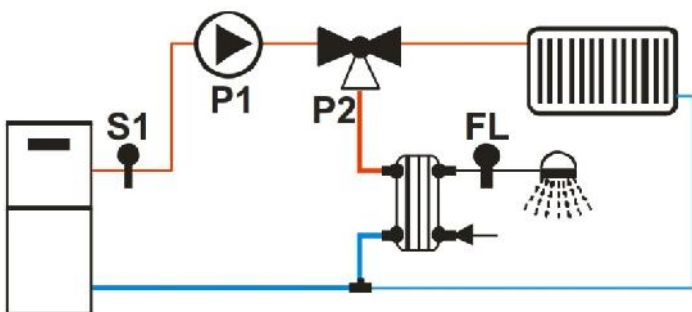

Slika 12.1.


O igledno je da postoji samo jedno merno mesto S1, a ta sonda je ve fabri ki postavljena. Druga sonda koja je povezana na konektoru na zadnjoj strani kotla u ovom slu aju ostaje neupotrebljena.



Pumpu P2 koja služi za sanitarnu vodu ne moramo da ugradimo. Parametar koji odre uje tip hidro instalacije u samoj automatiki je P26 i za ovakvu hidro šemu je P26 podešen na 0.

Ukoliko želimo da koristimo automatiku da vodi proces i zagrevanja akumulatora preko odgovaraju e pumpe, onda hidrauli ka šema treba da je kao na **slici 12.2** .Mesto merenja sonde temperature vode u akumulatoru je ozna eno sa S2.


Da bi automatika pravilno vodila rad te pumpe za hidrauli ku vezu i sa akumulatorom onda je potrebno parametar P26 podesiti na vrednost 4.

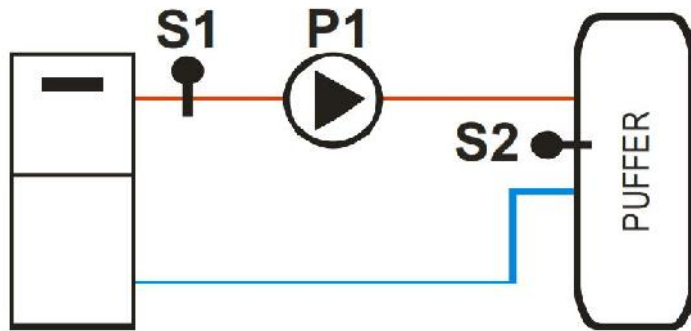

Slika 12.2.


Ukoliko želimo da automatika vodi proces zagrevanja sanitarne vode i to preko odgovarajuće pumpe, onda hidraulička šema treba da je kao na **slici 12.3**.

Da bi automatika pravilno vodila rad te pumpe za zagrevanje bojlera sanitarne vode onda je potrebno parametar P26 podesiti na vrednost 3.

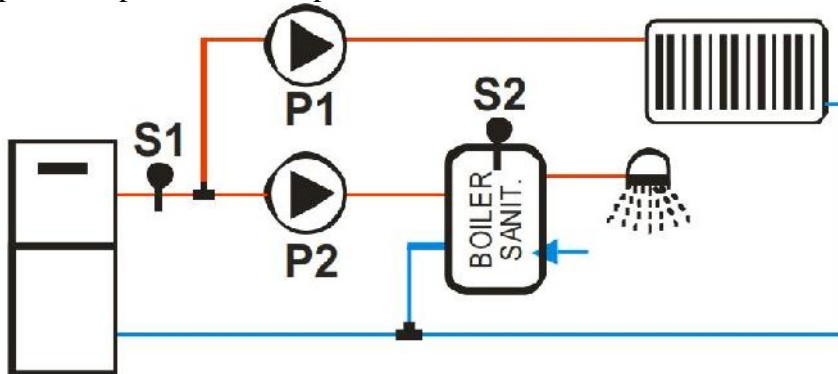


Slika 12.3

8. Start rada kotla COMPACT 25 i održavanje


 **Prvo puštanje kotla u rad obavlja tehni ko lice koje ima sertifikat izdat od strane Radijator inženjeringa. Obavezna je obuka korisnika kotla.**

Na taj na in to lice je ovlaš eno da prijavi servisnoj službi u samoj fabrici vreme kada je kotao po eo da radi i u kakvom je stanju kotao bio prilikom prvog paljenja, dok kopiju izveštaja o puštanju kotla u rad zadržava. Garancija i upustvo za upotrebu se daje kupcu. Jedan primerak garancije se šalje proizvo a u. Ako garancija nije ispunjena, ona nije važe a.

Samo kotlovi koji su pušteni u rad od strane ovlaš enog tehni kog lica podležu *uslovima kompletne garancije od dve godine*. *Naredni tekst je namenjen samom korisniku kotla, kao jedna vrsta podsetnika, da ako ugasi kotao (npr. zbog iš enja) bude u stanju da samostalno pokrene kotao.*

 ***Parametri vezani za rad kotla, a koji su dostupni korisniku su na samom displeju. Ostale parametre koji su u tzv. skrivenom meniju ne treba menjati bez saglasnosti tehni kog lica koje je pustilo kotao u rad ili same fabrike.***

8.1 Displej automatike

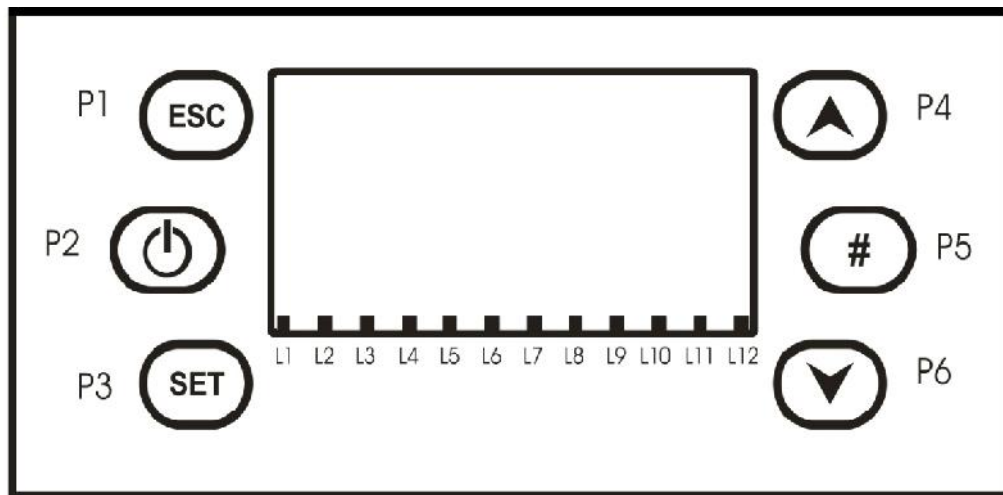

Slika 13. Slika i šematski prikaz displeja automatike

Tasteri:

Funkcije	Opis	Taster
Uključi/ Isključi	Funkcija paljenja, gašenja pritiskomna dugme 3 sekunde do zvučnog signala.	P2
Odblokirati	Funkcija odblokiranja, kada je sistem u blokadi pritiskom na dugme 3 sekunde do zvučnog signala uklanjate blokadu.	
Izmena vrednosti menija i podmenija	U sistemu izmene promeniti vrednosti u meniju ili podmeniju.	P4 P6
Ulazak u meni ili podmeni	U meniju startovanje podmenija i menija.	
Vizuelizacije	Ulazak i startovanje vizuelnog menija.	
Esc	Funkcija izlaska pritiskom na taster.	P1
Meni	Funkcija ulaska u meni ili podmeni.	
Izmena	Ulazak u sistem izmene u meniju.	P3
Potvrditi	Sačuvati podatke u meniju.	
Resetovanje sistema održavanja 2 funkcije	Resetovanje tajmera T67.	P5

Diode:


Funkcije	Opis	Svetleća dioda
Grejač	Dioda uključena: Grejač u funkciji.	L1
Dozator	Dioda uključena: Dozator u funkciji.	L2
Pumpa	Dioda uključena: Pumpa u funkciji.	L3
Mešni ventil	Dioda uključena: Mešni ventil u funkciji.	L4
Izlaz V2 konfigurisan kao sigurnosni ventil peleta ili motor za dopunu peleta ili motor za čišćenje	Dioda uključena: Izlaz V2 u funkciji.	L5
Ventilator za sagorevanje	Dioda uključena: Ventilator za sagorevanje u funkciji.	L6
Izlaz Aux2 konfigurisan kao sigurnosni ventil peleta ili motor za dopunu peleta ili motor za čišćenje	Dioda uključena: Izlaz Aux2 u funkciji.	L7
Nivo peleta	Dioda uključena: Nedostatak peleta.	L10
Spoljni termostat	Dioda uključena: Spoljni termostat u funkciji.	L11
Senzor protoka*	Dioda uključena: Zahtev za sanitarnu vodu.	L12

* Samo za vodovodne instalacije sa senzorom za merenje protoka



NAPOMENA: Dioda L4, L5, L6, L7, L10 i L12 nisu u funkciji kod kotla COMPACT 25.

8.2 Kratko uputstvo za korisnika automatike.

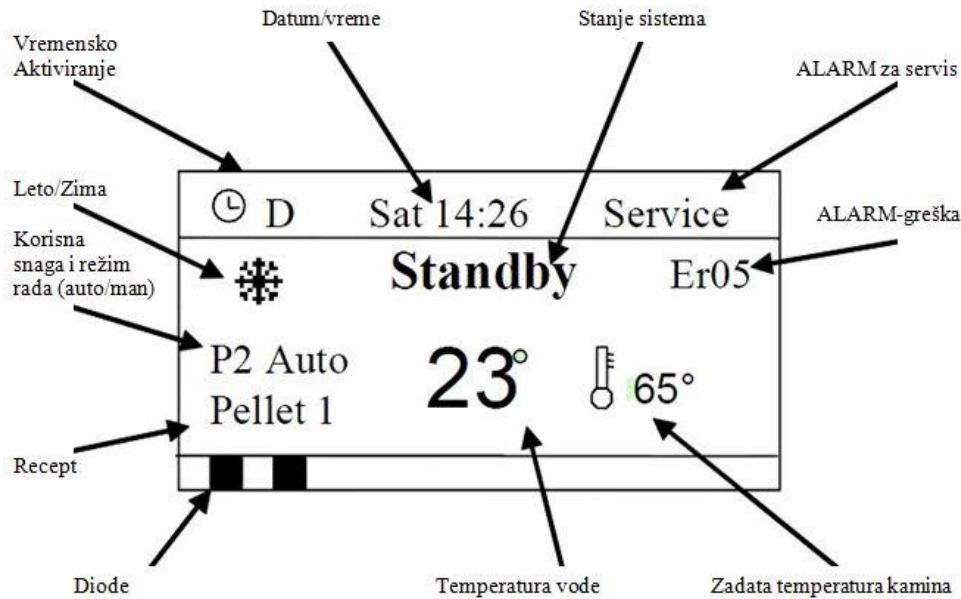

Slika 14. Prikaz LCD ekrana na displeju

- **Očitavanje trenutnog stanja kamina.**

Postupak:



Pritisnuti taster **P6**, nakon toga na ekranu se pojavljuju informacije (slika 15).

Exhaust Temp	103	Izduvna temperatura [°C]
Boiler Temp	55	Temperatura vode u kotlu [°C]
Buffer Temp	55	Temperatura vode u akumulatoru* [°C]
Room Temp	35	Sobna temperatura* [°C]
Pressure	1548	Pritisak [mbar]
Air Flow	680	Protok vazduha*[cm/s]
Auger	2.5	Vreme rada puža [s]
Product Code	395 – 0000	Kod proizvoda
FSYSD01000101.0.0		
FSYSF01000131.0.0		

Slika 15. Prikaz stanja kamina na displeju



NAPOMENA: Kod kotla COMPACT 25 ne pojavljuju se informacije obeležene zvezdicom*).

- **Ulazak u MENI automatike i objašnjenje funkcija.**

Postupak:



Pritisnuti taster **P3**, nakon toga na ekranu se pojavljuje padajuća lista (slika 16).

Meni		Opis
Chombustion Power		Meni koji omogućava da izaberete podešenu snagu kotla.
Boiler Thermostat		Meni koji omogućava da promenite zadatu temperaturu kotla.
Chrono	Modality	Meni za izbor programa: Dnevni, Nedeljni, Vikend, Onemogućiti.
	Program	Meni koji dozvoljava podešavanja tri navedena programa: Dnevni, Nedeljni, Vikend.
Recipe		Meni za izbor recepta.
Time and Date		Meni za podešavanje vremena i datuma.
Remote Control		Meni za omogućavanje daljinskog upravljača SYTX.
Calibration		Meni za podešavanje radnog vremena dozatora i brzine ventilatora.
Load		Meni koji omogućava rad dozirnog sistema (prvo i ponovno punjenje prilikom početka rada kotla), ako je sistem u OFF režimu.
Summer-Winter		Meni za odabir zimskog ili letnjeg režima.
Language		Meni za odabir jezika na LCD panelu.
Keyboard Menu		Meni za podešavanje kontrasta i svetla na LCD panelu.
System Menu		Meni za ulaz u sistemski meni.

Slika 16. Prikaz i objašnjenje MENI automatike

- **Promeniti podešenu snagu kamina.**

Postupak:



Pritisnuti taster **P3**, nakon toga na ekranu se pojavljuje padajuća lista, gde je i odmah markirana prva opcija **Chombustion Power**. Ponovo potvrditi tasterom **P3**



, nakon toga pojavljuje se prikaz na displeju (slika 17). Tasterima **P4** ili **P6**




zadajete podešenu snagu i na kraju ponovo potvrdite tasterom **P3**



Vratite se na osnovni prikaz displeja (slika 16), pritiskom na taster **P1**



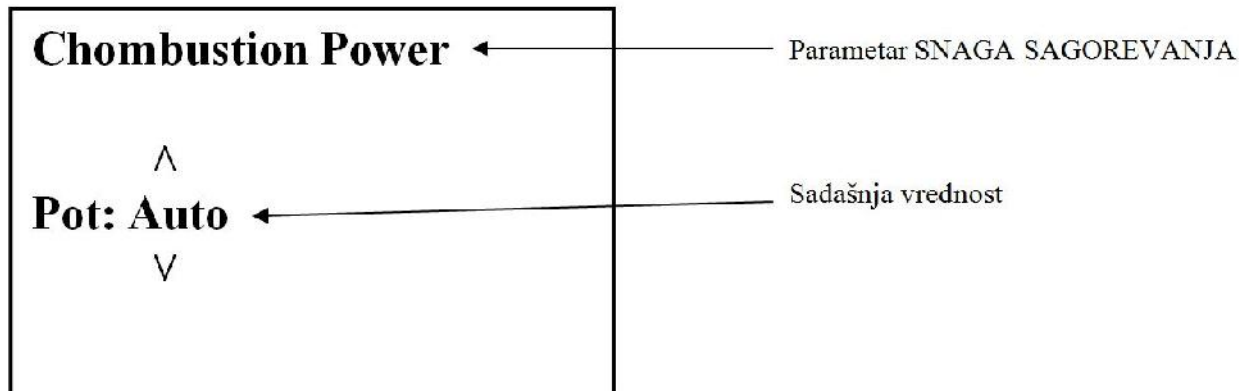









Slika 17. Prikaz i objašnjenje displeja u opciji Chombustion Power



NAPOMENA: Kod kotla COMPACT 25 maksimalna podešena snaga je 6.

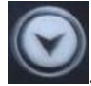


- **Promeniti zadatu temperaturu vode u kaminu.**


Postupak:

Pritisnuti taster **P3** , nakon toga na ekranu se pojavljuje padajuća lista, gde je i odmah markirana prva opcija **Chombustion Power**. Tasterima **P4** ili **P6**  , dolazite do opcije **Boiler Thermostat**. Ponovo potvrditi tasterom **P3** , zatim tasterima **P4** ili **P6**   zadajete temperaturu i na kraju ponovo potvrdite tasterom **P3** . Vratite se na osnovni prikaz displeja (**slika 14**), pritiskom na taster **P1** .

- **Promeniti ta no vreme i datum.**

Postupak:

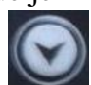Pritisnuti taster **P3** , nakon toga na ekranu se pojavljuje padajuća lista, gde je i odmah markirana prva opcija **Chombustion Power**. Tasterima **P4** ili **P6**  , dolazite do opcije **Time and Date**.

Ponovo potvrditi tasterom **P3**  nakon čega se pojavljuje prikaz na displeju

podešavanje vremena i tačnog datuma gde preko tastera **P4 ili P6**  

prelazite sa opcije na opciju, a preko tastera **P3**  potvrđujete komandu i menjate

joj vrednosti opet preko tastera **P4 ili P6**  . Kada se izabere željena vrednost

potvrđuje se tasterom **P3** . Za izlazak i vraćanje korak unazad koristite taster **P1**



- **Postaviti vremensko programiranje paljenja i gašenja kotla.**
(ovu opciju koristite SAMO AKO STE PRETHODNO POSTAVILI TAČNO VREME I DATUM)


Što se vremenskog programiranja tiče, u samoj opciji postoje dve podopcije, a to su: **Modality** i opcija **Program**.

Modality opcija služi za odabir načina programiranja, dakle da li ćete programiranje koristiti na dnevnom nivou, svaki dan posebno (**Daily**) (npr. Ponedeljak, Utorak, Sreda... Nedelja), na nedeljnom nivou (**Weekly**) (od Ponedeljka do Nedelje), i na vikend nivou (**Week-end**) (od Ponedeljka do Petka-posebno i od Subote do nedelje-posebno). Takođe, možete totalno isključiti opciju Chrono (**Disible**).

Program opcija služi za programiranje gore navedenih opcija **Daily, Weekly** i **Week-end**, odn. podešavanje tačnog vremena startovanja i prekida rada kotla.

Postupak:

Najpre, treba odlučiti kako želite programirati vreme puštanje i gašenja, da li će to biti dnevna, nedeljna ili vikend opcija. Ukoliko se odlučite za jednu od navedenih odabir ćete uraditi na sledeći način.




Pritisnuti taster **P3** , nakon toga na ekranu se pojavljuje padajući lista, gde je i


odmah markirana prva opcija **Chombustion Power**. Tasterima **P4 ili P6**  ,

dolazite do opcije **Chrono**. Ponovo potvrditi tasterom **P3**  (pojavljuju se dve

opcije **Modality** i **Program**), zatim tasterima **P4** ili **P6**   dolazite do željene


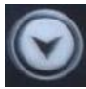
opcije **Modality** i potvrđujete je tasterom **P3** . Nakon toga, u podmeniju nailazite na opcije **Daily**, **Weekly**, **Week-end** i **Disable** (prikazano na slici 18). Tasterima **P4** ili

P6   odaberite jednu od njih i potvrdite tasterom **P3** .

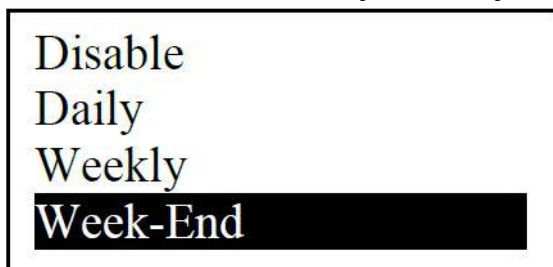

Slika 18. Prikaz displeja nakon odabira opcije MODALITY

Kada ste izabrali na in programiranja, automatski se vraćate na prikaz displeja **Modality**

i **Program**. Tasterima **P4** ili **P6**   prelazite na opciju **Program** i potvrđujete

tasterom **P3** .

U ovoj opciji programirate tačno vreme paljenja i gašenja kotla koje ste prethodno odabrali u opciji **Modality**. Primeri programiranja prikazani su na slikama 19,20 i 21.


I dalje za prelazak koristite tastere **P4** ili **P6**  , za potvrdu taster **P3** .

za potvrdu odabrane vrednosti potvrditi tasterom **P5** , i za vraćanje korak unazad


taster **P1** .

Daily	Monday	Monday
Weekly	Tuesday	ON OFF
Week-End	Wednesday	09:30 11:15 ✓
	Thursday	00:00 00:00
	Friday	00:00 00:00

Slika 19. Prikaz displeja nakon odabira opcije Daily

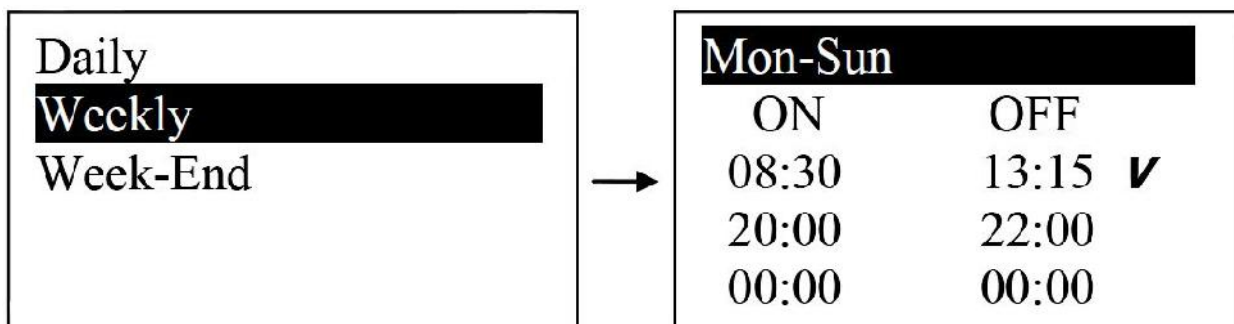

Slika 20. Prikaz displeja nakon odabira opcije Weekly

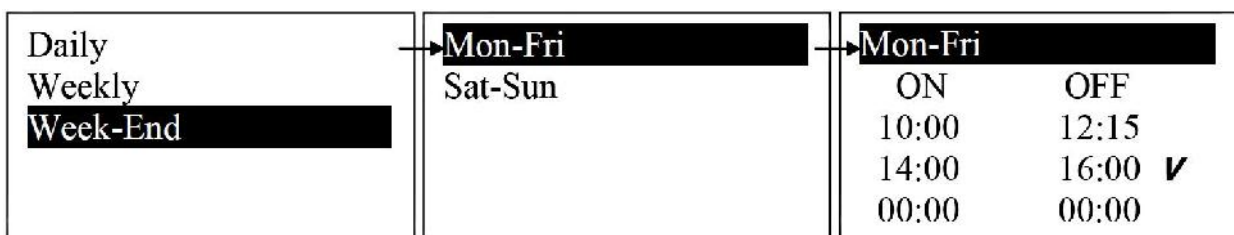












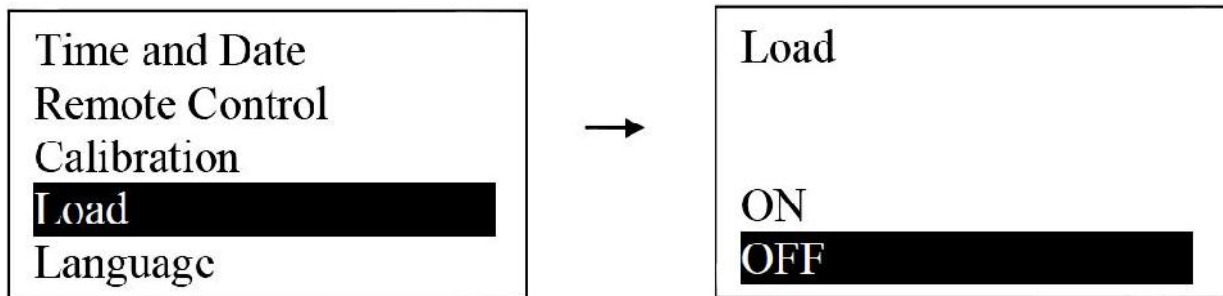
Slika 21. Prikaz displeja nakon odabira opcije Week-end

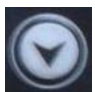8.3 Start rada kotla COMPACT 25

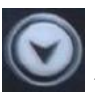- **KORAK 1:** Kotao COMPACT 25 priključen na hidraulički sistem.
- **KORAK 2:** Sipati pelet u silos.
- **KORAK 3:** Uključiti kamin, prekidač se nalazi na prednjoj strani (sa leve strane u odnosu na displej).
- **KORAK 4:** Pokrenuti dozirni sistem kako bi prva zrna peleta upala u šolju za sagorevanje. (Ovaj postupak može se primeniti samo dok je automatika u OFF režimu (slika 14 – stanje režima))


Postupak:

Pritisnuti taster **P3** , zatim tasterima **P4 ili P6**   u podmeniju dolazite do funkcije **LOAD**, potvrdite tasterom **P3** , tasterom **P4 ili P6**   pređite sa **OFF** na **ON**, potvrditi sa tasterom **P3** . Potvrdom na taster pokreće se dozer, sve dok prva zrna peleta ne počnu da upadaju u šolju za sagorevanje. Nakon toga, takođe tasterom **P4 ili P6**   prelazite sa **ON** na **OFF**, potvrditi sa tasterom **P3** . Dozator tada staje sa radom. Tasterom **P1**  izađite iz podmenija.



Slika 22. Prikaz displeja prilikom odabira funkcije LOAD

- **KORAK 5:** Startovati kotao COMPACT 25.
Postupak:



Pritisnite taster **P2**, zadržite 2-3 sekunde do zvukovnog signala. Tada na displeju piše „Ignition” (slika 14-stanje sistema). Kotao je krenuo u rad.

U uslovima kada je pelet prema standardima i kada su ispunjeni svi ostali uslovi dimnjaka i protoka vazduha, proces sagorevanja počinje za 7 do 10min.

Prilikom prve potpale treba očekivati nešto pojačan pojavu dima i oštrih mirisa sve dok fabrički premazi protiv korozije ne završe sa finalnim sušenjem odn. dogorevanjem.



Isti postupak koristimo za gašenje kotla, dakle dužim pritiskom tastera **P2** do zvukovnog signala prelazimo u gašenje kotla.



NAPOMENA: *Ovo su izmerene vrednosti tokom sertifikovanja.*

- Na automatiku može biti povezan sobni termostat. U ovom slučaju, važno je podesiti temperaturu prostorije koja je glavni parametar za rad kotla i temperaturu vode u kotlu (70°C). Kada je aktiviran rad sobnog termostata, kotao najpre ima zahtev za postizanjem temperature sobe, stoga da je ograničen zadatom temperaturom vode u njemu. Postoji mogućnost da kotao prestane sa radom pre zadate temperature sobnog termostata, u ovom slučaju treba podesiti i zadatu temperaturu vode u kotlu npr. 70°C.

Upozorenje: Obavezno izvršiti analizu dimnih gasova nakon završetka instalacije kotla. Izmeriti procenat kiseonika (O₂).

8.4 Greške prilikom startovanja i u toku rada kotla COMPACT 25.

Sve mogu e greške u po etnoj fazi rada tj. prilikom potpale mogu pa i u samom radu automatika prijavljuje na displeju. (slika 14-ALARM greška).

Oznake grešaka i objašnjenja prikazane su u slede oj tabeli.

Er01	Greška - pažljivo visoki napon 1. Takodje i sa isklju enim sistemom
Er02	Greška - pažljivo visoki napon 2. Samo ako je ventilator uklju en
Er03	Greška - Gašenje kada je temperature dimovodnih gasova ispod predvi ene.
Er04	Greška - Gašenje kada je temperature vode iznad zadate.
Er05	Greška - Gašenje kada je temperature dimovodnih gasova preko predvi ene.
Er07	Greška - kodera.Ova greška se javlja zbog nedostatka signala kodera
Er08	Greška - kodera. Ova greška se javlja u slu aju prilagodjavanja problema na broja u
Er09	Greška - Slab pritisak vode
Er10	Greška - Visok pritisak vode
Er11	Greška - pravog vremena na satu
Er12	Greška - Gašenjene nije uspelo zbog potpale
Er15	Greška - Nedostatak napona
Er17	Greška - na regulatoru protoka vazduha
Er18	Greška - Nedostatak peleta
Er39	Greška - Pokvaren senzor regulatora protoka vazduha
Er41	Greška – Nije postignut minimalni protok vazduha
Er42	Greška - Maksimalni protok vazduha iznad predvi enog.

Svi mogu i problemi i zastoji u radu ovog ure aja mogu se podeliti u dve velike grupe.

- **Grupa I.** Zastoj u radu prilikom prve potpale i to prve potpale uopšte posle kupovine kotla ili prvog kretanja u rad u toku dana.
- **Grupa II.** Zastoj koji se javlja kad je kotao ve bio u radnom procesu, na displeju je postojalo obaveštenje (Run Mode), ali posle dostizanja zadate temperature i mirovanja gubi kontinuitet sagorevanja.

Grupa I

Naj eš a signalizacija na displeju vezana za ovu vrstu grešaka je **Er12**.

Prilikom prve potpale po ugradnji kotla na hidro instalaciju treba slediti uputstva iz odeljka "**Start rada kotla COMPACT 25**".

Naro ito obratiti pažnju na dimovod (pre nik, broj lukova, dihtovanje, ...), kao i na dimnjak (pre nik, visina, izolovanost, dihtovanje revizionih otvora, zaprljanost dimnjaka, itd.).

Ako posle prvog pokušaja paljenja nema značajne pojave plamena i ozbiljnijeg porasta temperature dimnih gasova, na displeju se javlja signal da je grejač potpale aktiviran, a ipak kotao ide u fazu gašenja (Extinguishing). U ovom slučaju treba proveriti sledeće uzroke:

Mogući **uzrok 1.**

- **PROBLEM 1.** Loš kvalitet peleta. Pelet male snage, povećane vlažnosti.
- Postupak za rešavanje **PROBLEMA 1.** Uzeti pelet proverenog kvaliteta i probati.

Mogući **uzrok 2.**

- **PROBLEM 2.** Temperatura vazduha (koji je doveden kotlu za sagorevanje i potpalu) je izuzetno niska (ispod nule).
- Postupak za rešavanje **PROBLEMA 2.** Podizanje vremena predgrevanja grejača za potpalu, t_{02} , na vrednost 300 – 400 sekundi.

Mogući **uzrok 3.**

- **PROBLEM 3.** Mrežni napon na koji je priključen kotao je znatno manji od 220-230V, tako da je i snaga grejača manja.
- Postupak za rešavanje **PROBLEMA 3.** Podizanje vremena predgrevanja grejača za potpalu, t_{02} , na vrednost 300 – 400 sekundi. Ako ova mera ne daje rezultate onda priključiti mrežni ispravljač napona.

Mogući **uzrok 4.**

- **PROBLEM 4.** Količina peleta u komori za sagorevanje je nedovoljna za kretanje kotla u rad.
- Postupak za rešavanje **PROBLEMA 4.** Mogući su mehanički problemi sa pelet transporterom. Proveriti ispravnost dozatora.

Mogući **uzrok 5.**

- **PROBLEM 5.** Postoje situacije u kojima dođe do plamena, ali proverom dimnih gasova jasno se vidi da nema dovoljno peleta da kotao pređe iz faze stabilizacije (Stabilization) u radni režim (Run mode). Do ovakve pojave dolazi jer je struktura peleta (dužina, lepljivost, količina prašine, itd.) takva da vreme fiksnog nalaganja t_{03} nije dovoljno.
- Postupak za rešavanje **PROBLEMA 5.** Ovaj problem se otklanja produžavanjem vremena fiksnog nalaganja, t_{03} . Preporuka da se ovo vreme produžava oprezno, prvo za desetak, petnaest sekundi, pa ako i to nije dovoljno onda za još pet itd. Posle toga rešavanje problema kombinovati sa postupkom iz sledećeg tačke.

Mogući **uzrok 6.**

- **PROBLEM 6.** Posle faze fiksnog nalaganja (t_{03}) dođe do uspostavljanja plamena, ali u ovoj fazi t_{04} , za vreme trajanja ovog perioda nije moguće preći u stabilizaciju (Stabilization), pa plamen postaje sve slabiji tako da dođe do pada temperature dimnih gasova i gašenja (Extinguishing). Do ovog problema dolazi zbog različitog kvaliteta peleta.
- Postupak za rešavanje **PROBLEMA 6.** Smanjiti vreme t_{04} . Preporuka je da to radite oprezno. Moguće je ovaj postupak kombinovati sa rešenjem iz prethodne tačke.

Mogući **uzrok 7.**

- **PROBLEM 7.** Kotao je povezan sa sobnim termostatom. Povećanjem zadate temperature na sobnom termostatu ne dolazi do kretanja kotla u fazu potpale (Ignition) i ne dolazi do aktiviranja grejaka za potpalu.
- Postupak za rešavanje **PROBLEMA 7.** Proveriti da li je temperatura u sobi zaista manja od zadate. Takođe proveriti vremensko programiranje sobnog termostata i na kraju proveriti ispravnost sobnog termostata.

Grupa II

Najčešća signalizacija na displeju vezana za ovu vrstu grešaka je **Er03**.

Mogući **uzrok 1.**

- **PROBLEM 1.** Kotao je potpalio, bio u radnom režimu (Run mode), ali je došlo do zastoja kad je stao pa ponovo dobio zahtev za radom ili od kotlovskog termostata ili sobnog termostata. Komora za sagorevanje je u takvim situacijama puna nesagorelog peleta.
- Postupak za rešavanje **PROBLEMA 1.** Proveriti vrednosti parametara A26, Th28 i Th06. Možda je došlo do menjanja njihovih vrednosti slučajno. Parametar A26 treba da bude 1, parametar Th06 od 60 do 65, dok parameter Th 28 u svakom slučaju barem za dva stepena manji od Th06. U ovakvim slučajevima treba promeniti parametre, isprazniti komoru (šolju za sagorevanje) i startovati ponovo kotao.

Mogući **uzrok 2.**

- **PROBLEM 2.** Kotao je potpalio, ušao u radni režim (Run mode), ali vremenom dolazi do sve većeg nagomilavanja peleta po dnu komore za sagorevanje. Vremenom nesagoreli pelet popunjava komoru za sagorevanje i dolazi do smanjenja plamena i odlaska kotla u gašenje (Extinguishing).

- Postupak za rešavanje **PROBLEMA 2.** Povećati snagu ventilatora. Najbolje je povećati snagu ventilatora u svim režimima i to preko funkcije kalibracije (Calibration- Exhaust fan).

Mogući **uzrok 3.**

- **PROBLEM 3.** Kotao radi, ali u toku rada dolazi do zastoja i signalizacije na displeju Modulation, a zatim i sigurnosnog gašenja (Extingishing). Na kraju displej signalizira grešku Er05.
- Postupak za rešavanje **PROBLEMA 3.** Do ovoga dolazi jer su dimni gasovi prevelikih temperatura. Najčešći razlozi su zaprljanost kotla, prejak dimnjak, prejaki ventilatori u radnom režimu, preveliko nalaganje peleta, karakteristike peleta, itd. Zastoj je moguće otkloniti prilagodbom nekog od parametara ili povećanjem parametara za odlazak kotla u modulaciju i sigurnosno gašenje zbog dimnih gasova, a to su parametri Th07, Th08.

8.5 Održavanje i iš enje kotla COMPACT 25.


Kotao COMPACT 25 zahteva svakodnevno i periodično iš enje.

- Svakodnevno iš enje se odnosi i na prostor samog ložišta odn. šolje za sagorevanje gde stalnim izbacivanjem pepela omogućavamo bolji rad elektro grejača za potpalu i bolje sagorevanje tj.ve u količinu vazduha kroz proreze na šolji. Tako će pepeo već u toku dana počinje da se taloži na podu, prostoru oko samog ložišta. Pri prosečnim parametrima sagorevanja 100kg peleta proizvede 1kg pepela.
- Na svakih 3 do 4 dana potrebno je oistiti samu šolju za sagorevanje (**slika 23**). Tako će potrebno je oistiti naslage na zidovima samog ložišta. Ovim dobijamo bolji stepen prenosa jer jedan milimetar naslaga katrana i čašmanjanja smanjuje provodnost za 5%.
- Jednom u dve nedelje potrebno je otvoriti i gornji poklopac za iš enje, izvaditi turbulatore i sa celog tada dostupnog dela kotla skinuti katran i čašmanjanja (**slika 23**). Sve što se tada skinje pokupi se kroz samo ložište. Tako će u tom periodu treba skinuti i dimnjaču sa zadnje strane kotla sa koje treba oistiti pepeo i garež (**NAPOMENA: Obratiti pažnju na sondu dimovodnih gasova prilikom skidanja dimnjače**).

Ukoliko se u kotlu, tokom korišćenja javi kondenzacija, potrebno je pokupiti kondenzat, a ceo kotao iznutra premazati baznim sredstvima za iš enje ili barem vodenim rastvorom grafičevinskog krečnina. Na taj način se vrši neutralizacija kiselina usled kondenzacije.



Pri održavanju i servisiranju kotla, kotao isključiti sa napajanja.

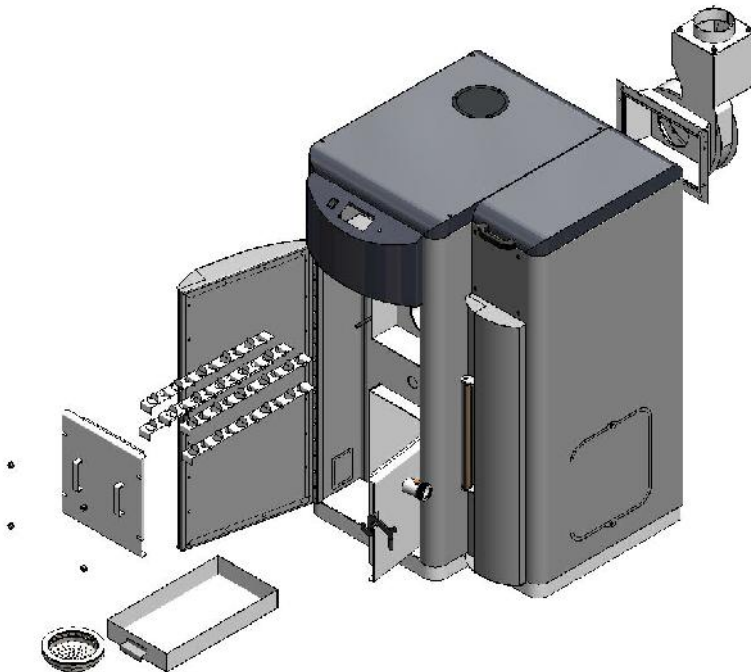

Slika 23. Prikaz elemenata koji se rasklapaju prilikom iš enja



Na ovaj na in obavezno konzervirati kotao na kraju grejne sezone. U toj situaciji zatvoriti i sve otvore na kotlu da ne dodje do cirkulacije vazduha kroz kotao jer i tako može do i do pojave vlage u kotlu.



Održavanje kotla je jedan od najbitnih faktora za duži radni vek kotla. Naro ito je bitno da u vansezoni kotao bude o iš en i da se izvrši *neutralizacija* kiselina na ve opisan na in.

8.6 Natpisna pločica

Natpisna pločica je nalepljena na dobro vidljivo mesto na kotlu i sadrži sledeće (videti sliku u tački NALEPNICE):

1. Tehnički podaci sa nalepnice:

- Proizvođa (Radijator inženjering)
- Serijski broj kotla (primer: N°:161216020)
- Godina proizvodnje (primer: 2016)
- Tip kotla (COMPACT 25)
- Nazivna toplotna snaga kotla (22,51kW)
- Područje upotrebe toplotne snage (6,35 – 22,51 kW)
- Potrebna promaja dimnjaka (20Pa)
- Električni napon (230V)
- Frekvencija (50Hz)
- Jačina struje (3,4A)
- Nazivna el. snaga (590W)
- Maksimalna dodatna el. snaga (200W)
- Ukupna el.snaga (790W)
- Masa kotla (382kg)
- Količina vode u kotlu (78L)
- Peta klasa kotla po EN 303-5(5)
- Gorivo (C1)
- Maksimalni pritisak (3bar)
- Maksimalna temperatura (90°C)

2. Nalepnica uvoznika

3. OEEO

4. Ostale oznake na kotlu



8.7 Izjave



IZJAVA O USAGLAŠENOSTI

U skladu sa direktivom 2006/42/EC o mašinama
Prilog II, deo 1, odeljak A

U ime: "RADIJATOR Inženjering-a" d.o.o. /Živojina Lazića Solunca 6, 36000 Kraljevo, Srbija

IZJAVLJUJE

S potpunom odgovornošću da:

Grejni kotlovi na pelet serije COMPACT nominalne toplotne snage: COMPACT 25 - 22,51kW.

ispunjavaju zahteve: Direktive 2006/42/EC o mašinama (stupila na snagu 29/06/2006),

i zahteve sledećih direktiva i propisa:

1. Direktive 2004/108/EC Evropskog Parlamenta i Saveta od 5. Decembra 2004 o približavanju zakonodavstava država članica u vezi elektromagnetne kompatibilnosti (tekst značajan za EEP) i stavljanja van snage Direktive 89/336/EEC;
2. Direktive 2006/95/EC Evropskog Parlamenta i Saveta od 12. Decembra 2006 o usklađivanju zakonodavstava država članica u vezi električne opreme namenjene za upotrebu u okviru određenih granica napona (kodifikovana verzija) (tekst značajan za EEP) i stavljanja van snage direktive 73/23/EEC

Uređaj je usaglašen sa sledećim EU standardom:
EN 303-5:2012,

i sledećim EN i tehničkim zahtevima: EN 60730-1.

Mesto: Kraljevo
Datum: 2016-02-01



Potpis: *Milan Janić*
Milan Janić, generalni direktor

8.8 Nalepnica

Na kotlu COMPACT 25 nalaze se nalepnice za označavanje priključaka kao i nalepnice za opasnost od strujnog udara, nalepnice za šemu povezivanja i dr.

Nalepnice koje označavaju priključke za povezivanje instalacije:


1. Nalepnica (Potisni vod) 32mm x 74mm



2. Nalepnica (Povratni vod) 32mm x 74mm



3. Nalepnica (Šema povezivanja) 148mm x 210mm

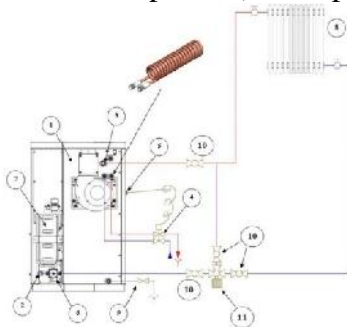

Šema 12: Hidraulički šema

Opis slika 12:

1. Kotao COMPACT25;
2. Priključak za povratni hladni vod;
3. Priključak za potisni topli vod;
4. Ventil termičkog odigranja;
5. Šema ventila termičkog odigranja;
6. Cirkulacijska pumpa;
7. Ekspanzijski posuda (HE);
8. Izmjenjivač – radiator;
9. Ventil za pomoćno i pražnjenje;
10. Ventil;
11. Mlečni ventil.

Nalepnice koje označavaju prisustvo struje, visokog napona i opasnosti:

1. Nalepnica (Ulaz za sniženim naponom 12V) 60mm x 80mm



2. Nalepnica (Napon opasan po život - VE A) 100mm x 150mm



3. Nalepnica (Uzemljenje) 20mm x 30mm



4. Nalepnica (Prisustvo napona)



Nalepnice koje označavaju upozorenje:

1. Nalepnica (Izloženi pokretni delovi mogu izazvati povrede) 30mm x 80mm



2. Nalepnica (Obavezno puštanje u rad od strane ovlašćenog servisa) 65mm x 247mm



3. Nalepnica (Pažnja)



4. Nalepnica (Otpad)



Nalepnice sa tehni kim podacima:



Živojina Lazića Solunca br.6
Grđica-36000 Kraljevo
Srbija

N^o 161216020
Compact 25



H005 15



Živojina Lazića Solunca br.6
Grđica-36000 Kraljevo, Srbija
e-mail: radijator@radijator.rs
www.radijator.rs

Pressure max	Temp. max
Max. pritisak	Max. temp.
3 bar / 300 kPa	90°C

N^o: 161216020

Godina/Year: 2016

PROIZVOĐAČ MANUFACTURER	Radijator Inženjering
TIP - MODEL TYPE - MODEL	Compact 25
NAZIVNA TOPLOTNA SNAGA KOTLA NOMINAL HEAT OUTPUT POWER	22.51 kW
PODRUČJE UPOTREBE TOPLOTNE SNAGE HEAT OUTPUT RANGE	6.35 - 22.51 kW
POTREBNA PROMAJA DIMNJAKA REQUIREMENT AIR FLUE	20 Pa
ELEKTRIČNI NAPON VOLTAGE	230 V
FREKVENCIJA FREQUENCY	50 Hz
JACINA STRUJE CURRENT	3.4 A
NAZIVNA EL. SNAGA NOMINAL ELECTRICAL POWER	590 W
MAX. DODATNA EL. SNAGA MAX. EXTENDED EL. POWER	200 W
UKUPNA EL. SNAGA ALL EL. POWER	790 W
MASA KOTLA MASS OF BOILER	382 Kg
ZAPREMINA VODE U KOTLU VOLUME OF WATER IN THE BOILER	78 L
KLASA KOTLA PO EN 303-5:2012 CLASS OF BOILER ACCORDING TO EN 303-5:2012	5
GORIVO FUEL	C1



8.9 Proizvođa



RADIJATOR D.O.O.
Živojina Lazića Solunca br.6
36000 Kraljevo, Srbija

9. Garancija

1. Radijator inženjering pokriva različite garancijske periode za različite delove (što je navedeno u daljem tekstu) samo ako su ispunjeni sledeći uslovi garancije:

- 1.1. Kotao mora biti priključen po navedenim hidrauličkim šemama iz tehničkog uputstva, naročito obratiti pažnju na montažu kotla na dimnjak i njegovo pozicioniranje. **(videti tačku 3.)**
- 1.2. Kotao mora biti priključen na dimnjak propisanog poprečnog preseka, karakteristika izolacije i visine. **(videti tačku 3.4)**
- 1.3. Dimovod od kotla do dimnjaka mora biti izveden po tehničkom uputstvu.
- 1.4. Kod kotla moraju biti izvršena i navedena elektro-priključenja iz tehničkog uputstva, naročito se misli na karakteristike sobnog termostata, karakteristike mrežnog napona koji mora biti u određenim granicama.
- 1.5. Korisnik mora da se pridržava navedenih uputstava o korišćenju i održavanju. **(videti tačku 8.)**

2. Garancijska izjava

Izjavljujemo:

- da proizvod ima propisana i deklarirana kvalitetna svojstva. Obavezujemo se, da ćemo na zahtev kupca ako pravovremeno u garancijskom roku podnese zahtev za popravku, o svakom trošku izvršiti sve popravke kvarova, tako da će proizvod raditi u skladu sa deklariranim svojstvima,
- da će proizvod u garancijskom roku raditi besprekorno ako se budu poštovala uputstva za upotrebu, rad i montažu,
- da ćemo u garancijskom roku biti spremni da otklonimo sve kvarove na proizvodu i držati na zalihama sve potrebne rezervne delove,
- **garancijski rok počinje od DANA KUPOVINE I TRAJE 60 MESECI ILI 72MESECA OD DATUMA PROIZVODNJE (datum proizvodnje nalazi se na nalepnici sa zadnje strane kotla),**
- **GARANCIJA OD 60 MESECI VAŽI SAMO AKO SE KOTAO REDOVNO SERVISIRA OD STRANE CENTRALNOG SERIVISA RADIJATOR INŽINJERINGA u periodu naznačenom za isti (dalje u tekstu),**
- **garancija važi ako je garantni list overen od strane prodavca i ako je upisan datum kupovine i priložen račun. TAKO JE BITNO JE IMATI I NALOG ZA PUŠTANJE U RAD. (overen od strane ovlašćenog servisa).**

3. Garancijski period od jedne godine važi za sledeće delove:

- za ležajeve,
- elektro grejača za potpalu.

4. Garancijski period od dve godine važi za sledeće delove:

- ventilator,
- automatiku kotla sa sigurnosnim termostatom i ostalim elektro delovima,
- sondu dimovodnih gasova,
- sondu temperature kotlovske vode,
- motor reduktor,
- pužne spirale,
- šolja za sagorevanje od INOX-a,
- pepeljare,
- turbulatore,
- elektro konektore,
- izolacijske materijale na vratima i otvorima za pušnice.

5. Garancijski rok ne važi:

- ukoliko se posle svake grejne sezone ne odradi redovan servis,
- za zamenu delova kod redovnog godišnjeg održavanja u skladu sa uputstvima,
- kod kvarova koje je na osnovu kupac zbog nestručnog rukovanja proizvodom,
- kod mehaničkih kvarova nastalih prilikom transporta i prilikom korišćenja (vrsti predmeti),
- ako je proizvod instaliran nestručno, suprotno važećim propisima iz tog područja,
- ukoliko se utvrdi da hidraulička šema nije uređena po preporukama firme „Radijator inženjering”,
- ako je kupac koristio proizvod iznad deklariranih svojstava i u normalnim okolnostima.

6. Garancijski rok prestaje da važi:

- ako se ustanovi da je kvarove otklanjala neovlašćena osoba ili neovlašćeni servis,
- ako kod popravke nisu bili upotrebljeni i ugrađeni originalni delovi,
- ukoliko se na redovnom servisu bude utvrdilo da izmenjivački deo kotla nije redovno održavan odn. pušen,
- kad ističe garancijski rok.

7. Kod prijave kvarova obavezno je dati sledeće podatke:

- naziv i tip proizvoda,
- datum kupovine,
- fabrički ili radionički broj kotla,
- kratak opis kvara, odnosno nedostatka,
- tačnu adresu i kontakt telefon, mejl.

8. Redovan godišnji servis

Redovan servis se odrađuje na kraju svake grejne sezone u period od 15.4. do 31.8. i naplaćuje se utvrđenim cenovnikom firme "Radijator Inženjering". Servisni postupak tehničkih lica koja obavljaju redovne godišnje servise, a koja su od strane proizvođača ovlašćena za to, obuhvataju sledeće operacije:



NAPOMENA: Serviser je dužan da pregleda sve navedene delove (sa liste) dozatora i izmenjivača, i ukoliko dođe do zamene bilo kojih delova na iste korisnik dobija gore navedenu garanciju kao i garanciju na još 12 meseci na telo kotla (izmenjivača). Garancija se može produžiti do 5 god. od datuma puštanja u rad. Servis i produženje servisa može da obavlja lice koje šalje centralni servis "Radijator inženjering"-a. Na nezamenjene delove posle odrađeno servisa garancija ne važi.

- Demontaža pelet transportera, provera ispravnosti istog i provera ispravnosti ležaja i podmazivanje;
- Ležaj ne sme da ima otežano okretanje. U suprotnom ležaj se menja. Ukoliko se utvrdi da je do oštećenja ležaja došlo zbog upadanja vrstog predmeta u pelet transporter (zbog greške korisnika ili proizvođača peleta), Radijator inženjering naplaćuje vrednost ležaja.
- Demontaža šolje za sagorevanje od ložišta i išćenje prostora ložišta ispod šolje. Provera stanja šolje;
- Izvaditi sondu dimnih gasova i oistiti je od naslaga;
- Provera ventilatora;
- Provera dihtovanja vrata;
- Provera održavanja kotlovskog izmenjivača;
- išćenje cevnih izmenjivača;
- Skidanje dimnjaka i išćenje zadnjeg dela izmenjivača;
- Skidanje i išćenje turbulatora i provera stanja istih;
- Provera stanja sigurnosnih elemenata (sigurnosnog ventila i ventila za odzraku).

Contents:

1. Important warning;
 - 1.1 Minimum distance from flammable materials;
2. Description of the boiler COMPACT 25;
3. Assembly;
 - 3.1 General warnings;
 - 3.2 Measures and safety devices for boiler COMPACT 25;
 - 3.3 Boiler room;
 - 3.4 Instalation of boiler COMPACT 25 onto chimney;
4. Cross-section of boiler COMPACT 25 description of boiler heating stove elements;
5. Schematic connection of automation;
6. Table of technical data;
7. Hydraulic scheme;
8. COMPACT 25 operation and maintenance;
 - 8.1 Control panel;
 - 8.2 Short manual for automatic control;
 - 8.3 Start of work of boiler COMPACT 25;
 - 8.4 Mistakes during ignition and start of boiler COMPACT 25;
 - 8.5 Maintenance of boiler COMPACT 25;
 - 8.6 Name plate;
 - 8.7 Declaration;
 - 8.8 Sticker;
 - 8.9 Manufactured;
9. Warranty.

1. Important warnings

GENERAL WARNINGS

- After the removing of the package check for the completeness of the delivery, in the case of defects, please contact the dealer who sold the boiler.
- The boiler must be used solely for the purpose envisaged by the manufacturer. Any liability of the manufacturer is excluded for damages to persons, animals or things, in case of errors during installation, regulation, maintenance or improper use.
- In case of leakage of water the device should be switched from the mains supply, close the water supply and inform the authorized service and authorized installers.
- This manual is an integral part of the device and must be kept with care and must always follow the device even in case of change of owner or user, or in case of connection to another installation. In case of damage or failure look for a new copy of an authorized dealer.

IMPORTANT WARNINGS

We emphasize that the use of the device working on bio-mass and solid fuel, having contact with electricity and water, demands respect and security measures such as:

- The use of the boiler by the children and people with limited capabilities without accompaniment is not allowed.
- It is forbidden to use boiler installations operating at temperatures higher than 110 ° C, and pressure greater than 3 bar.
- It is not allowed to use easily inflammable fuels (alcohol, oil).
- It is forbidden to store easily flammable materials near the boiler and close the door for firing. The ashes must be disposed off in closed and non-flammable containers.
- It is prohibited to incinerate waste materials which cause combustion flame or explosion hazard (eg. plastic bags, sawdust, coal dust, mud, etc.).
- It is prohibited to any person or technical intervention or cleaning the boiler before it is switched off the main power supply switch, the setting on the device (0) "off".
- It is prohibited to change the safety elements.
- It is forbidden to close the vents in the room where the boiler is located. Air vents are needed for proper combustion.
- No exposure to atmospheric turbulents. The boiler is not designed for outdoor use and contains no anti-freeze system.
- It is forbidden to turn off the boiler when the outside temperature can drop below zero (to prevent freezing).
- It is forbidden to put fingers or other objects through the openings in the outer parts of the shell of the unit. Inside the shell there are electrical components and wires under voltage and devices that are mechanically driven (engine gearbox and fan). Contact with them may result in electric shock and mechanical injuries.
- In the case of intervention on any electrical device of boiler, switch off all the electrical wiring and so it is removed from the mains socket.

- Work with of boiler unit is forbidden for people with special needs (including children) to physical and mental health, except under the supervision of a guardian, and the people who are responsible for their behavior.
- Children must be supervised by a guardian as they do not play with the appliance boiler.
- If the damaged power protection, must be replaced in the factory and serviced by an authorized dealer or qualified people to avoid the risk of electric shock.

1.1 Minimum distance from flammable materials

- Provide adequate distance from flammable materials, if necessary to ensure the protection of the same.
- Minimum distance from flammable materials is required by law - please inquire of professionals who deal with heating and Emission effluents.
- The minimum distance of the boiler and flue pipe gas from the low and averagely combustibile materials should be at least 100mm.
- Minimum distance from flammable materials is 200mm, and the same goes for materials whose flammability is not known.



Risk of fire!

- Storage of flammable materials and liquids in the vicinity of the boiler is prohibited.
- Be sure to warn users about the required minimum distance of combustibile material from the boiler.

Combustibility of Construction materials	
A ... Noncombu-stible	asbestos, stone, building stone, ceramic wall tiles, terracotta, plaster, screed (without organic additives)
B... Non easily flammable	Gypsum cardboard slab, glass fiber slab of ACUMINE, ISOMINE, ROYALITE, LIGNOS, VELOX, HERACLITE
C1.. Low combustibile	beech and oak wood, composite wood, file, slab of HOBREX, Versalite, umakart
C2 ... Averagely combustibile	wood of pine, yew and pine, composite materials
C3... Easily combustibile	Asphalt, paperboard, cellulose materials, chipboard, cork, polyurethane, polystyrene, polypropylene, polyethylene fiber floor

2. Description of boiler **COMPACT 25**

COMPACT 25 is designed for burning wood pellets. Wood pellets are produced from 100 % cellulose. Wood residues under high pressure are compressed into pellets of 6 mm in diameter and in length of 2- 3cm. Pellets should be stored correctly in a dry place to ensure efficient combustion. Boilers **COMPACT 25** use pellet of 6mm diameter, of 5 -30mm length and humidity up to 10 % manufactured in accordance with **EN 14962-2**. If the pellet is not specified by the standard or during storage or transport there is the deterioration of its quality, company "RADIJATOR INZENJERING" as the manufacturer can not take the responsibility for the poor performance. In such situations, errors occur in the ignition, pellet accumulation and falling out from the combustion space, insufficient power etc.

COMPACT 25 is installed in the boiler room, but it has an advantage in the situations where more compacted dimensions are needed. Total width is 870 mm, and by easy disassembly it can be transformed into two parts, the boiler part of 580 mm width and the silo part of 290 mm.

It is mounted on the classical minimum diameter chimney of 140 mm. The chimney must meet all other standards as used in traditional boilers, which is more discussed in the Installation Chapter.

Nominal power of **COMPACT 25** according to EN 303 -5 is 22,51 kW.

Within the boiler the corresponding circulation pump and expansion vessel of 10 liters are installed. The boiler is supplied with a mechanical safety and relief valves.

The boiler has a heat exchanger for installation of valves for thermal swelling security.

Burning of pellets is performed on the principle of filling the combustion chamber. The whole process is carried out by automation system that allows selection of one of five levels of power. It is possible to connect the room thermostat and program the periods of start of work and standby cycles for 7 days.

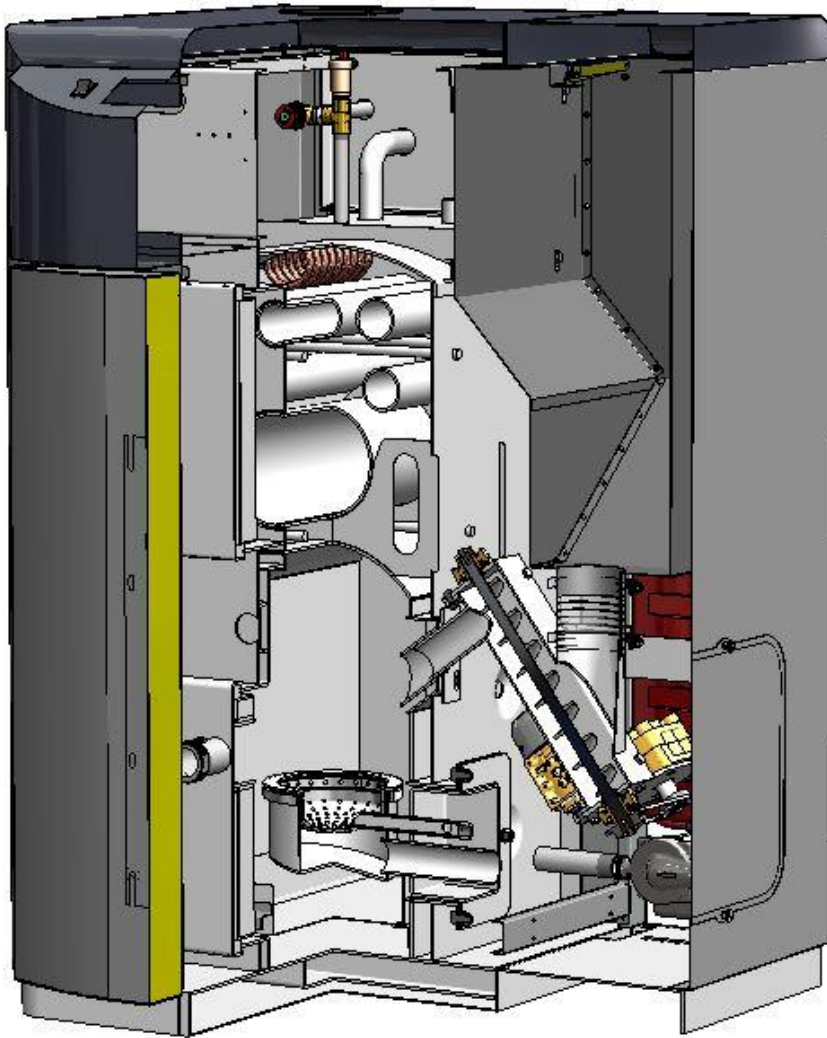


Figure 1. Cross-section of the body of the boiler

CONSTRUCTION

Boiler heat exchanger is the tube three draft heat exchanger and it is constructed in the materials which, according to thickness and quality of the materials, conform to the Standard EN 303 - 5. Only by the dimensions factory Compact unit is adjusted to manipulation in small spaces. It is very important that, if necessary, the boiler unit can be disassembled on the site into separate assemblies of the boiler heat exchanger, silo and the pellet conveyor. At that time the circulation pump must be removed as well as the expansion vessel.

Pellet conveyor consists of a screw shaft made of stainless steel and the drive gear motor of high torque of 50Nm and very low installed power of 40W.

Silo has the capacity of 50 kg of pellet. Combustion chamber is made of fireproof material. Cross section of the boiler and the aforementioned parts can be seen in **figure 1**.

3. Assembly

3.1 General warnings

The boiler must be set correctly for proper operation!

The boiler is supplied with an external coating containing insulation, 30mm thick. The position of the silo and the mechanism for transport of pellets is, by default, always on the right side in regard to the boiler, and it is impossible to change it onto the left. Electrical connections easy switch ON easy OFF, and reassembly is not necessary personnel specialized electrical field.



Maximum operating pressure of the boiler is 3 bar, 1 bar the minimum and maximum operating temperature of the boiler is 110 C.



Boiler with one fan, automation, electric ignition and pump and all of these devices use 230V power, so that incorrect installation and careless handling may endanger human life electrocution.



Solid fuel boiler and forced draft should be installed according to valid standards and legal regulations. Any mechanical or electrical change in the design or installation shall be deemed a violation of guarantee conditions and will lead to its distortion.



In an assembly the boiler should be properly protected against the excessive overpressure and overheating.



When installing the hydraulic installation of the boiler must be provided in a prescribed way of overdraft maximum operating temperature and pressure.



For the proper installation the plumber/installer is responsible.



The manufacturer (Radijator inženjering) does not take any responsibility coming from the incorrect installation of the boiler.



When any intervention on the electrical devices Compact 25, the whole system off the main power supply.

The basic requirements to be complied with during the installation:

- The boiler can be connected to an open system of central heating, but also to a closed system of central heating. In case of connection to a closed system, it is recommended to

install the valve for thermal insurance, which is determined by the respective laws of each state in which the boiler is connected.

- The boiler must be located at a safe distance from combustible materials. The boiler must be far enough from possible obstacles in the boiler room for cleaning and maintenance. See **figure 8**.
- Electric power for the boiler is 230V, 50Hz and connection of all devices that the boiler has should be done according to valid regulations and connection is done by a person with proper authority.
- Connection to the chimney also done according to the binding regulations and manufacturer's recommendations as can be seen below.

3.2 Measures and safety devices for boilers COMPACT 25;

For safe operation of boiler it is necessary to assemble and maintain the following elements in working condition:

- **Pressure safety valve, air vent and gauge vent;**
- **The valve of thermal safety by swelling;**
- **Thermostats in the automation of the boiler COMPACT 25.**

Pressure safety valve (figure 2), air vent (figure 3) and gauge vent (figure 4):



Figure 2. Pressure safety valve



Figure 3. Air vent



Figure 4. Gauge vent

- Pressure safety valve (**Figure 2**) factory is mounted on boiler **COMPACT 25** and must be of nominal diameter of 1/2 inch calibrated to a maximum of 3 bars. This security element which belongs to the group of pressure limiters must be of such construction to withstand short-term overdrafts and temperatures and pressure as well as the content in the liquid glycol for heating. This safety element must be subjected to periodic re-calibration, of which the investor, i.e. the user of the boiler must have valid documentation.
- Recommend and install a pressure gauge (**Figure 4**) the hydraulic installation.
- Safety valve must be mounted on the highest point directly to the boiler and the boiler without any pipeline or any other elements in between. For this purpose there is a specially designed connector (see picture). Any reduction in the diameter of the connector during servicing and assembly of a new safety valve is strictly forbidden.

- Drain or exhaust of the safety valves must be of pipes with a diameter at least equal to the nominal diameter of the outlet part of the valve. You are allowed to use up its production of an arc of radius $r > 3d$.
- The safety valve must have a nameplate and the following information on it:
 - Name of manufacture;
 - Designation of type of safety valve / year of testing;
 - Nominal flow rate;
 - Data for which thermal effect the safety valve is set;
 - The highest opening pressure 3 bars.
- It is obligatory to check the correct functioning at regular intervals as well as the re-calibration by certified companies. These responsibilities are carried out in accordance with the law of every country in which the boiler is assembled. Always keep the written documentation of the last calibration data for the safety valve.
- On the return line assemble at least another pressure safety valve.
- Along with the pressure safety valve, the same security group includes vent valve (**Figure 3**). On this unit there are two such valves. One is on the highest point of the boiler and the other at the highest point of the collector at the point of branching pipe hot water and expansion vessel.

The valve of thermal safety by swelling (Figure 5)



Figure 5. The valve of thermal safety by swelling


This safety element also has a role of a limiter of temperature. Below it will be marked with the abbreviation VTO.

- In some extremely dangerous situations in the transformation of water into vapor is such that the pressure safety valves are not sufficient to ensure the safety of the hydraulic system. For this reason, the installation of VTO is mandatory. Depending on the regulations of the countries in which the boiler is assembled, it is necessary to install the VTO only for the determined higher powers or for each power of a boiler it is the obligatory to instal the VTO.
- Place the installation is shown in the Assembly diagram of boiler onto the installation in **Figure 6**. The boiler is supplied with a copper coil so it is necessary to use the VTO with the exchanger, as shown in **Figure 6**. Cold sanitary water is brought to the VTO. When the VTO-probe has the information that the temperature is over 95 degrees the VTO is opened and water flows through copper coil. After some time the temperature of water in boiler returns to its normal state.


- One connection of coil is used for VTO and the other for draining of water that has passed through the coil. The choice of either connection; for VTO or for the discharge is irrelevant. It is necessary to follow the installation instructions provided by the manufacturer of the VTO.
- Be sure to check up, in certain periods of time, the functioning of the VTO.
- As stated above one end of the VTO is for the mounting on the exchanger of the boiler, and the other is supplied with cold water under pressure. It is particularly important that the water flow is unobstructed even when the electricity is switched off.



If it is impossible to provide the inflow of cold sanitary water at the time of electricity switch off, the boiler must be connected onto the open system.

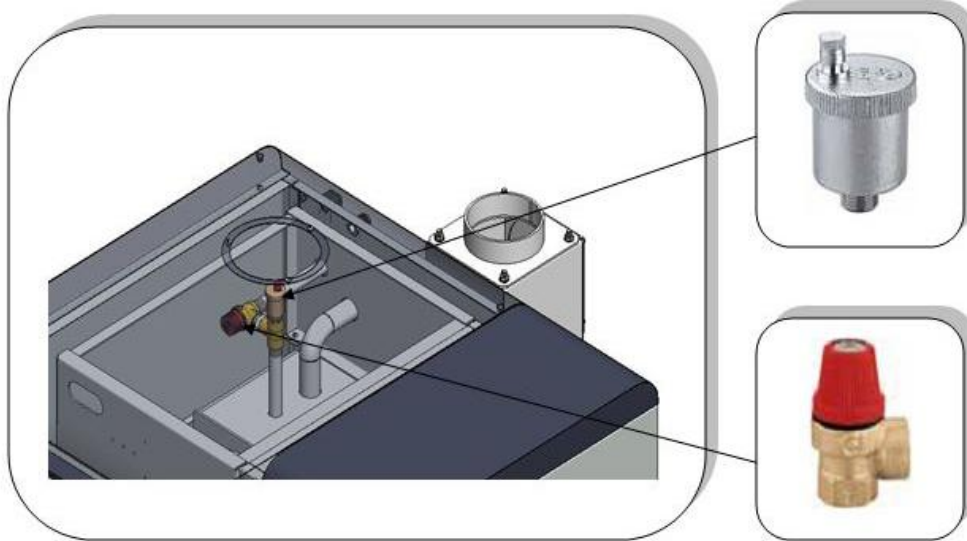

Factory- installed safety elements

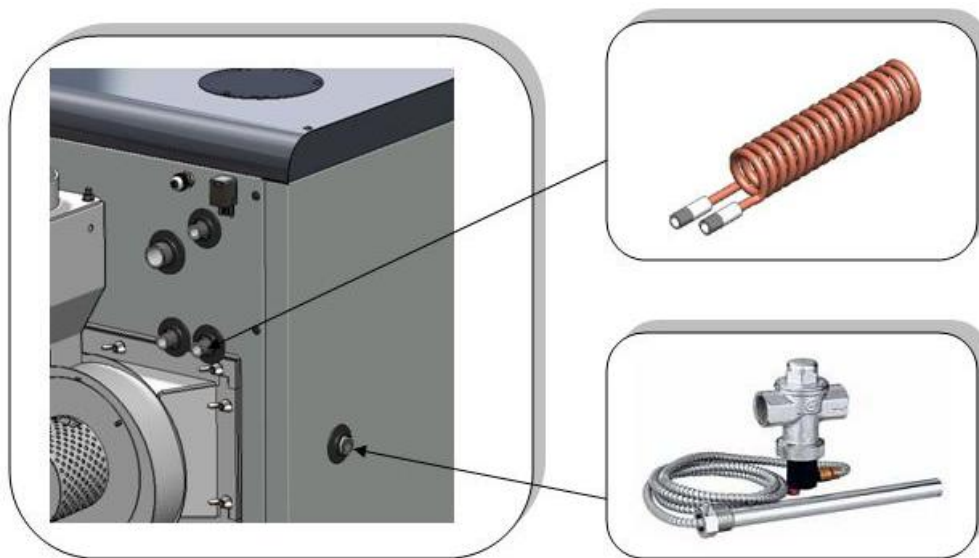

Display of thermal security (required in the case of closed circuit heating)

Figure 6. Display of assembly of security elements

Thermostats in the automation of the boiler (*Figure 7*)

Within the automation itself that leads the combustion process and influences the work of two cycles of heating, there are two thermostats. Both are of similar construction as the thermostat shown in **figure 7** and they have safety functions as limiters of the temperature of water in the boiler. Because of the safety role in the functioning of the boiler, both thermostats have the independent probes for measuring of water temperature.

The first thermostat is the so-called „working thermostat” work and it serves to limit the temperature to a level the user wants. Another thermostat is the „safety thermostat” because it stops the operation of the fan which favors the flame, and adds a new energy. Safety temperature is limited to 95 degrees Celsius.



It is very important to connect the pump for heating through automation for safety reasons. When the temperature of water in the boiler reaches the critical value of 95 degrees the fan stops working, but the pump is necessarily switched on to exchange the heat of water through radiators.

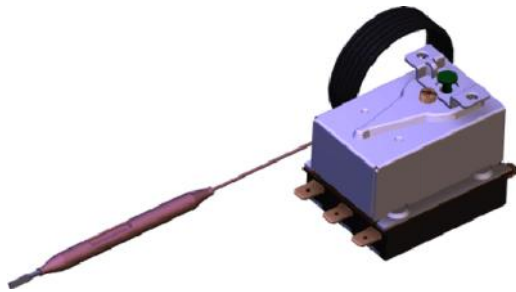


Figure 7. Thermostat on automatic

3.3 Boiler room

Boiler room must be secured against freezing.

The support surface of the boiler in the boiler room must be of non-combustible material. Recommended distance of all four sides of the boiler in relation to the boiler walls or other solid body (water heater, etc.) are shown in **Figure 8**. These values allow a safe distance access when firing, sufficient space for cleaning and easy access to fan and valve for filling and emptying. Boiler at its left hand side should be away from the wall 200 mm i.e. as much as needed for the connection of valves for thermal safety by over flow. If the valve is not to be installed then the space can be smaller. The flap handle for firing is removable and can be placed either on the left or right side of the boiler. The space on the right side of the boiler, which is recommended to be at least 1000mm from the silos is important because after cleaning the boiler the user then goes and pulls out the ashtray from the back of the firebox. **Boiler room must have sufficient ventilation holes for fresh air as well as for the outlet of the exhaust air!**

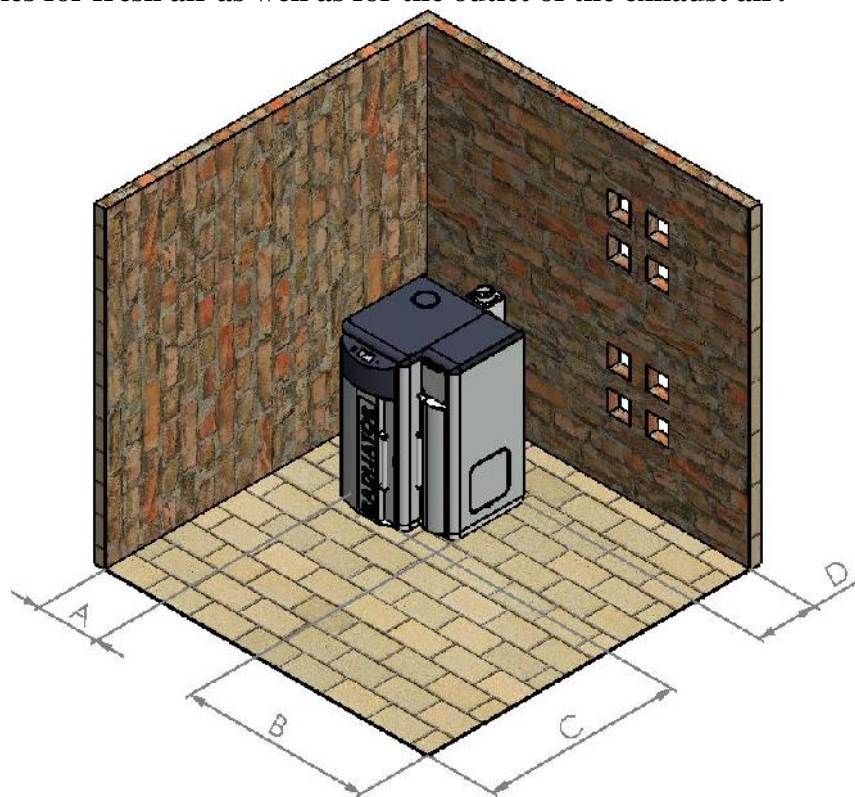


Figure 8. Positioning of boiler in the Boiler room

Type of boiler	DIMENSIONS			
	A (mm)	B (mm)	C (mm)	D (mm)
COMPACT 25	200	1000	1000	800

Total space of this openings is minimum 150cm² fro the boilers of the power of 50kW and for the power over 50kW the space must be larger for another 2cm² per 1kW.

$$A = 150 \text{ cm}^2 + \frac{2 \text{ cm}^2}{\text{kW}} \times (\sum Q_n - 50 \text{ kW}) \quad \sum Q_n = \text{possible power of over } 50 \text{ kW}.$$


The lack of sufficient ventilation in the boiler room can cause more problems in the work of boiler. Main problem is the inability to achieve high output water temperature i.e. the lack of maximum power which leads to condensation in the boiler.

- Take into account the required minimum space required for access and security elements to carry out cleaning operations.
- Determine whether the degree of electrical protection is in accordance with the characteristics of the room where the boiler will be located.
- No exposure to atmospheric influences. The boiler itself is not anticipated for outdoor use and contains no anti-freeze system.
- It is forbidden to close the vents in the boiler room in which the openings are necessary for proper combustion.

3.4 Connection to the chimney

Boiler **COMPACT 25** works with forced draft and is under the influence of fan, but we also need to respect the rules for the selection of the chimney as it is a boiler with mild potpritiskom in fireplace to another fuel, such as fuel oil, for example. The cross-section of the chimney should be 140 mm (**Figure 9**). Contrarily it may cause a malfunction, especially in the phase of ignition mode and operation in the regime of solid fuel.

It is recommended that the diameter of the chimney is at least equal to the diameter of the boiler flue outlet, minimum height of 7 to 8 meters, depending on the coverage of the chimney by some other high buildings next it. Most optimal is setting the boiler chimney is as shown in the drawing.

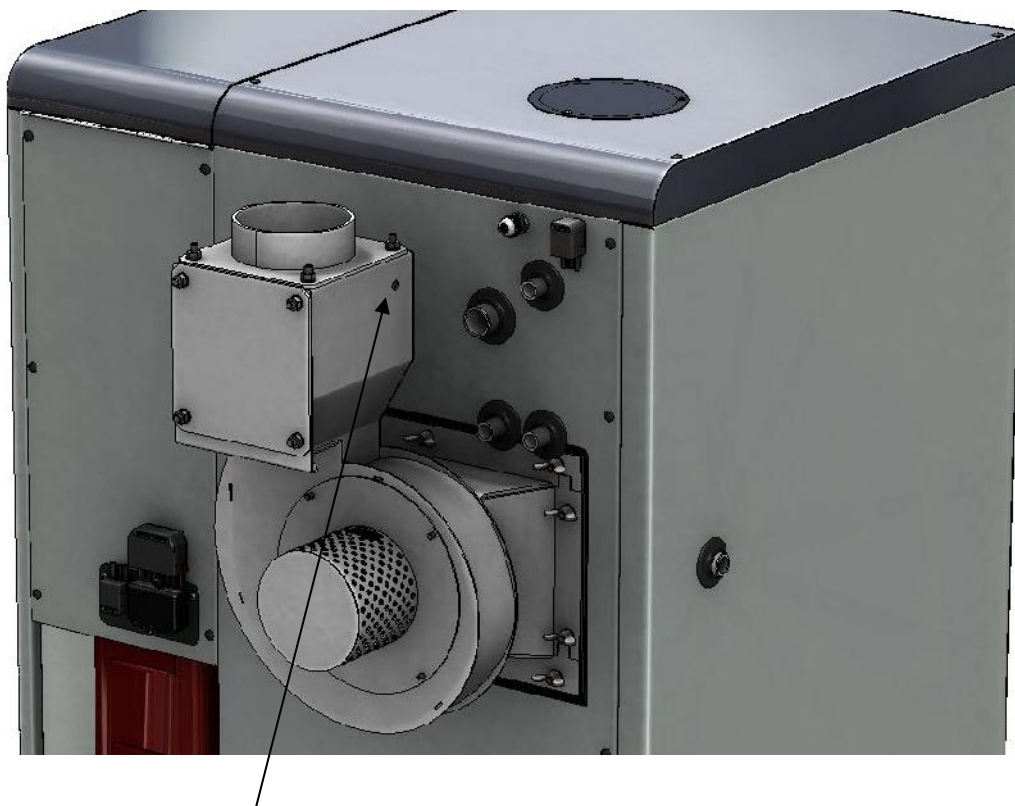

The place where the factory installed flue gas probe

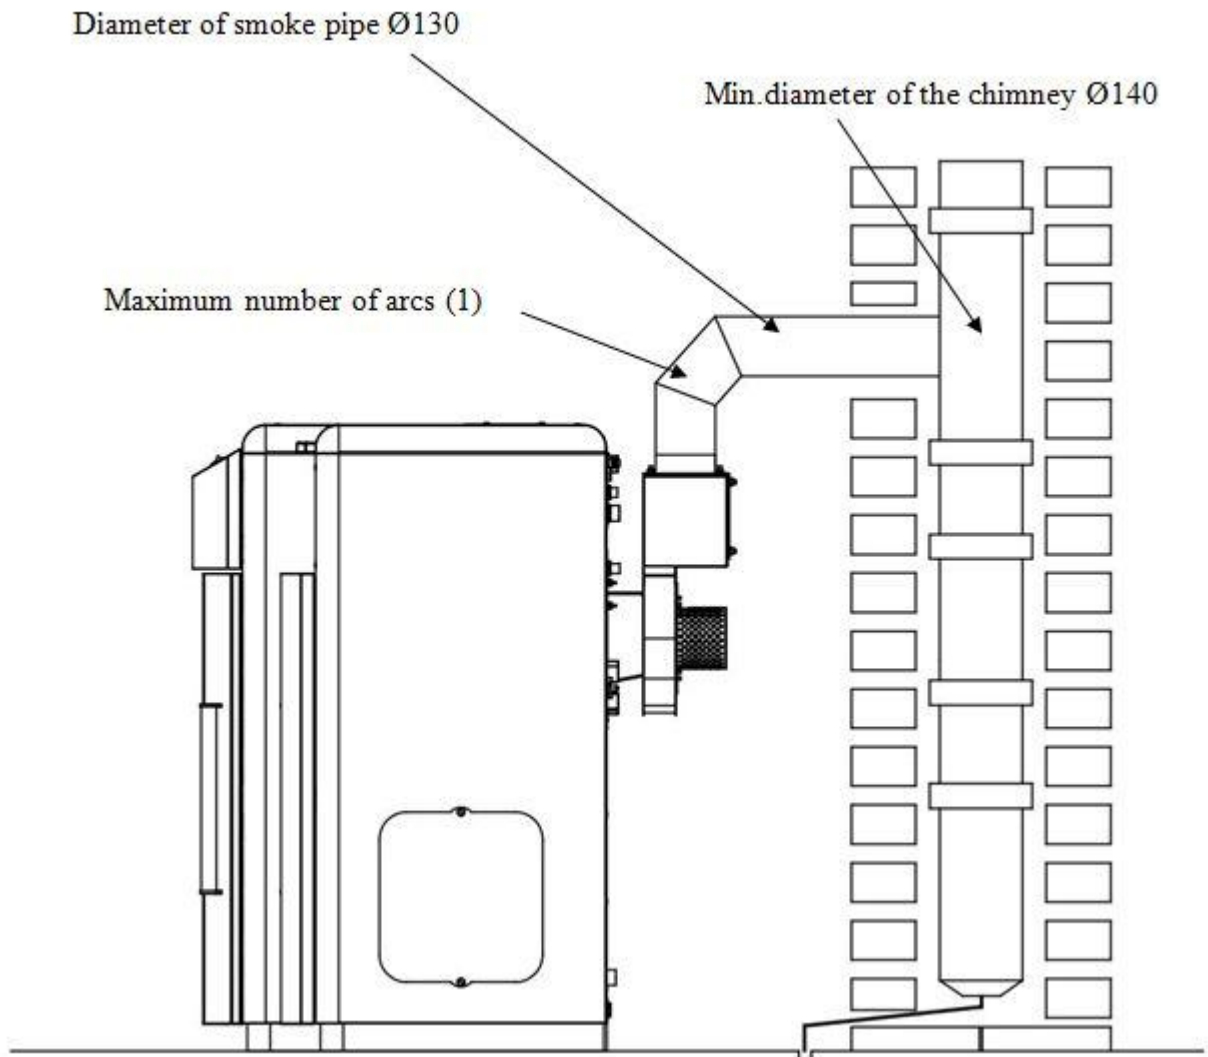



Figure 9. Preview of connection to the chimney and view position on the probe Chimneys

If possible, arcs should be avoided, but if not possible, then the maximum number of arcs is 1. The fume channel from the boiler to the chimney, should desirably be insulated, specially if it has arcs and longer sections. In the housing of the exhausted gas fan, there is the factory assembled flue gases probe. Before commissioning, check whether after transport the probe is still at its proper place, because without a properly installed transducer there is no boiler operation. **Needed chimney draft is 20Pa.**

The chimney itself should be made of ceramic pipes, and around them there should be the insulation of 3- 5cm thickness and the outer layer is of the bricks or special elements. If the chimney is not from ceramic pipes but of bricks, the light opening area of such chimney shall be 30 % higher than the surface of this ceramic pipes chimney.

The chimney must have a door for cleaning and it must be well sealed. Chimney outlet on the roof must be according to certain regulations. There are two cases: if the angle of the roof is less

than 12° and if the roof angle is bigger than 12° . For angle less than 12° the height of the chimney above the roof is 1 m and for the larger than 12° , then look at the sketch.

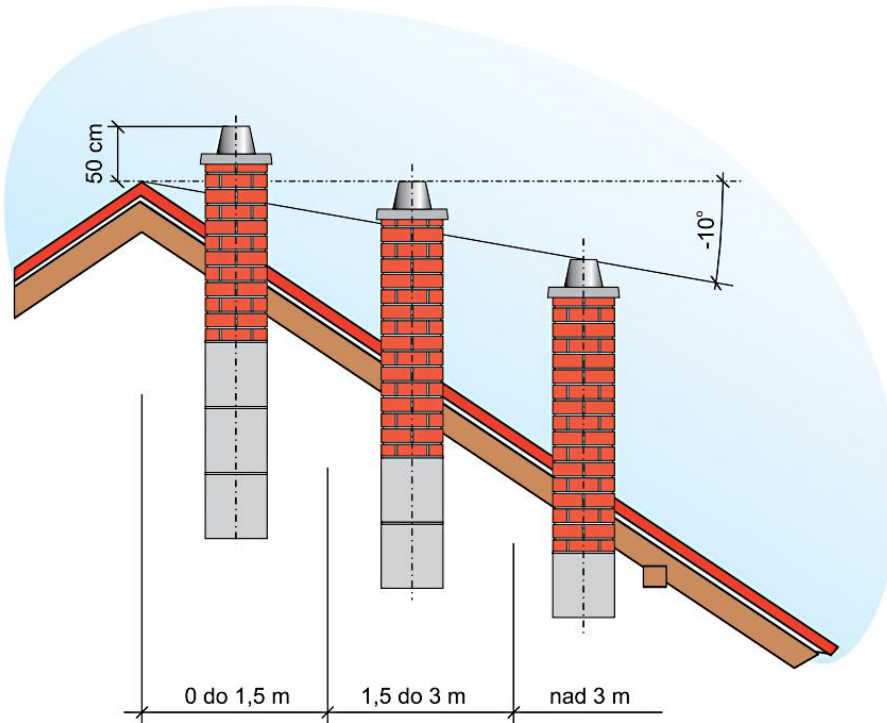

If you think that the chimney is too strong and too much cold air passes through the boiler, at the exit of the boiler there is a valve which can reduce the flow of exhaust gases. The chimney should be cleaned regularly or at least once a year.



If the chimney is not of proper height, cross section, or if it is not enough clean as possible, then the complications in the work of boiler are possible. First, of all it is not possible to achieve the high temperature regime of work, i.e. there is not the maximum operation power, and the consequence of that is the occurrence of condensation which affects the life of the boiler.



Weak/poor chimney is the main reason when during the ignition of the boiler or during the operation there is the appearance of smoke on the upper or lower door, especially at higher fan speeds.

4. Cross-section of COMPACT 25 boiler with a description of the boiler elements

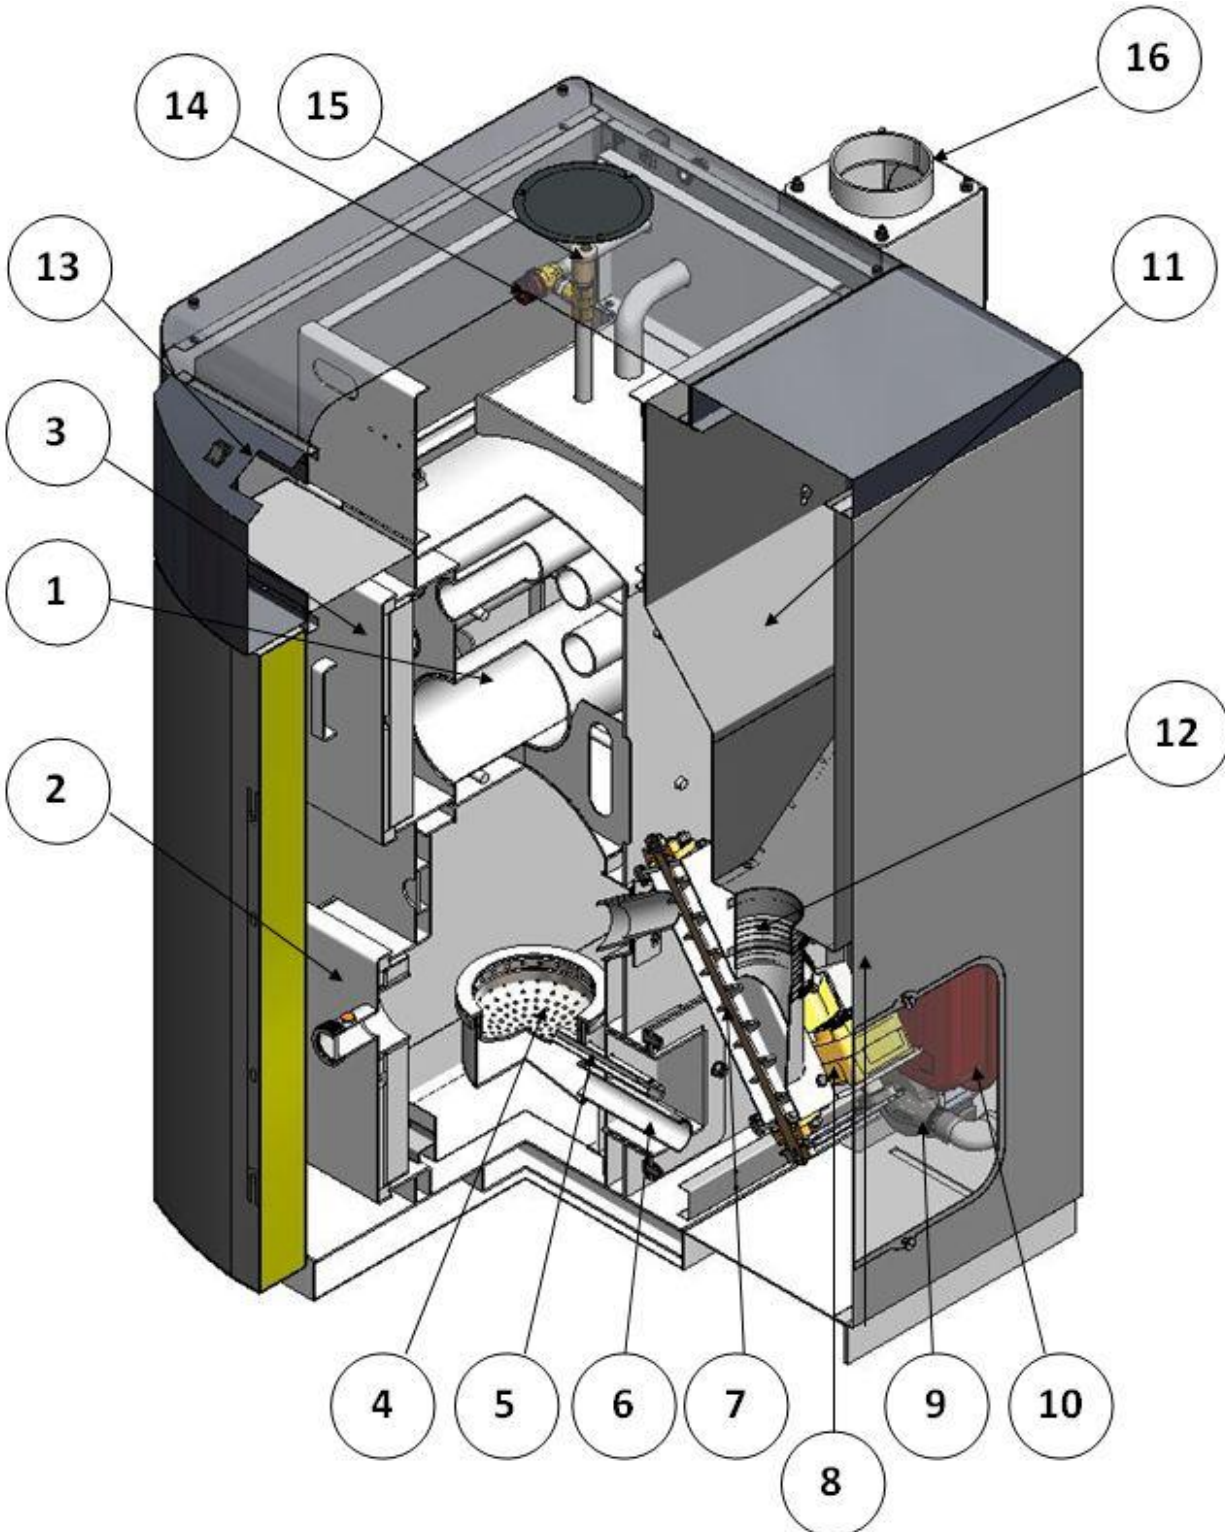


Figure 10. Cross-section of boiler with discription of the boiler elements

Discription (figure 10):

1. Body of boiler (Exchanger);
2. Lower door for cleaning cup of combustion chamber and lower section of body of boiler;
3. Upper door for cleaning upper section (pipe exchanger) of body of boiler;
4. Cup of combustion chamber;
5. Ignition;
6. Pipe for fresh air for combustion;
7. Feeding system;
8. Motor of feeding system;
9. Pump;
10. Expansion vessel;
11. Silos;
12. Flexible connection;
13. Automation;
14. Safety valve;
15. Air vent;
16. Chimneys.

5. Schematic connection of automation

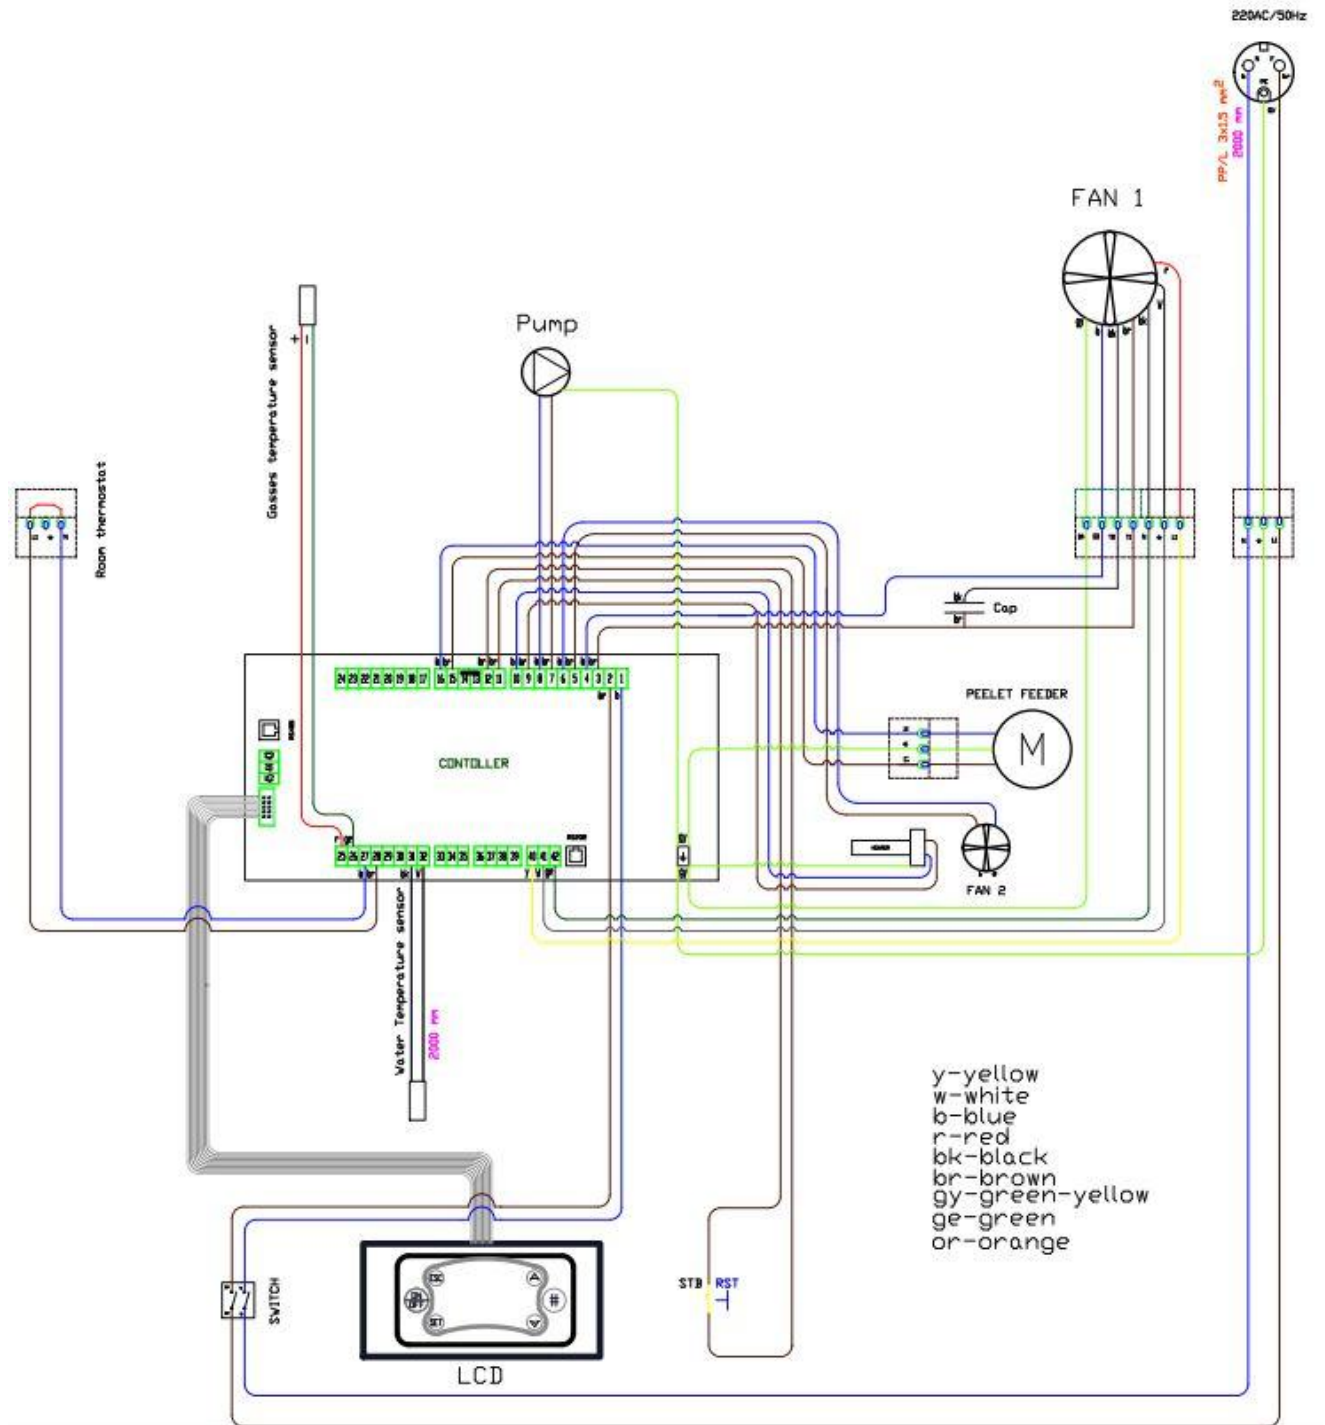


Figure 11. Schematic connection of automation


All lines that are displayed in the intermittent form in the diagram of external connections are the conductors which should be installed by the technician when connecting the external devices onto the automation system of the boiler. All the connections of the additional devices are performed by the technician through connectors located at the rear of the boiler. One three-pole connector serves for the connection of the room thermostat as shown on the label the connector itself.


Seven-pole connector is connected to the power cable, while through another three-pole connector (next to seven-pole) the circulation pump is connected.



For the room thermostats it is important to be battery-powered on, i.e. they should not have any supply of the voltage of 220 V. On the thermostat for the connection NC is used (normally closed contact).

6. Table of technical data

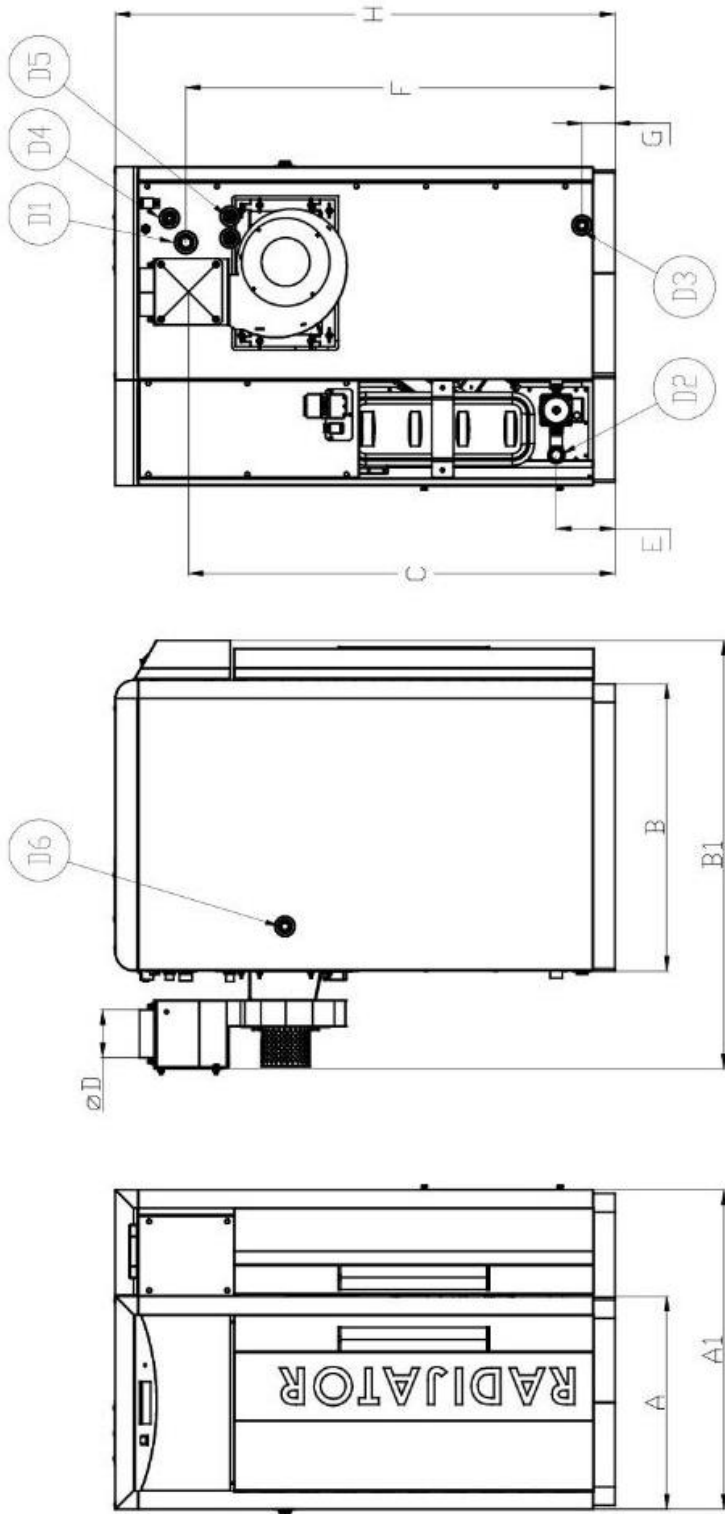

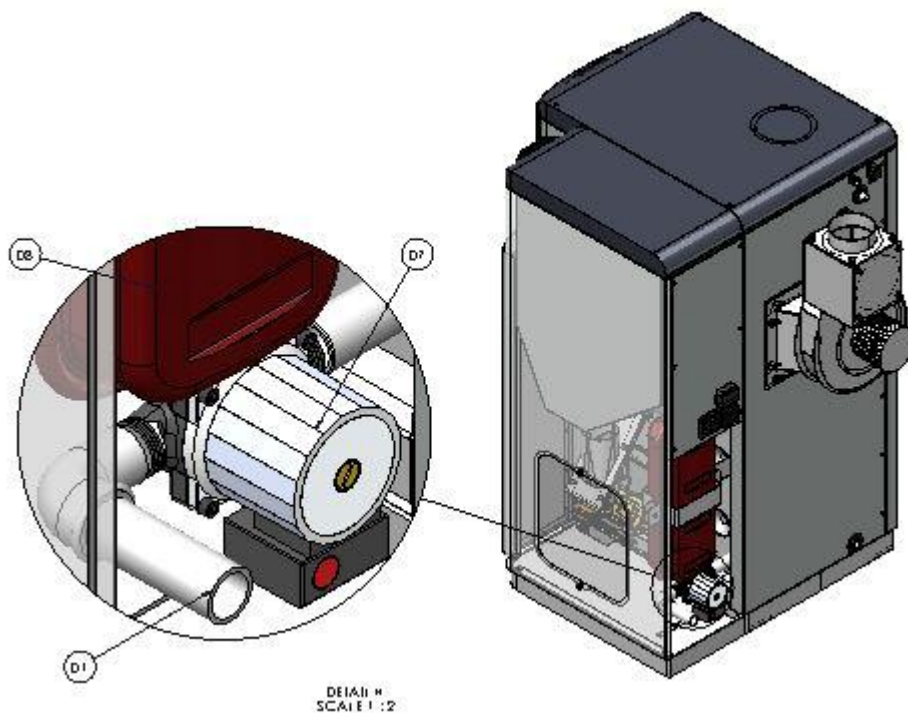

- **D1- connection for hot water from boiler,**
- **D2- connection for cold water from boiler,**
- **D3- connection for filling and emptying boiler,**
- **D4- connection for safety group,**
- **D5- connection of thermal valve insurance swelling,**
- **D6- connection for probe VTO,**

TIP KOTLA		COMPACT 25
CE designation		CE
Class of Boiler according to EN 303-5:2012		5
Working Pressure	bar	3
Test Pressure	bar	4,5
Volume of combustion chamber	L	43,3
Volume of water in the boiler	L	78
Weight	kg	382
Cross section of chimney	mm	130
Necessary chimney draft	mbar/Pa	0,16/16
Boiler temperature (min / max)	°C	60-90
Minimum return temperature	°C	60
Efficiency degree at nominal/minimal thermal power	%	90,25/ 92,14
Nominal Power	kW	22,51
Minimum / Maximum Power of Boiler	kW	6,35/22,51
Carbon monoxide (CO) at a nominal heat power (10%O2)	mg/m3	103,29
Carbon monoxide (CO) at a minimal heat power (10%O2)	mg/m3	138,21
Dust at nominal/minimal heat power (10%O2)	mg/Nm3	17,04/ 19,39
Dimensions		
	A	580
	A1	870
	B	785
	B1	1170
	C	1165
	ØD	130
	E	160
	F	1170
	G	90
	H	1365
Connections for hot water boiler from boiler	D1	1"
Connections for cold water boiler	D2	1"
Connections for filling and emptying boiler	D3	1/2"
Connections for the safety valve and vent pressure	D4	1/2"
Connector for thermal valve insurance swelling VTO	D5	1/2"
Connections for probe VTO	D6	1/2"

*we reserve the right to change

7. Hydraulic scheme

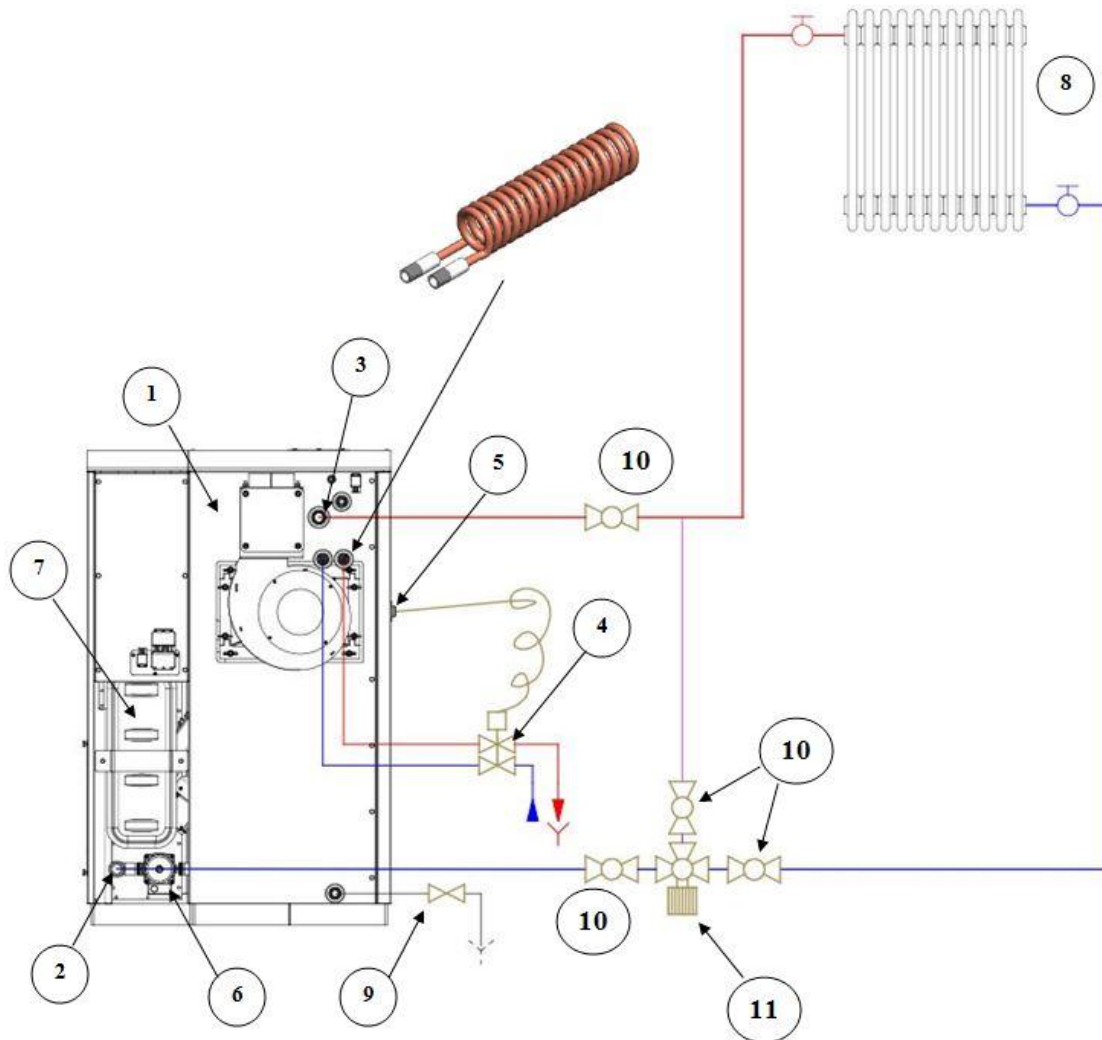


Figure 12. Hydraulic scheme

Discription (figure 12):

1. Boiler COMPACT 25;
2. Connection for cold water boiler;
3. Connection for hot water boiler;
4. Valve of thermal safety by swelling;
5. Probe of valve of thermal safety by swelling;
6. Pump;
7. Expansion vessel 10L;
8. Exchanger;
9. Valve for filling and emptying boiler;
10. Velve;
11. Mixing valve.

NOTE: In assembly of boiler heating stove includes pump and expansion vessel 10l.



In an assembly the boiler should be properly protected against the excessive overpressure and overheating.



For the proper installation the plumber/installer is responsible.



The manufacturer (Radijator inženjering) does not take any responsibility coming from the incorrect installation of the boiler.

The boiler is adjusted according to the default factory hydro installation as in **figure 12.1**.

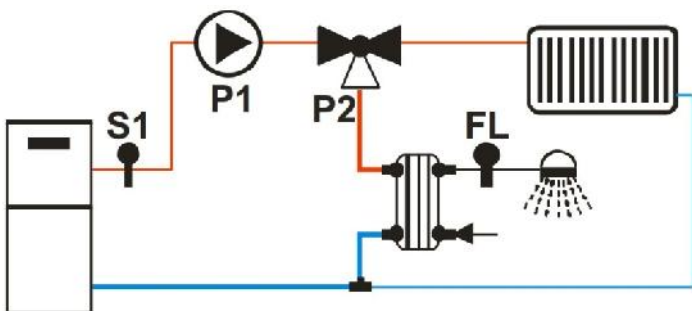


Figure 12.1.

It is obvious that there is only one measuring point S1 and that probe is already positioned. The second probe that is connected onto the connector on the back of the boiler, in this case, remains unused.



We need not assemble the pump P2 which serves for the hot water. The parameter which determines the type of hydro installation inside the automation system is P26 and for this hydro scheme is P26 set to 0.

If we want to use automation to keep the process and the puffer warming up through the appropriate pump, then the hydraulic scheme should be as shown in **figure 12.2**. The point of probe measuring for water temperature in the puffer is marked with S2.

In order to run operation of automation properly for the hydraulic connection and with the, then it is necessary to adjust the parameter P26 onto the value 4.

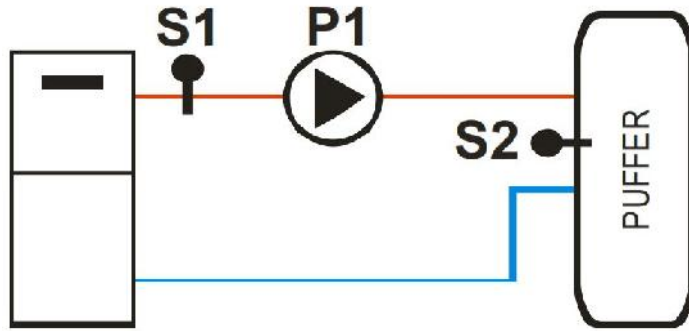


Figure 12.2.

If we want the automation to keep the process of heating the sanitary water through the appropriate pump, then the hydraulic scheme should be as in **figure 12.3**.

In order the automation system should keep the operation of that pump for heating the boiler with sanitary water, then it is necessary to adjust the parameter P26 onto the value 3.

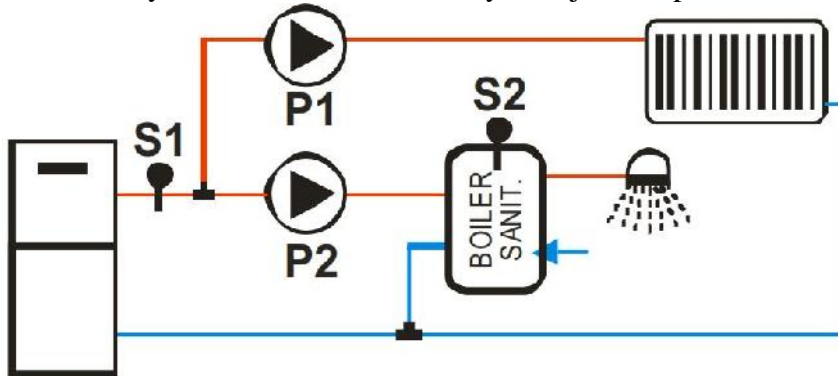


Figure 12.3.

8. Start of boiler operation and cleaning



First Commissioning of the boiler is performed by a Technician who has a Certificate issued by the “Radiator engineering” Co. Training of boiler users is mandatory.

In this way, the person is authorized to notify the customer service in the factory, time when the boiler started its operation in the condition of the boiler at its first firing, while a copy of the commissioning of the boiler in operation is retained. Guarantee and instruction manual are given to the customer. One copy of Guarantee is sent to the manufacturer.

If the guarantee is not filled in, it is not valid.

Only boilers that are operated only by authorized persons subject to technical conditions of complete guarantee of two years.

The following text is intended for the user of the boiler, as a kind of reminder, that if you turn off the boiler (eg for cleaning) will be able to independently run the boiler.



The parameters related to the operation of the boiler and which are available to the user on the display. Other parameters that are called hidden menu should not be changed without the approval of the technical person who has put the boiler into operation or the factory.

8.1 Control panel

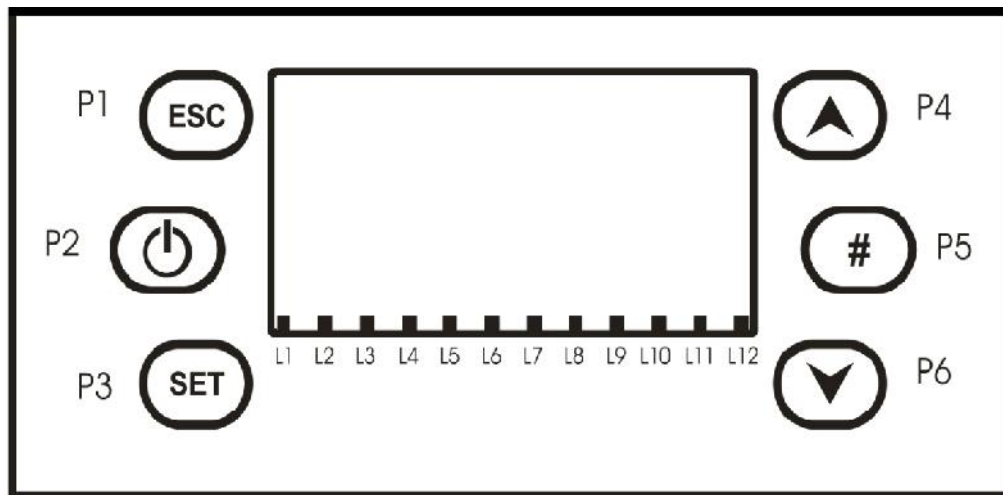


Figure 13. Figure and diagram of Automation display

Buttons:

Function	Description	Button
On/Off	Function Ignition, Extinguishing pushing the button for 3 seconds until the acoustic signal	P2
Unblock	Function unblocked when the system is in Block pushing the button for 3 seconds until the acoustic signal	
Modify Menu and Submenu Values	In modify mode change Menus and Submenus values	P4 P6
Run On Menu and Submenu	In Menu run on Submenu and Menu	
Visualizations	Enter and run in Visualization Menu	
Esc	Function Exit managed pushing the button	P1
Menu	Function Enter in Menu or in a Submenu	P3
Modify	Enter in modify mode into a Menu	
Set	Save data in a Menu	
Reset System Maintenance 2 Function	Reset T67 timer	P5

Led:

Function	Description	Led
Heating Resistance	Led On: Resistance ON	L1
Auger	Led On: Auger in the On interval	L2
Pump	Led On: Pump ON	L3
Valve	Led On: Valve ON	L4
Output V2 configured as Pellet Safety Valve or Load Pellet Engine or Cleaning Pipe Engine	Led On: Output V2 ON	L5
Heating Fan	Led On: Heating Fan ON	L6
Output Aux2 configured as Pellet Safety Valve or Load Pellet Engine or Cleaning Pipe Engine	Led On: Output Aux2 ON	L7
Pellet Level	Led On: lack of pellet	L10
External Thermostat	Led On: contact open	L11
Flowswitch *	Led On: Sanitary Water demand	L12

* Only for plumbing with Flow Switch



NOTE: Diodes L4, L5, L6, L7, L10 and L12 are not in operation in boiler COMPACT 25.

8.2 Short manual for automatic control.

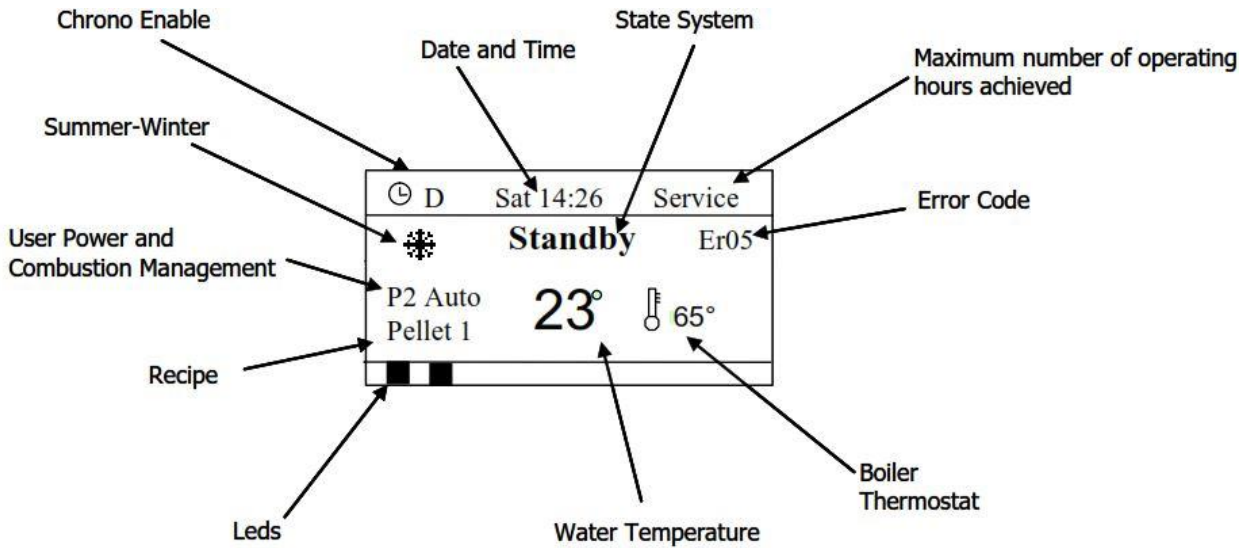


Figure 14. View of LCD screen on display

- **Reading of the current situation.**

Procedure:



Press the key **P6** , after that on the display the Information are shown (Figure 15).

Exhaust Temp	103	Exhaust Temperature [°C]
Boiler Temp	55	Boiler Temperature [°C]
Buffer Temp	55	Buffer Temperature * [°C]
Room Temp	35	Room Temperature ** [°C]
Pressure	1548	Pressure [mbar]
Air Flow	680	Air Flow ***[cm/s]
Auger	2.5	Auger work time [s]
Product Code 395 – 0000		Product Code
FSYSD01000101.0.0		Control Board Firmware Version
FSYSF01000131.0.0		Keyboard Firmware Version

Figure 15. View of status display on pellet stove



NOTE:In the boiler COMPACT 25 the information marked with an asterisk(*) are not shown.

- **Enter the MENU of automation and an explanation of the function.**

Procedure:



Press the key **P3** , after that on the display there is the falling list (**Figure 16**).

MENU		DESCRIPTION
Combustion Power		Menu which allows to modify the combustion power.
Heating Power		Menu to modify the heating power. It is visible only if P06=3 and P44=6 .
Boiler Thermostat		Menu which allows to modify the Boiler Thermostat value.
Buffer Thermostat		Menu which allows to modify the Buffer Thermostat value. It appears only if P26=2, 3, 4 .
Room Thermostat		Menu which allows to modify the Room Thermostat value (if a probe is used). It appears only if A19=1 .
Remote Keyboard		Menu which allows to enable the Room Thermostat of the Remote Keyboard. It appears only if A52>0 .
Chrono	Modality	Menu to select the Chrono's program modality: Daily, Weekly, Week-End or disabled.
	Program	Menu which allows to program 3 period of time to switch on and switch off the system for each program modality.
Recipe		Menu to select the Combustion Recipes. It is visible only if P04 is different to 1.
Time and Date		Menu to set time and date.
Remote Control		Menu to enable the Remote Control SYTX.
Calibration		Menu to modify the Auger's work time or the Combustion Fan speed.
Load		Menu to load the stove's brazier if the system is in Off State.
Summer-Winter		Menu to select the Winter or Summer modality.
Language		Menu to change the languages of the LCD panel.
Keyboard Menu		Menu to set the contrast and light of LCD panel.
System Menu		Menu to enter in the System Menu.

Figure 16. View and explanation of the MENU of automation system

- **Change the adjusted power of boiler COMPACT 25.**

Procedure:



Press the key **P3** , after that the falling list is shown on the screen, where the first

option is marked **Combustion Power**. Again push the key **P3** , after that there is

the view on display (**Figure 17**). With keys **P4** or **P6** you assign the

adjusted power and finally confirm again with key **P3** . Go back to the basic view

of the display (**Figure 16**), by pressing the key **P1** .



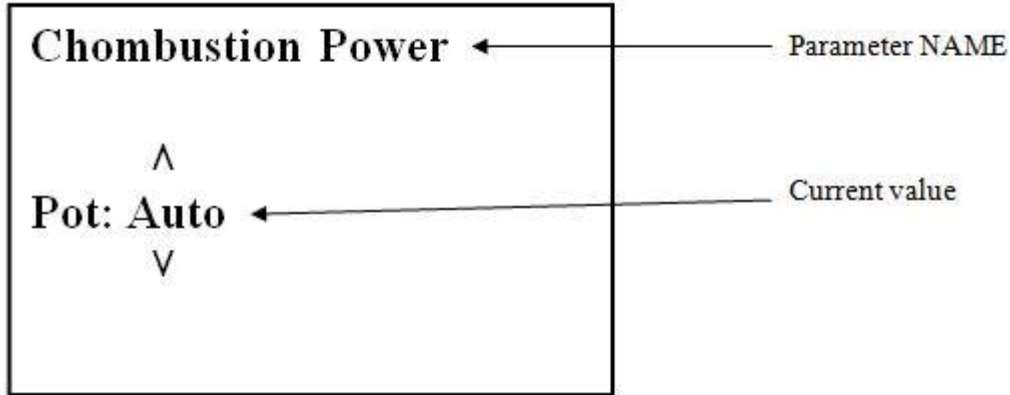




Figure 17. View and explanation of display in option *Combustion Power*




NOTE: In the boiler **COMPACT 25** maximum adjusted power is 6. (Manufacturer's recommendation is to use **AUTO** mode of Power)


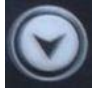

- **Change the assigned temperature of water in boiler COMPACT 25**


Procedure:

Press the key **P3** , after that the falling list is shown on the display, where the first option is automatically marked **Combustion Power**. With Keys **P4** or **P6** 

, you come to the option **Boiler Thermostat**. Confirm again with key


P3  (appears to view a similar view like on **figure 17**), then with keys **P4** or **P6**



  assign the temperature and at the end confirm again with key **P3** .









Go back to the basic view on the display (**Figure 14**), by pressing the key **P1** .

- **Change the precise time and date.**

Procedure:

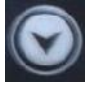Press the key **P3** , after that on the display there is the falling list, where the first option is automatically marked **Combustion Power**. With keys **P4** or **P6**

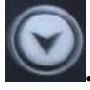 , you come to the option **Time and Date**.

Confirm again with key **P3**  and there is the view on the display Adjusting of time and precise date and through the keys **P4 or P6**   you pass from option to option through the key **P3**  you confirm the command and you change its value again through the keys **P4 or P6**  . When you choose the wished value it is confirmed with key **P3** . To enter or return for a step backwards use the key **P1** .

- **Set programming time for Ignition and Extinguishing of boiler COMPACT 25. (USE THIS OPTION IF YOU HAVE PREVIOUSLY SET THE CORRECT TIME AND DATE)**





As for the time programming, in the option itself there are two sub-options such as: **Modality** and option **Program**.

Modality option serves to select the manner of programming, so, whether you will use the programming on a daily basis, every day separately (**Daily**) (Example: Monday, Tuesday, Wednesday ... Thursday), on a weekly basis (**Weekly**) (Monday to Saturday) , and on weekend basis (**week-end**) (Monday through Friday-and especially from Saturday to Sunday-special). You can totally switch off the option Chrono (**Disible**).

Program option serves for programming of the above options **Daily**, **Weekly** and **Week-End**, ie. adjusting the exact start time and break of operation of the boiler COMPACT 25.

Procedure:

First, you should decide how you wish to program the start time and extinguishing, whether it be daily, weekly or weekend options. If you choose one of the quoted the selection will be done in the following way.

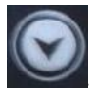Press the key **P3** , after that the falling list is shown on the screen , where the first option is marked at once **Chombustion Power**. With keys **P4 or P6**  , you come to the option **Chrono**. Confirm again with key **P3**  (two options are shown

Modality and Program), then with keys **P4** or **P6**   you come to the


wished option **Modality** and you confirm it with key **P3** . After that, in the sub-menu you come across to the option **Daily**, **Weekly**, **Week-end** and **Disable** (shown in

Figure 18). With keys **P4** or **P6**   choose one of them and confirm with

key **P3** .

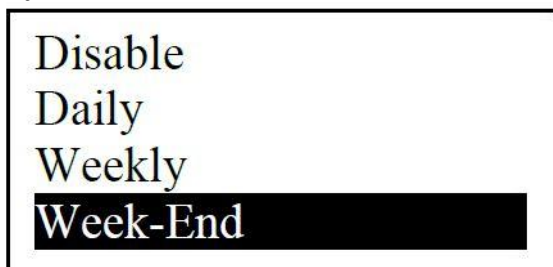



Figure 18. View of display after the selection of the option MODALITY

When you have chosen the manner of programming, automatically you return to the view


on display **Modality** and **Program**. With keys **P4** or **P6**   you pass to the

option **Program** and you confirm with key **P3** .

In this option, you program the correct time of ignition and extinguishing of boiler COMPACT 25 that you previously selected in the option Modality. Examples of programming are shown in **Figures 19, 20 and 21**.

For further passing use the keys **P4** or **P6**  , for confirming the key

P3 , to confirm the selected values confirm with keys **P5** , and for one step

backwards the key **P1** .

Daily	→ Monday	→ Monday
Weekly	Tuesday	ON OFF
Week-End	Wednesday	09:30 11:15 ✓
	Thursday	00:00 00:00
	Friday	00:00 00:00

Figure 19. View of display after selection of the option Daily

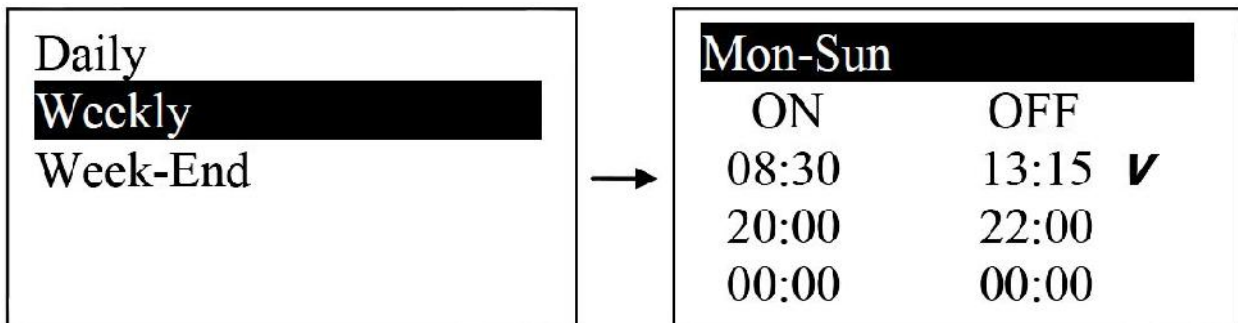


Figure 20. View of display after selection of the option Weekly







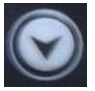






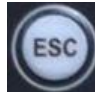
Figure 21. View of display after selection of the option Week-end

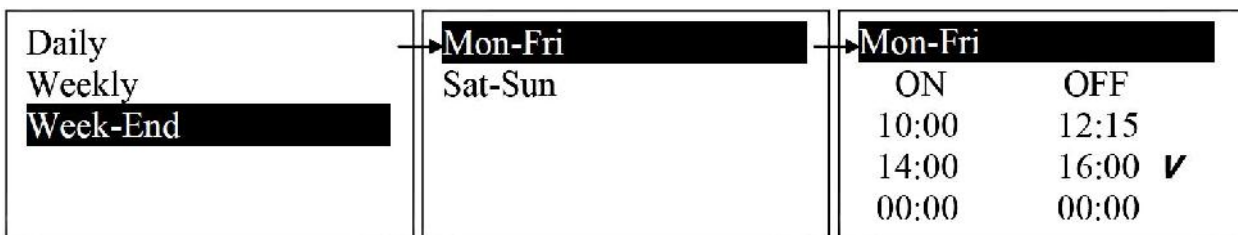8.3 Start of work of Compact 25 boiler heating stove.

- **STEP 1:** Boiler COMPACT 25 connected on hydraulic system.
- **STEP 2:** Infuse a small amount of pellets in the silos and close it.
- **STEP 3:** Switch on the boiler, the switch is positioned on the front side (in the left side in relation to the display).
- **STEP 4:** Initiate feeding system as the first grains of the pellet might fall into the combustion cup / space. *(This procedure can be applied only when the Automation system is in OFF mode (Figure 14 : state of regime))*

Procedure:

Press the key **P3** , then with keys **P4 or P6**   in sub-menu you come to the function **LOAD**, confirm with key **P3** , with keys **P4 or P6**   you pass from **OFF** to **ON**, confirm with key **P3** . By confirming with key the feeder is started, until the first grains of pellet start falling into combustion cup/space.

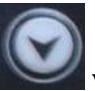After that, also, with keys **P4 or P6**   you pass from **ON** to **OFF**, confirm with key **P3** . The feeder stops working. With key **P1**  exit the sub-menu.

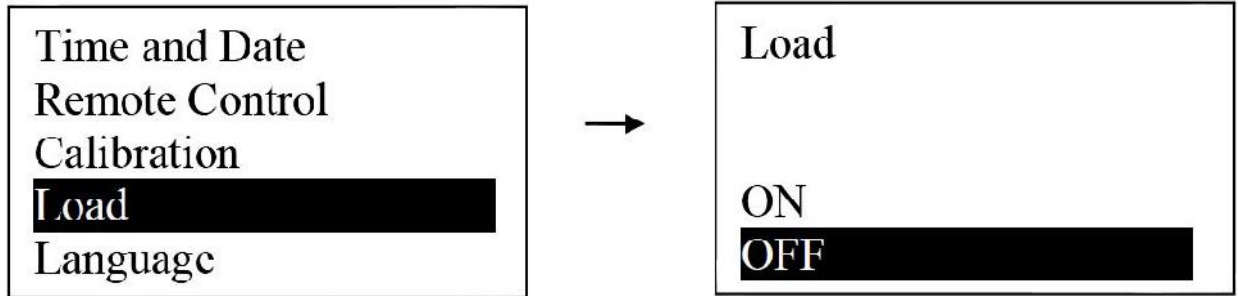


Figure 22. View of display when selecting the function LOAD

- **STEP 5:** Start up of boiler COMPACT 25.
Procedure:



Press the key **P2**, hold pressed for 2-3 seconds until the beep signal. Then on the display there is the text **IGNITION** (Figure 14-State of system). The Boiler Stove started working.

In the conditions when the pellet is according to the standards and when all other requirements are met for chimney and air flow, the combustion process begins in 5 to 10 min.

During the first firing some increased presence of smoke and the sharp smell should be expected until the factory coatings against corrosion end or until the final drying or stove being heated.

The same procedure is used for extinguishing the boiler COMPACT 25, so by a



prolonged pressing of the key **P2** until the beep sound is heard, then on the display is the text **Extinguish**. (Figure 16-State of system), we pass to extinguishing of the boiler COMPACT 25.



NOTE : These are the values measured during certification.

- The room thermocouple (thermostat) can be connected to automation system. In this case, it is important to adjust the room temperature, which is the main parameter for the operation of the boiler COMPACT 25 and water temperature in boiler (70 °C). When the room thermostat is activated, the boiler has the first need to reach the room temperature, under the condition that it is limited by adjusted degree of water temperature in it. There is a possibility that the boiler stops working before the adjusted temperature of the room thermostat, in this case the set temperature of the water in the boiler should be raised, Example to: 70 °C.

Warning: Be sure to make the analysis of the flue gases after the finish of installation of the boiler. Measure the percentage of oxygen (O₂).

8.4 Mistakes during ignition and start of boiler COMPACT 25.

All possible errors in the initial stage of operation, ie. during firing and can, even during the operation, are shown in the display of the automation system. (**Figure 14-** ALARM error).

Errors and explanations are shown in the table.

Er01	Error Safety High Voltage 1. Also with the system Off
Er02	Error Safety High Voltage 2. Only if the Combustion Fan is On.
Er03	Extinguishing for exhaust under temperature
Er04	Extinguishing for water over temperature
Er05	Extinguishing for exhaust over temperature
Er07	Encoder Error. This error can occurs for lack of Encoder signal
Er08	Encoder Error. This error can occurs in case of adjustment problems of rounds number
Er09	Water pressure low
Er10	Water pressure high
Er11	Real time clock error
Er12	Extinguishing for Ignition failed
Er15	Lack of voltage
Er17	Air Flow Regulator Error
Er18	Run out of pellet
Er39	Air Flow Regulator Sensor broken
Er41	Minimum air flow in Check Up not reached
Er42	Maximum air flow Up reached (F40)

All possible problems and stoppage in the operation of this device can be divided into two major groups.

- **Group I.** Stoppage during the first firing and the first firing after purchase of the boiler or the first putting the boiler into operation during the day.
- **Group II.** The delay that occurs when the boiler has already been in operation process , the display is there is a notification on the display (Run Mode) , but after reaching the set temperature and rest mode it loses the continuity of combustion .

Group I

The most common indication on the display related to this type of error is Er12.

During the first firing after the installation of the boiler, for the hydro installation there should follow the instructions from the Section **“Start of Operation of the boiler COMPACT 25”**. Especially, pay attention to the flue outlet (diameter, number of arcs, sealing, ...) as well as to the chimney (diameter , height , insulation , sealing revision openings, dirt in chimney , etc.). If, after the first attempt of firing there is no significant occurrence of flame and serious increase in flue gas temperature, there is a signal on the display that the ignition heater is activated, and yet the boiler goes into extinction phase (Extinguishing). In this case you should check out the following causes:

Possible **cause 1.**

- **Problem 1.** Poor quality of pellets. Pellets are of low power, and increased humidity
- The procedure for troubleshooting of **Problem 1.** Provide the pellet of proved quality and test it.

Possible **cause 2.**

- **Problem 2.** Air temperature (which was brought to the fireplace for firing and burning) is extremely low (below zero).
- The process of resolving the **Problem 2.** Prolonging the time for preheating of heaters for firing t_{02} to the range of 300 - 400 seconds.

Possible **cause 3.**

- **Problem 3.** Mains voltage that is connected onto the boiler is considerably lower than 220- 230V, so the power of the heater is lower.
- The process of resolving the **Problem 3.** Raising the time for preheating heater for firing, t_{02} , to the range of 300 - 400 seconds. If this measure does not work then connect the AC Voltage adapter.

Possible **cause 4.**

- **Problem 4.** The amount of pellets in the combustion chamber is insufficient to put the boiler into operation.
- The process of resolving the **Problem 4.** Possible mechanical problems with pellet conveyor. Check the accuracy of dozer.

Possible **cause 5.**

- **Problem 5.** There are situations in which there is a flame , but by checking the exhaust gases it can clearly be seen that there is not enough pellets for the boiler to pass from the stage of stabilization (Stabilization) into operating mode (Run mode). This occurs because the pellet structure (length, stickiness, the amount of dust, etc.) is such that the time t_{03} of fixed feeding is not sufficient.
- The process of resolving the **Problem 5.** This problem is eliminated by extending the time of fixed feeding, t_{03} . Recommendation is that this time is extended cautiously, first for ten or fifteen seconds, and if that is not enough then for another five seconds and so on. After that, resolving the troubleshooting should be combined with the procedure from the following item.

Possible **cause 6.**

- **Problem 6.** After the fixed phase of feeding (t03) there the flame occurs, but at this stage of t04, during this period it is not possible to pass into the stabilization (Stabilization) , and the flame is becoming weaker so there is a decrease of the temperature of flue gases and shutting down (extinguishing). This problem occurs because of the varying quality of pellets.
- The process of resolving the **Problem 6.** Reduce the time t04. It is recommended that you do it carefully. It is possible to combine this procedure with the solution contained in the previous item.

Possible **cause 7.**

- **Problem 6.** The boiler is connected to the room thermostat. By increasing the set temperature on the room thermostat the boiler does not enter the firing phase (Ignition) and there is not activation of the firing heater.
- The process of resolving the **Problem 7.** Check whether the temperature in the room is really lower than the set temperature. Also check time programming for the room thermostat and finally check the correct functioning of the room thermostat.

Group II

The most common indication on the display related to this type of errors is **Er03**.

Possible **cause 1.**

- **Problem 1.** The boiler COMPACT 25 was fired and in was in the operating mode (Run mode), but it came to the stoppage; and when it stopped again and got the command from for work either from the boiler thermostat or room thermostat. The combustion chamber is, in such situations, full of unburned pellets.
- The process of resolving the **Problem 1.** Check the values of the parameters A26, Th28 and Th06. Maybe there was an accidental changing of their values. Parameter A26 needs to be 1 , the parameter Th06 between 60 and 65, while the parameter Th 28 in any case should for at least two degrees lower than Th06. In such cases parameters should be changed, empty chamber (burning bowl) and then restart the boiler.

Possible **cause 2.**

- **Problem 2.** The boiler COMPACT 25 was ignited, and entered the operating mode (Run mode), but as time goes on there comes to an increasing accumulation of pellets at the bottom of the combustion chamber. As the time goes on the unburned pellet fills the

combustion chamber and a reduction in the flame and the boiler is extinguished.
(Extinguishing).

- The process of resolving the **Problem 1**. Increase the fan power. It is best to increase the fan power in all modes through the function of calibration (Calibration-exhaust fan).

Possible **cause 3**.


- **Problem 2**. Boiler COMPACT 25 works, but in the course of work there comes to a stoppage and a sign is displayed-Modulation, and then to the Safety shutdown (Extinguishing). At the end the display indicates the error Er05.
- The process of resolving the **Problem 3**. This occurs because the flue gas temperature is too high. The most common causes are contamination of the boiler, the chimney is too strong, too strong fans in operating mode, excessive loading of pellets, pellet characteristics, and so on. The delay can be eliminated by adjusting some of the parameters or by increasing parameters for passing the boilers into modulation and safety shutdown, due to flue gases, which are parameters Th07, Th08.

8.5 Maintenance of boiler COMPACT 25.

Boiler COMPACT 25 requires daily and periodic cleaning.

- Daily cleaning also refers to the area of the combustion chamber ie. Combustion cup where by the constant ejection of ash allows a better working of electric heaters for firing and a better combustion ie. A bigger amount of air through the slits in the cup. Also, the ash, even in the course of a day begins to accumulate on the bottom, the space around the combustion space. At the average parameters of combustion of 100 kg of pellets 1 kg of ash produced.
- In every 3 to 4 days it is necessary to clean the space of combustion chamber (**figure 23**). Also it is necessary to clean the deposits on the walls of the firebox. By this we provide a better transfer as one millimeter layer of tar and soot decreases the conductivity by 5%.
- Once in every two weeks it is necessary to open the top cover for cleaning, remove the turbulators and from the whole available part of the boiler remove tar and soot (Figure 23). All that is removed can be picked off through the combustion chamber. Also, at that time, flue gas pipe should be removed from the rear of the boiler as to be cleaned from ashes and soot (**NOTE: Pay attention to the probe for the flue gases when removing the chimney**).

If, during the cleaning in the boiler there appears the condensation it is necessary to collect the condensed matter and the whole boiler inside should be coated by base means for cleaning or else by means of water solution of construction lime. In this way the neutralization of acids is carried out due to condensation.

 ***While maintaining and servicing the boiler, the boiler is to be switched off the power supply.***

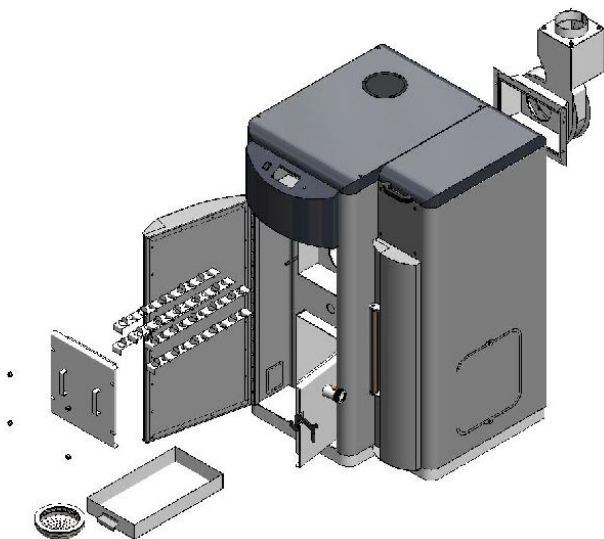




Figure 23. View of elements that are dismantled during the cleaning

 ***In this way the boiler is conserved at the end of the heating season. In this situation, close all openings of the boiler to prevent the circulation of air through the boiler as the moisture can occur in the boiler as well.***

 ***Maintenance of the boiler is one of the most essential factors for the length of working life of the boiler. It is particularly important that the boiler be cleaned when out of operation season and neutralization of acids be done as already described.***

8.6 Name plate.

The nameplate is stuck on a well visible place on the boiler and includes the following (see the image in the item: STICKERS):

1. Tehnical data on sticker:

- Manufacturer (Radijator inženjering)
- Serial number of boiler (example: N°:161216020)
- Year of product (example: 2016)
- Type of boiler (COMPACT 25)
- Nominal power of boiler (22,51kW)
- Heat output range (6,35 – 22,51kW)
- Necessary chimey draft (20Pa)
- Electric voltage (230V)
- Frequency (50Hz)
- Current (3,4A)
- Nominal electrical power (590W)
- Max.extended el.power (200W)
- All.el.power (790W)
- Weight boiler (382kg)
- Quantity of water in boiler (78L)
- Class boiler according to EN 303-5
- Class fuel - pellets (C1)
- Max. pressure (3 bar)
- Max. temperature (90°C)

2. Sticker of importer

3. OEEO

4. Other markings on the boiler



8.7 Declaration.



DECLARATION OF CONFORMITY

UNDER THE DIRECTIVE 2006/42/EC ON MACHINERY
ANNEX II, PART 1, SECTION A.

On behalf of "RADIJATOR Inženjering" d.o.o/ Živojina Lazića Solunca 6; 36000
Kraljevo; Serbia

DECLARES

Own responsibility: **Heating boiler burning pellet production series COMPACT with
rated heating output: COMPACT 25 - 22,51kW.**

meet the requirements of: **DIRECTIVE 2006/42/EC ON MACHINERY (EFFECTIVE
29/06/2006),**

and the requirements of the following directives and regulations:

1. **Directive 2004/108/EC** of the European Parliament and of the Council of 15 December 2004 on the approximation of the laws of the Member States relating to electromagnetic compatibility (Text with EEA relevance) and repealing **Directive 89/336/EEC**;
2. **Directive 2006/95/EC** of the European Parliament and of the Council of 12 December 2006 on the harmonisation of the laws of Member States relating to electrical equipment designed for use within certain voltage limits (codified version) (Text with EEA relevance) and repealed **Directive 73/23/EEC**.

The machine complies with the following EU introduced harmonized standarts:
EN 303-5:2012,

and the following EN and technical requirements: **EN 60730-1.**

Location: Kraljevo
Date: 2016-02-01


Signature:
/Milan Janić, general manager /

8.8 Sticker.

On boiler COMPACT 25 there are stickers identifying the connections as well as labels against the risk of electric shock, stickers for scheme of connections etc.

Labels that indicate connection to the installation:


1. Sticker (Hot water) 32mm x 74mm



2. Sticker (Cold water) 32mm x 74mm



3. Sticker (Hydraulic scheme) 148mm x 210mm

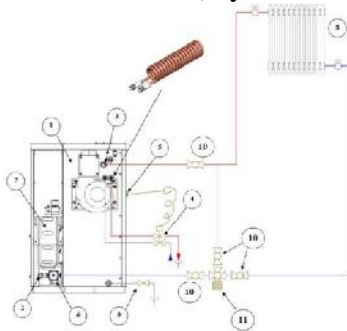

Slika 22. Hidraulički šem

Opis (slika 12):

1. Kotao COMPACT25;
2. Pritiskalica za povratni hladni vodu;
3. Pritiskalica za potisni topli vodu;
4. Ventil termostatskog osiguranja;
5. Sonda ventila termostatskog osiguranja;
6. Cirkulaciona pumpa;
7. Ekspanziona posuda 10l;
8. Izumirjač - radiator;
9. Ventil za osiguranje i pražnjenje;
10. Ventil;
11. Mešni ventil.

Labels that indicate the presence of electricity high voltage and danger:

1. Sticker (Input with low voltage 12V) 60mm x 80mm



2. Sticker (Hazardous voltage - BIGGER) 100mm x 150mm



3. Sticker (Safety electrical connection) 20mm x 30mm



4. Sticker (Presence of voltage)



Labels that indicate warning:

1. Sticker (Exposed Exposed moving parts can cause severe injury) 30mm x 80mm



2. Sticker (Only an approved installer is authorized to start boiler) 65mm x 247mm



3. Sticker (Warning)



4. Sticker (Waste)



Labels with technical data:



Živojina Lazića Solunca br.6
Grđica-36000 Kraljevo
Srbija

N^o 161216020
Compact 25



8



Pressure max	Temp. max
Max. pritisak	Max. temp.
3 bar / 300 kPa	90°C



Živojina Lazića Solunca br.6
Grđica-36000 Kraljevo, Srbija
e-mail: radijator@radijator.rs
www.radijator.rs

N^o: 161216020

Godina/Year: 2016

PROIZVOĐAČ MANUFACTURER	Radijator Inženjering
TIP - MODEL TYPE - MODEL	Compact 25
NAZIVNA TOPLOTNA SNAGA KOTLA NOMINAL HEAT OUTPUT POWER	22.51 kW
PODRUČJE UPOTREBE TOPLOTNE SNAGE HEAT OUTPUT RANGE	6.35 - 22.51 kW
POTREBNA PROMAJA DIMNJAKA REQUIREMENT AIR FLUE	20 Pa
ELEKTRIČNI NAPON VOLTAGE	230 V
FREKVENCIJA FREQUENCY	50 Hz
JACHINA STRUJE CURRENT	3.4 A
NAZIVNA EL. SNAGA NOMINAL ELECTRICAL POWER	590 W
MAX. DODATNA EL. SNAGA MAX. EXTENDED EL. POWER	200 W
UKUPNA EL. SNAGA ALL EL. POWER	790 W
MASA KOTLA MASS OF BOILER	382 Kg
ZAPREMINA VODE U KOTLU VOLUME OF WATER IN THE BOILER	78 L
KLASA KOTLA PO EN 303-5:2012 CLASS OF BOILER ACCORDING TO EN 303-5:2012	5
GORIVO FUEL	C1



8.9 Manufactured



RADIJATOR D.O.O.
Živojina Lazi a Solunca br.6
36000 Kraljevo, Srbija

9. Warranty

1. Co.”Radiator Engineering” covers different warranty periods for different parts (as specified further on) only if the following conditions of guarantee are fulfilled:

- 1.1. Pellet boiler heating stove must be connected to the aforementioned hydraulic schemes of technical instruction , especially pay attention to the safety valves, thermal fuse swelling, mixing valve for protection of the cold portion of boiler or against condensation, the range of work pressure of boiler, r operating temperature of the boiler, the conditions in the boiler room, etc.(see item 3)
- 1.2. Pellet boiler heating stove must be connected to the chimney of prescribed cross-section, characteristics of insulation and height. (see item 3.4)
- 1.3. Flue gas outlet from boiler to the chimney must be constructed according to the technical instructions.
- 1.4. The said electrical connections must be done on the pellet boiler heating stove according to the technical instructions, particularly this refers to the characteristics of the room thermostat, the characteristics of the power supply, which must be within certain limits.
- 1.5. The user must follow the following instructions on how to use and maintain the boiler. (see item 8)

2. Warranty statement

We herewith declare:

- the product has the prescribed and declared quality properties . We are committed, we will, on the request of the buyer, if he timely submits the Request for the repair within the warranty period, do at any expense all repairs, so that the product will operate in accordance with the declared properties,
- that the product is will operate flawlessly within the warranty period if the instructions for the use, installation and operation are respected,
- that in the warranty period will be ready to remove all product failures and keep in stock all the necessary spare parts,
- **warranty period starts from the DATED OF PURCHASE AND LASTS FOR 60 or 72 MONTHS, from the date of manufacture (the date of manufacture is located on the label on the back of the boiler),**
- **60 MONTHS WARRANTY VALID ONLY IF THE BOILER service regularly by the central service “RADIJATOR INŽINJERING”, within the period specified for the same (in text below),**
- **warranty is valid if the warranty card is stamped by the Seller, with the registered date of purchase and the attached Sale Invoice/Bill. IT IS ALSO IMPORTANT TO HAVE THE ORDER FOR COMMISSIONING (certified by the Service).**

- 3. Warranty period of one year applies to the following parts:**
 - all bearings,
 - electric heaters firing.

- 4. Warranty period of two years applies to the following parts:**
 - fan,
 - boiler automation system with safety thermostat and other electric parts,
 - probes for flue gases,
 - the probe for temperature of boiler water,
 - motor gearbox,
 - spirale in feeding system,
 - combustion chamber (combustion cap),
 - ashtrays,
 - turbulators,
 - electrical connectors,
 - insulating materials on doors and openings for cleaning,

- 5. Warranty period does not apply:**
 - if after each heating season the regular servicing is not performed,
 - the replacement of parts in the regular annual maintenance in accordance with the instructions,
 - when failures are made by the purchaser due to improper handling of the product,
 - with mechanical failures made during transport and during use (solid objects),
 - if the product is installed improperly, contrary to the regulations in force in that area,
 - if it is determined that the hydraulic scheme is not done according to the recommendations of the "Radijator inženjering",
 - if the customer was using the product over the declared properties in normal circumstances.

- 6. Warranty period expires:**
 - if it is determined that the defects were removed by the unauthorized persons or unauthorized service,
 - if at repair the original parts were not built in,
 - if the service interval is determined that the heat exchanger of the boiler is not regularly maintained or cleaned,
 - when the warranty period expires.

- 7. When Reporting failures it is necessary to give the following information:**
 - name and type of product,
 - the date of purchase,
 - factory or workshop of the fireplace,
 - A brief description of the fault, or lack of,
 - full address of owner and contact telephone number, e-mail.

8. Regular annual service

Regular service is performed at the end of the heating season in the period from 15.4. to 31.8 and charged by the established price list of the Co. "Radiator Engineering". Service procedure by the technical persons performing regular annual service, which are authorized by the manufacturer for this, including the following operations:



NOTE: The Service Provider is in obligation to inspect all of the following parts (from the list) feeder and exchanger, and if it comes to replacing of any parts of the same, the user receives the above-mentioned warranty and guarantee for another 12 months placed on the body of the boiler (exchanger). The warranty can be extended up to 5 years from the date of commissioning. Service and extension of service can be performed by a person sent by the Central Service of the Co. "Radiator engineering ". For not changed parts, after the servicing work, the service guarantee is not valid.

- dismantling of pellet conveyor from the boiler, checking conveyor and checking bearings and lubricating;
- Bearing must not have difficulty in turning or cracks in the in the housing. Contrarily the bearing is replaced. If it is determined that the damage to the bearing is due to intrusion of solid objects into the pellet carrier (due to user's mistake or the manufacturer of pellet mistake), Co. "Radiator Engineering" shall charge value of the bearing. If the damage to the bearing is due to the withdrawal of the flame into the pellet transporter itself for reasons of poorly set parameters when using the boiler, Co. "Radiator Engineering" shall charge the value of the bearing.
- dismantling of combustion cup on combustion chamber and cleaning the space below combustion cap. Checking condition of combustion cap;
- checking and cleaning probe of flue gases;
- checking and cleaning fan;
- checking the sealing of door;
- check the maintenance of the boiler heat exchanger.
- dismantling and cleaning of chimney and rear side of exchanger of boiler,
- dismantling and cleaning of turbulators and checking condition of turbulators,
- checking condition of safety elements (safety valve and air vent).

GARANTNI LIST / GUARANTEE LIST

Tip kotla / Boiler type

Fabri ki broj / Factory No.

Garantni rok / Guarantee period

60 MESECI/ 60 MONTHS

**Datum proizvodnje /
Date of manufacture**

**Potpis ovlaš enog lica /
Signature of Authorized person**

pe at / stamp

Prodato u firmi / Company of Sale

Adresa / Address

Telefon /

Datum prodaje / Date of Sale

Potpis / Signature

pe at / stamp

*Potroša ima sva prava na osnovu Zakona o zaštiti potroša a ("Sl.glasnik RS", br. erbia62/2014). Garancija ne isklju uje niti uti e na prava potroša a koja proizilaze iz zakonske odgovornosti prodavca za nesaobzirnost robe u ugovoru./ The consumer shall exercise all rights under the Consumer Protection Law ("OJ of RS" No 62/2014). The guarantee does not exclude nor affect the consumer's rights derived from the legal liability of the seller for any lack of conformity of the goods under a Contract.

*Gore navedeno važi za kupce na prostoru Republike Srbije./ The aforementioned applies to purchasers of the Republic of Serbia.